


MACHINE MANUAL

MULTIDECO 20/8

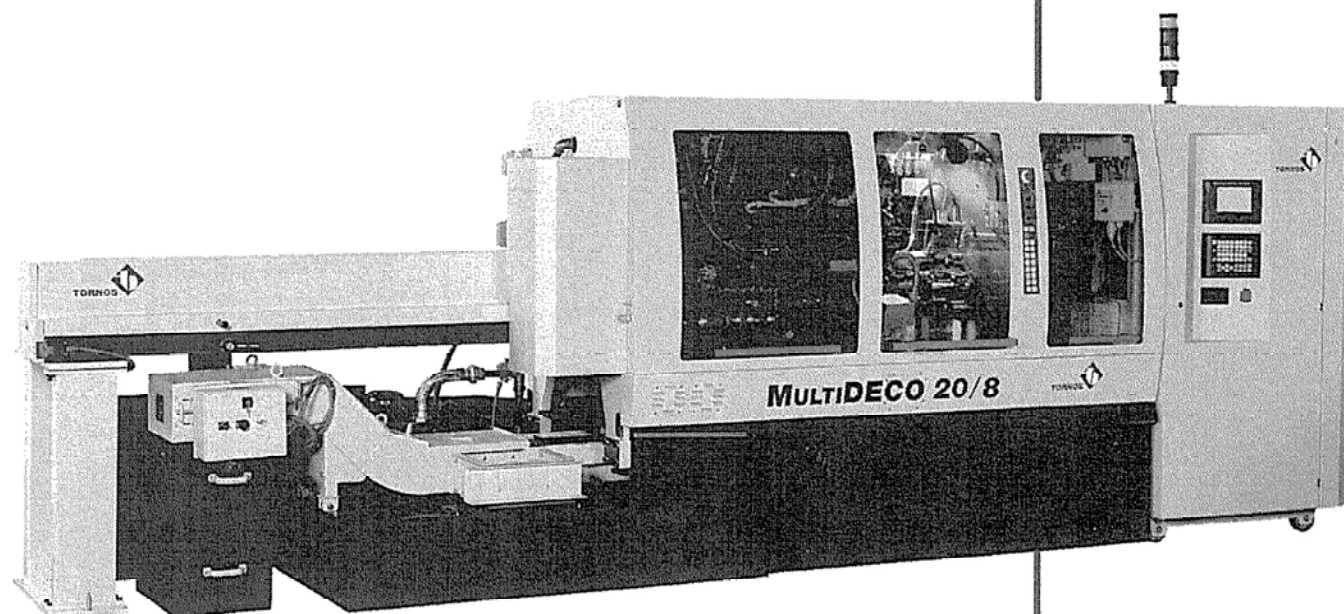


ATTENTION !

**Before handling / operating the machine,
read first the SAFETY REGULATIONS!**

INSTALLATION – OPERATION – MAINTENANCE



MULTIDECO 20/6 & 20/8

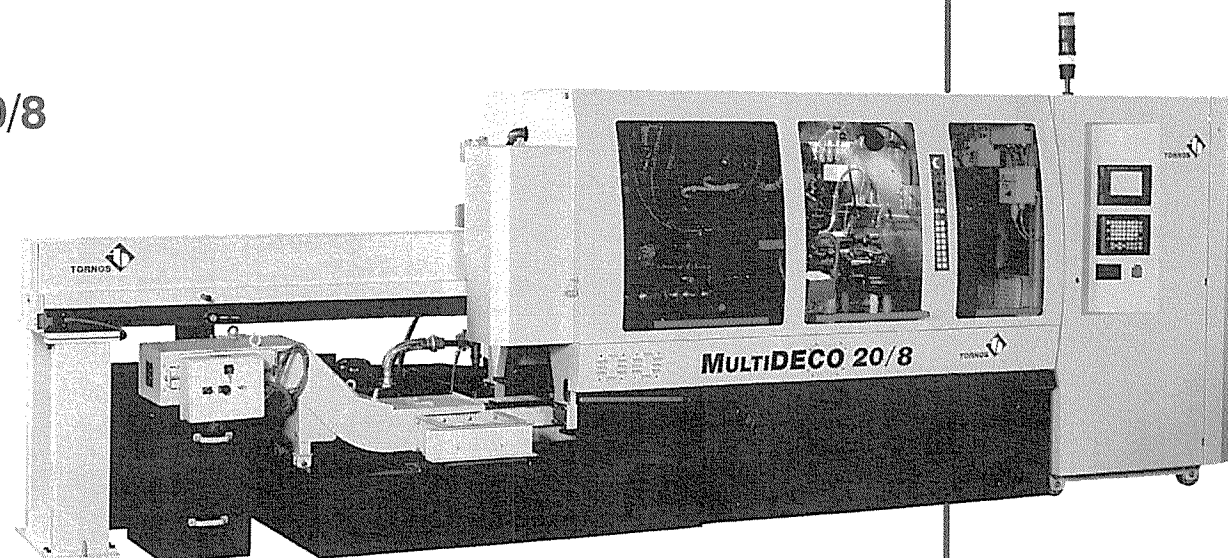

300461 en



ATTENTION !

**Before handling / operating the machine,
read first the SAFETY REGULATIONS!**

Printed in Switzerland
Copyright (c)1999–2001

TORNOS SA
CH-2740 MOUTIER
<http://www.tornos.ch>

TABLE OF CONTENTS

1.	HANDLING AND INSTALLATION	1
1.1	INTEGRAL GUARD AND PANELLING	1
1.2	TRANSPORT – UNPACKING – INSTALLATION	2
1.2.1	Lifting and Handling	2
1.2.2	Unpacking and Cleaning	5
1.2.3	Floor Plan for MULTIDECO 20/6	6
1.2.4	Floor Plan for MULTIDECO 20/8	7
1.2.5	Floor Plan for MSF–522 with MULTIDECO 20/6	8
1.3	INSTALLATION	9
1.3.1	Installation Plan for Standard Machine	9
1.3.2	Surface load	9
1.3.3	Levelling	9
1.4	ELECTRIC INSTALLATION	16
1.4.1	Installation Characteristics	16
1.4.2	Electric Connection to 200 – 240 VAC Mains	17
1.4.3	Electric Connection to 380V – 480VAC Mains	19
1.4.4	Electric Connection to 500VAC Mains	21
1.4.5	Connecting Peripherals	23
1.5	PNEUMATICS INSTALLATION	24
1.6	BARFEEDER INSTALLATION	24

2.	DESCRIPTION OF THE MACHINES	1
2.1	DESCRIPTION OF MULTIDECO 20/6	1
2.1.1	MULTIDECO 20/6 : Main Mechanical Sections and Components (Overview)	3
2.1.2	MULTIDECO 20/6 : Cycle Diagram	4
2.1.3	MULTIDECO 20/6 : Kinematics	5
2.1.4	MULTIDECO 20/6 : Bar Stop	7
2.1.5	MULTIDECO 20/6 : Spindle Drive	7
2.1.6	MULTIDECO 20/6 : Frontwork-Unit Drive and Speeds I, II, III and IV	7
2.1.7	(997573) Pickoff Spindle Drive for MULTIDECO 20/6	8
2.2	DESCRIPTION OF MULTIDECO 20/8	10
2.2.1	MULTIDECO 20/8 : Main Mechanical Sections and Components (Overview)	11
2.2.2	MULTIDECO 20/8 : Cycle Diagram	12
2.2.3	MULTIDECO 20/8 : Kinematics	13
2.2.4	MULTIDECO 20/8 : Bar Stop	15
2.2.5	MULTIDECO 20/8 : Spindle Drive	15
2.2.6	MULTIDECO 20/8 : Frontwork-Unit Drive and Speeds I, II, III and IV	15
2.2.7	(997738) Pickoff Spindle Drive for MULTIDECO 20/8	16
3.	MECHANICAL SETUP OPERATIONS	1
3.1	FILLING VARIOUS TANKS	1
3.2	CHANGING COLLETS AND FEED FINGERS	3
3.3	SETTING CHUCKING FORCE	5
3.4	SETTING CHUCKING FORCE DURING COLLET CHANGE	6
3.5	SETTING STOCK FEED LENGTH AND STOP FOR MULTIDECO 20/6	9
3.6	SETTING STOCK FEED LENGTH AND STOP FOR MULTIDECO 20/8	11

3.7	CENTERING MAIN TOOL SLIDE AND ADJUSTING ITS GIB STRIPS	15
3.8	CHANGING AND TENSIONING TIMING BELTS	17
3.8.1	(997542) Drilling Attachment on MULTIDECO 20/6	17
3.8.2	(997742) Drilling Attachment on MULTIDECO 20/8	17
3.8.3	(997543) Tapping Attachment on MULTIDECO 20/6	19
3.8.4	(997741) Tapping Attachment on MULTIDECO 20/8	19
3.8.5	(997517) Input Encoder on MULTIDECO 20/6	20
3.8.6	(997740) Input Encoder on MULTIDECO 20/8	20
3.8.7	(997537) Main Motor on MULTIDECO 20/6	21
3.8.8	(997739) Main Motor on MULTIDECO 20/8	21
3.8.9	Slides and Tool Feed Units	21
3.9	QUILL OPERATION SETTINGS	23
3.9.1	Setting I : Quill Disengaged	23
3.9.2	Setting II : Synchronized Speed Selected	23
3.9.3	Setting III : Tapping Speed Selected	24
3.9.4	Setting IV : Drilling Speed Selected	24
3.10	MANUAL BAR LOADING	25
3.10.1	Loading With No Bar Diameter Change	25
3.10.2	Loading With Bar Diameter Change	25
4.	MAINTENANCE AND TROUBLESHOOTING	1
4.1	CHANGING BEARINGS	1
4.1.1	(997510) Main Spindles	1
4.1.2	(997534) Input Shaft of MULTIDECO 20/6	5
4.1.3	(997733) Input Shaft of MULTIDECO 20/8	5

4.1.4	Dismounting / Mounting Gearbox Drive Systems for Troubleshooting	7
4.1.5	(997536) Drill Drive on MULTIDECO 20/6	9
4.1.6	(997774) Drill Drive on MULTIDECO 20/8	9
4.1.7	(997535) Tap Drive on MULTIDECO 20/6	11
4.1.8	(997732) Tap Drive on MULTIDECO 20/8	11
4.1.9	(997538) Quills of MULTIDECO 20/6	15
4.1.10	(997734) Quills of MULTIDECO 20/8	15
4.1.11	(997524) Camshaft of MULTIDECO 20/6	18
4.1.12	(997713) Camshaft of MULTIDECO 20/8	18
4.1.13	(997526) Indexing Shaft of MULTIDECO 20/6	22
4.1.14	(997715) Indexing Shaft of MULTIDECO 20/8	22
4.1.15	(997523) Interlocking Lever of MULTIDECO 20/6	25
4.1.16	(997712) Interlocking Lever of MULTIDECO 20/8	27
4.2	CHANGING BALLSCREWS AND GUIDERAILS	31
4.2.1	(997745, 997747, 997748, 997749, 997751) X–Axis Slides 1 to 7 of MULTIDECO 20/6	31
4.2.2	(997747, 997748, 997749, 997751, 997766, 997767) X–Axis Slides 1 to 9 of MULTIDECO 20/8	31
4.2.3	(997750, 997752, 997753) Z–Axis Slides 1 to 5 of MULTIDECO 20/6	37
4.2.4	(997750, 997752, 997753) Z–Axis Slides 2 to 6 of MULTIDECO 20/8	37
4.3	CHANGING BALLSCREW AND BEARINGS	43
4.3.1	(997540) Tool Feed Unit	43

5.	AUXILIARY EQUIPMENT	1
5.1	TOOL COOLANT AND CHIP EVACUATION SYSTEMS	1
5.1.1	Coolant Tank and Pump	1
5.1.2	(997560) Standard Coolant System	2
5.1.3	Chip Conveyor	4
5.1.4	Guidelines on the Use of Cutting Fluids	4
5.1.5	Cleaning Coolant Flowrate Sensor	5
5.2	(997271) STANDARD PNEUMATICS	8
5.2.1	Cleaning Air Filter Cartridge	10
5.3	(997600) AUTOMATIC CYCLIC LUBRICATION FOR MULTIDECO 20/6	12
5.4	(997759) AUTOMATIC CYCLIC LUBRICATION FOR MULTIDECO 20/8	12
5.4.1	Cycle-Lubricated Components Indicated and Listed for MULTIDECO 20/6	13
5.4.2	Cyclic Lubrication Maintenance	13
5.4.3	Cycle-Lubricated Components Indicated and Listed for MULTIDECO 20/8	17
5.5	(997582) CIRCULAR LUBRICATION	19
5.5.1	Circular Lubrication Maintenance	19
5.6	CIRCULAR LUBRICATION UNIT	20
5.6.1	Scope	20
5.6.2	Safety Instructions	20
5.6.3	Pump Operation	21
5.6.4	Pump Installation	21
5.6.5	Pump Startup	21
5.6.6	Maintenance	21
5.6.7	Major Pump Components	23
5.6.8	List of Parts for Pump Unit 4458948	27

6.	INDEX	1
6.1	MACHINE ELEMENTS AND SYSTEMS	1
6.2	SPARE PARTS	2

TECHNICAL DESCRIPTION



MULTIDECO 20/8



300499 E



ATTENTION !

**Before handling / operating the machine,
read first the SAFETY REGULATIONS!**

Printed in Switzerland
Copyright (c)1999-2001

TORNOS SA
CH-2740 MOUTIER
<http://www.tornos.ch>

TABLE OF CONTENTS

1.	TECHNICAL CHARACTERISTICS	1
1.1	MAIN OPERATIONAL DATA	1
1.2	GENERAL REQUIREMENTS	1
1.3	MOTORS	1
1.3.1	Spindle Drive Motor	1
1.3.2	Camshaft Drive Motor	1
1.3.3	Coolant Pump Motor (50 Hz)	1
1.4	OVERALL DIMENSIONS	1
1.4.1	Floor Plan: Machine with 3m-Barguide	2
1.5	KINEMATICS	3
1.6	AXIS TRAVEL	5
1.7	MACHINING POSITIONS	5
1.8	NOISE MEASUREMENTS	6
2.	OPERATIONAL DATA FOR STANDARD MUTLTIDECO 0002	1
2.1	FRAME & ENCLOSURE	1
2.2	GEAR BOX	1
2.3	SPINDLE HOUSING & CARRIER	1
2.4	MACHINE ENCLOSURE	1
2.5	LUBRICATION	2
2.5.1	Automatic Cyclic Lubrication	2
2.5.2	Continuous Lubrication with Oil Recuperation	2

2.6	COOLANT SYSTEM	2
2.6.1	Guidelines on Use of Cutting Fluids	2
2.7	PNEUMATICS	3
2.8	MISCELLANEOUS STANDARD FEATURES	3
2.9	PNC-DECO NUMERICAL CONTROL	4
2.10	Z2 AXIAL CARRIAGES	6
2.11	CROSS & COMPOUND CARRIAGES	6
2.12	MOTORS & AMPLIFIERS	7
2.12.1	Motor, Amplifier & Drive for Tapping	7
2.12.2	Motor, Amplifier & Drive for Drilling	7
2.12.3	Motor, Amplifier & Drive for Pickoff Spindle	7
2.13	PICKOFF SPINDLE	7
3.	STANDARD ALTERNATIVES	1
3.1	0010 STANDARD SPINDLES	1
3.2	0018 STANDARD COLLET & FEED TUBES	3
3.3	0030 STANDARD FEED STOP	3
3.3.1	Standard Stop & Cams	3
3.4	0050 STANDARD & SPECIAL LANGUAGES	3
3.4.1	Operating Instructions	3
3.5	0100 STANDARD & SPECIAL VOLTAGES	4
3.6	0120 STANDARD & SPECIAL COLORS	4
3.7	0300 STANDARD BARFEEDING	4
3.7.1	Standard Barguides	4
3.7.2	Standard Barfeed Fittings	5

4.	OPTIONS	1
4.1	0350 SPINDLE SPEED & STOP CONTROL OPTIONS IN POSITIONS 2–5 FOR ONE-SPEED LATHE	1
4.2	0800 OPTIONAL PERIPHERALS	1
4.3	1700 PICKOFF SPINDLE OPTIONS	2
4.4	2000 OPTIONAL SPECIAL-PURPOSE EQUIPMENT	2
4.5	2500 OPTIONAL CHIP CONVEYOR	3
4.6	2600 OPTIONAL FRONTWORK UNIT FITTINGS	3
4.7	2700 FRONTWORK ATTACHMENT OPTIONS	3
4.8	2750 GOLTENBODT FRONTWORK COLLET CHUCK OPTIONS	4
4.8.1	Collet Chucks	4
4.8.2	Reamer Holders	4
4.9	2850 SCHAUBLIN 62 FRONTWORK COLLET CHUCK OPTIONS	4
4.9.1	Collet Chucks	4
4.9.2	Reamer Holders	4
4.10	TOOLHOLDER OPTIONS	5
4.10.1	3200 Cutoff Toolholder	5
4.10.2	3400 Precision Skiving Toolholder	5
4.10.3	3500 Preset Toolholders	5
4.11	5000 MISCELLANEOUS OPTIONS	5
4.12	7000 OPTIONAL ACCESSORIES	6
4.12.1	Chucking Collets 9012E	6
4.12.2	Feed Fingers	6
4.12.3	Chucking Collets SK 9012 BZ	6
4.12.4	Rear Barguides	6
4.13	7060 OPTIONAL STOCK TUBE ADAPTERS	7
4.14	7100 OPTIONAL PICKOFF SPINDLE COLLETS	7
4.15	8880 MISCELLANEOUS OPTIONS	7

USER INTERFACE OPERATION



MULTIDECO 20/6
MULTIDECO 20/8
MULTIDECO 26/6

300423 E



ATTENTION !

**Before handling / operating the machine,
read first the SAFETY REGULATIONS !**



Printed in Switzerland
Copyright (c)1999–2001

TORNOS SA
CH-2740 MOUTIER
<http://www.tornos.ch>

1.	PRECAUTIONARY NOTES BEFORE OPERATION	1
2.	USER INTERFACE	1
2.1	NC KEYBOARD	3
2.2	CONTROL PANEL	5
2.2.1	Main Pushbuttons	6
2.2.2	Mode Selector	7
2.2.3	Axis / Channel Selectors	8
2.2.4	Other NC Buttons	9
2.2.5	Setting Mode / Key Switch	11
3.	BASIC SEQUENCE FOR STARTING THE MACHINE	1
3.1	TURNING MAIN SWITCH ON / OFF	1
3.2	POWER ON / OFF	1
4.	ALARM ORGANIZATION	1
4.1	ALARM TYPES	1
4.2	DISPLAY ALARMS	2
4.3	PMC ALARMS	3
4.3.1	Clear PMC Alarms	3
4.3.2	PMC Alarm Classes Display and Progression	3
4.3.3	PMC Alarm Class Effects	4
4.4	NC ALARMS	4
4.4.1	Clear NC alarms	4
4.5	EMERGENCY STOP	5

5.	ALARMS LISTED	1
5.1	MACHINE (PMC) ALARMS	1
5.2	MACRO ALARMS	2
5.3	NC ALARMS	3
5.3.1	Program Errors (P/S Alarms)	3
5.3.2	Absolute Pulse Coder (APC) Alarms	6
5.3.3	Servo Alarms	8
5.3.4	Overtravel Alarms	11
5.3.5	Overheat Alarms	11
5.3.6	Serial Spindle Alarms	11
5.3.7	PNC DECO Alarms	13
6.	BASIC OPERATION	1
6.1	DELETE / DOWNLOAD / CONVERT PROGRAM	1
6.2	DISPLAY LIST OF PROGRAMS FROM NC MEMORY	2
6.3	CORRECT TOOL GEOMETRY & WEAR	3
6.3.1	Hard & Soft Keys for Offset Editing	4
6.4	OPEN / CLOSE MACHINING DOORS	5
6.4.1	Machining Door Locking	5
6.4.2	Machining Door Unlocking	5
7.	MANUAL OPERATION OF MACHINE FUNCTIONS	1
7.1	REFERENCE AN AXIS	1
7.2	AUTO REFERENCE ALL AXES	1
7.3	OVERRIDE, STOP & RESTART SPINDLES	2
7.3.1	Override S1S2S3 Spindle Speed	2

7.3.2	Turn Spindles Off / On	2
7.4	OVERRIDE, STOP & RESTART AXES	3
7.5	JOG AXES	3
7.6	OPEN / CLOSE COLLET	4
7.7	COOLANT CONTROL & MONITORING	5
7.8	AUXILIARY M-FUNCTIONS FOR MDI	6
7.9	SPINDLE ROTATION MDI CONTROL	9
8.	AUTO(MATIC) MODE	1
8.1	START / STOP PROGRAM EXECUTION	1
8.2	DISPLAY AXIS POSITION	1
8.3	EDIT BATCH PRODUCTION	2
8.4	EDIT BATCH PRODUCTION	2
8.5	INTERRUPT PART PROGRAM FOR INSPECTION	3
8.5.1	Interrupt AUTO Cycle with CYCLE STOP for Inspection	3
8.5.2	Interrupt AUTO Cycle over M01	4
8.5.3	Interrupt AUTO Cycle over STOP-AT-TIME	5
8.5.4	Interrupt AUTO Cycle over END-OF-TABLE for Inspection	6
8.5.5	Interrupt AUTO Cycle with RUN FORWARD for Inspection	6
8.6	SETTING MODE	7
8.6.1	Switch to SETTING Mode during Program Execution	7
8.6.2	Start a Programm with SETTING Mode	8
8.7	ADJUST FEEDRATE OVERRIDE OVER M150	9
8.8	FEED BARS	10
8.9	WHAT TO DO IF MACHINE STOPS IN MID-CYCLE?	11

9.	OPERATION OF OPTIONS	1
9.1	PART CATCHER & EJECTOR MDI CONTROL	1
9.2	SENSOR MDI CONTROL	2
9.2.1	M-Codes for Laser Sensor MDI Control	3
9.2.2	M-Codes for Mechanical Sensor MDI Control	3
10.	CUSTOMER PAGES	1
10.1	CHECK PROGRAM NO	1
10.2	SPINDLE CARRIER	2
10.2.1	Spindle Carrier Position	2
10.2.2	Correct Spindle Carrier	3
10.3	FRAME DISPLAY FOR AXIS POSITION	4
10.4	STATE AXIS	5
10.5	Z26 TORQUE LIMIT FOR PART PICKOFF	6
10.6	TOOL LIFE MANAGEMENT	7
10.6.1	Enter Tool Wear Variables	7
10.6.2	Tool Change	9
10.6.3	Initialize Tool Wear Variables	10
10.6.4	Download / Upload Tool Wear Variables over RS-232	11
10.7	CONFIGURATE TOOL SUPPORT OFFSETS	12
11.	SPECIAL FUNCTIONS	1
11.1	ENABLE / DISABLE WRITE PARAMETER (PMC)	1

INTERFACE REQUIRE- MENT FOR CHIP CON- VEYOR

MULTIDECO 20/6
MULTIDECO 20/8
MULTIDECO 26/6

300433 E



ATTENTION !

**Before handling / operating the machine,
read first the SAFETY REGULATIONS!**

300433 E – 08/01



Printed in Switzerland
Copyright (c)1999–2000

TORNOS SA
CH-2740 MOUTIER
<http://www.tornos.ch>

Chap. /1

TABLE OF CONTENTS

1.	GENERAL DESCRIPTION	1
2.	CONNECTION TO THE MACHINE	1
2.1	ELECTRICAL CONNECTION TO THE MACHINE	1
2.2	COMPOSITION OF THE CONNECTION SOCKET	4
3.	FUNCTIONAL DESCRIPTION OF THE INTERFACE	1
3.1	POWER SUPPLY	1
3.2	EMERGENCY STOP	2
4.	ELECTRICAL DESCRIPTION OF THE INTERFACE	1
4.1	CONTROL SIGNALS MACHINE ÷ CONVEYOR	2
4.2	CONTROL SIGNALS CONVEYOR ÷ MACHINE	2
5.	INSTALLATION OF THE CHIP CONVEYOR	1
5.1	PLAN D'ENCOMBREMENT MULTIDECO 20/6 & 20/8	2
5.2	PLAN D'ENCOMBREMENT MULTIDECO 26/6	3
6.	DOCUMENTATION	1

OPTIONS & THEIR TOOLING



MULTIDECO 20/6 & 20/8 300466 E



ATTENTION !

**Before handling / operating the machine,
read first the SAFETY REGULATIONS !**

Printed in Switzerland
Copyright (c) 1999–2001

TORNOS SA
CH-2740 MOUTIER
<http://www.tornos.ch>

TABLE OF CONTENTS

1.	PICKOFF SPINDLE 30.25 (OPTION 1720)	1
1.1	PICKOFF SPINDLE DATA	1
1.2	SAFETY REQUIREMENTS FOR PICKOFF SPINDLE	1
1.3	PICKOFF SPINDLE SETUP JOBS	2
1.3.1	Changing Pickoff Spindle	2
1.3.2	Pickoff-Spindle Chucking Force	3
1.3.3	Pickoff Spindle Thru-Coolant for MULTIDECO 20/6	3
1.3.4	Pickoff Spindle Thru-Coolant for MULTIDECO 20/8	4
1.3.5	Pickoff Spindle Lubrication	4
1.3.6	Pickoff Spindle Electrics & Hydraulics	4
1.3.7	Pickoff Spindle Startup Inspection	4
1.4	PICKOFF SPINDLE INSPECTIONS, MAINTENANCE & TROUBLESHOOTING	4
1.4.1	Pickoff Spindle Inspection & Maintenance Schedule	5
1.4.2	Pickoff Spindle Troubleshooting	5
1.5	PICKOFF SPINDLE DIAGRAMS & ASSEMBLY DRAWINGS	6
1.5.1	(20.00.04.03) Electric Diagram for Pickoff Spindle Collet Opening	6
1.5.2	(997565) Backwork Space Requirement	7
1.5.3	(217716) Pickoff Spindle Configuration for MULTIDECO 20/6	8
1.5.4	(217822) Pickoff Spindle Configuration for MULTIDECO 20/8	9
1.5.5	30.25.08.00 24.5mm–Dia. Pickoff Spindle for MULTIDECO 20/6	10
1.5.6	30.25.12.00 24.5mm–Dia. Pickoff Spindle for MULTIDECO 20/8	11
1.5.7	30.25.09.00 Splined Shaft & Alignment for Pickoff Spindle on MULTIDECO 20/6 & 20/8	12
1.5.8	30.25.10.00 Pickoff Spindle Thru–Coolant Joint for MULTIDECO 20/6	13

1.5.9	30.25.13.00	Back Thru–Coolant Joint for Pickoff Spindle on MULTIDECO 20/8	14
1.5.10	30.25.14.00	Front Thru–Coolant Joint for Pickoff Spindle on MULTIDECO 20/8	15
1.5.11	(217097)	Pickoff Spindle Hydraulic Unit for MULTIDECO 20/6 20/6 & 20/8	16
1.5.12	30.25.99.02	Pickoff Spindle Hydraulics Diagram: Collet Opening for MULTIDECO 20/6 20/6 & 20/8	17
1.6		SPARE PARTS FOR PICKOFF SPINDLE ON MULTIDECO 20/6	18
1.7		SPARE PARTS FOR PICKOFF SPINDLE ON MULTIDECO 20/8	19
2.		SYNCHRONIZED 1DEGREE-BROACHER	1
2.1		BROACHER DATA FOR MULTIDECO 20/6	1
2.2		BROACHER DATA FOR MULTIDECO 20/8	2
2.3		SAFETY REQUIREMENTS FOR BROACHER	2
2.4		BROACHER INSTALLATION & STARTUP	3
2.4.1		Mounting Broacher & Tools	3
2.4.2		Broacher Lubrication	3
2.4.3		Broacher Startup Inspection	3
2.5		BROACHER INSPECTIONS & MAINTENANCE	4
2.6		BROACHER DIAGRAMS & ASSEMBLY DRAWINGS	5
2.6.1	(997581)	Broacher Configuration for MULTIDECO	5
2.6.2	(997724)	Broacher Configuration for MULTIDECO 20/8	6
2.6.3	(217719)	Broaching Head Gr.0 for MULTIDECO 20/6	7
2.6.4	(240109)	Broaching Head Gr.0 for MULTIDECO 20/8	8
2.6.5	(217720)	Internal Broach Holder	9
2.6.6	33.13.04.00	External Broach Holder	9
2.6.7	33.15.03.00	Drive Shaft	10
2.7		SPARE PARTS FOR SYNCHRONIZED BROACHER	11

3.	FRONTWORK MILLING ATTACHMENT GR.1 (OPTION 2010)	1
3.1	SAFETY PRECAUTIONS	1
3.2	FRONTWORK MILLER DATA	1
3.3	SAFETY REQUIREMENTS FOR FRONTWORK MILLER	2
3.4	FRONTWORK MILLER INSTALLATION & STARTUP	2
3.4.1	Mounting Frontwork Miller	2
3.4.2	Sleeve, Spacers & Small Miller-Holder Shaft	2
3.4.3	Lubricating Frontwork Miller Attachment	3
3.4.4	Bevel Gear of Frontwork Miller	3
3.4.5	Frontwork Miller Startup Inspection	3
3.5	FRONTWORK MILLER INSPECTIONS, MAINTENANCE & TROUBLESHOOTING	3
3.5.1	Frontwork Miller Inspection & Maintenance Schedule	4
3.5.2	Frontwork Miller Troubleshooting	4
3.6	FRONTWORK MILLER DIAGRAMS & ASSEMBLY DRAWINGS	5
3.6.1	(217820) Frontwork Miller Configuration for MULTIDECO 20/6	5
3.6.2	(240032) Frontwork Miller Configuration for MULTIDECO 20/8	6
3.6.3	35.09.04.00 Bevel Gear R= 0.267	7
3.6.4	35.09.07.00 69mm–OD Frontwork Miller Head	8
3.6.5	35.09.30.00 Frontwork Miller Spindle for MULTIDECO 20/6	9
3.6.6	35.09.33.00 Frontwork Miller Spindle for MULTIDECO 20/8	10
3.6.7	35.09.31.00 Alternative for Rotary Milling Attachment	11
3.6.8	35.09.32.00 Drive Shaft for Frontwork Miller	12
3.6.9	35.09.99.03 Components for Cutter Pack	13
3.6.10	(997605) Oil Mist Lubrication	14
3.7	SPARE PARTS FOR FRONTWORK MILLING ATTACHMENT	15

4.	POLYGON & THREAD MILLING ATTACHMENT (OPTION 2100) FOR MULTIDECO 20/6 & 20/8	1
4.1	POLYGON & THREAD MILLING ATTACHMENT DATA	2
4.2	SAFETY REQUIREMENTS FOR POLYGON & THREAD MILLING ATTACHMENT	2
4.3	INSTALLATION & STARTUP FOR POLYGON & THREAD MILLING ATTACHMENT	3
4.3.1	Gearbox	3
4.3.2	Gear Wheel Couple	3
4.3.3	Fitting Polygon Attachment in Positions 2 or 3	3
4.3.4	Polygon Head	5
4.3.5	Miller Adjustment	6
4.3.6	Lubrication	6
4.3.7	Startup Inspection	6
4.4	INSPECTIONS & MAINTENANCE	6
4.5	DIAGRAMS & ASSEMBLY DRAWINGS FOR POLYGON & THREAD MILLING ATTACHMENT	7
4.5.1	(217718) Polygon & Thread Milling Attachment Configuration	7
4.5.2	(31.03.08.00) 2–Blade Miller	8
4.5.3	(31.03.09.00) 3–Blade Miller	8
4.5.4	(31.03.12.00) 4–Blade Miller	9
4.5.5	(31.03.21.00) 2 / 3–Blade Miller	9
4.5.6	(31.03.11.00) Thread Miller	10
4.5.7	(20.08.24.02) Insert Blank	10
4.5.8	(31.03.13.00) Sharpening Spindle	10
4.5.9	(31.22.11.00) Cardan Shaft	11
4.5.10	(31.22.12.00) Gearbox	12
4.5.11	(31.22.14.00) Gears for Ratio 2:1	13
4.5.12	(31.22.15.00) Gears for Ratio 1:1	13
4.5.13	(31.22.16.00) Gearbox Fixing Flange	14
4.5.14	(31.22.13.00) Polygon Head	15
4.6	SPARE PARTS FOR POLYGON & THREAD MILLING ATTACHMENT	16

5.	SPINDLE SPEED & STOP CONTROL	1
5.1	(997595) ONE–SPEED & BRAKE SPINDLE	1
5.1.1	Fitting Stop / Speed Control Cams for One-Speed & Brake Spindle	5
5.1.2	Maintenance & Repairs for One-Speed & Brake Spindle	6
5.1.3	Greasing Bearings / Ballscrews	10
5.2	SPARE PARTS FOR SPINDLE SPEED & STOP CONTROL	10
6.	(997308) ADDITIONAL TANK	1
6.1	(997306) 35bar–Pump	1
6.1.1	(216874) 80bar–Pump	1
6.1.2	(997307) Filter	1
6.1.3	(217556) Cooler	1
6.1.4	Alarm 2040: Fault Additional Tank	1
6.2	OPERATING HP COOLANT MOTOR–PUMP UNIT	8
6.2.1	Startup	8
6.2.2	Setting Pressure	8
6.3	(997305) TRANSFER PUMP + P 35 BAR	10
6.4	(997307) FILTER (ADDITIONAL TANK)	10
6.5	ADDITIONAL TANK ALARM CONTROL	11
6.5.1	Additional Tank Alarm Control Interface	11
6.5.2	Additional Tank Alarm Control Operation	12
6.5.3	General Operating Steps for Additional Tank Alarm Control	16
6.5.4	Additional Tank Alarms	17

7.	BARGUIDES	1
7.1	(261–0304) 3M–BARGUIDE	1
7.2	(261–0308) 4M–BARGUIDE	1
7.2.1	Barguide Description	1
7.2.2	Dismounting Stock Reel Tubes	1
7.2.3	Guiding Tubes and Endpieces	2
7.2.4	Feed Tube Adapters	2
8.	(261/3–2540) MAGNETIC CHIP SEPARATOR	1
8.1	MULTIDECO 20/6 FLOOR PLAN WITH BARGUIDE OR BARFEEDER TORNOS MSF 522/6 .	2
8.2	MULTIDECO 20/6 FLOOR PLAN WITH BARGUIDE OR BARFEEDER IEMCA SIR 25/6	3
8.3	MULTIDECO 20/8 FLOOR PLAN WITH BARGUIDE OR BARFEEDER TORNOS MSF 522/8 .	4
8.4	MULTIDECO 20/8 FLOOR PLAN WITH BARGUIDE OR BARFEEDER IEMCA SIR 25/8	5
9.	261/3–2710 (997548) FIXED DRILLING ATTACHMENT ON FRONTWORK UNIT	1
9.1	(261/3–2610) GOLTENBODT MODULAR 40 FIXTURE WITH ESX 25 & 32 TOOLHOLDING COLLET	1
9.2	(261/3–2630) SCHAUBLIN 62 FIXTURE WITH ESX 25 & 32 TOOLHOLDING COLLET	2
10.	261/3–2720 LIVE DRILLING ATTACHMENT ON FRONTWORK UNIT	1
10.1	(261/3–2610) GOLTENBODT MODULAR 40 FIXTURE WITH ESX 25 & 32 TOOLHOLDING COLLET	1
10.2	(261/3–2630) SCHAUBLIN 62 FIXTURE WITH ESX 25 & 32 TOOLHOLDING COLLET	2
11.	(240614) ECCENTRIC DRILLING ATTACHMENT	1
11.1	SAFETY REQUIREMENTS FOR ECCENTRIC DRILLING ATTACHMENT	1

12.	(997617) FETTE F1 X 12 & () F12 X 139 ROLLING DIE HEAD WITH RESET	1
13.	(997624) PAFIX 35 – 2056 TAPPING HEAD	1
14.	RECESSING ATTACHMENT	1
14.1	GENERAL	1
14.2	SAFETY REQUIREMENTS FOR RECESSING ATTACHMENT	1
14.3	TECHNICAL DATA	2
14.4	STRUCTURE DE BASE	2
14.5	RECESSING HEAD	3
14.6	MAINTENANCE WORKS & INTERVALS	9
14.7	TROUBLESHOOTING	9
14.8	ASSEMBLED DRAWINGS	9
14.8.1	(33.57.02.00) Locking Rod for Recessing	10
14.8.2	(33.57.03.00) Longitudinal Locking Device with Vernier	11
14.8.3	(33.57.04.00) Toolholder ø 20	11
14.8.4	(33.57.05.00) Eccentric Reamer–Holding Sleeve 0.6–Ø12	12
14.8.5	(33.57.07.00) Eccentric Reamer–Holding Sleeve 0.4–Ø10	12
14.8.6	(33.57.06.00) Locking Rod for Long Turning	13
14.8.7	(33.57.00.A0) Configuration Drawing for MultiDECO 20.6	14
14.8.8	(33.57.00.B0) Configuration Drawing for MultiDECO 20.8	16
14.8.9	(33.57.08.00) Recessing Head (i = 1:2)	18
14.9	SPARE PARTS FOR RECESSING ATTACHMENT	19

15.	INDEX	1
15.1	INDEX: MACHINE ELEMENTS & SYSTEMS	1
15.2	INDEX: SPARE PARTS	4