

# Varispeed-606PC3

## INSTRUCTION MANUAL

ULTRA-COMPACT ALL-DIGITAL LOW-NOISE INVERTER (VS-606PC3)

MODEL : CIMR-PCA2, CIMR-PCE2 (230V 3-PHASE SERIES)  
CIMR-PCAB, CIMR-PCEB (240V SINGLE-PHASE SERIES)  
CIMR-PCA4, CIMR-PCE4 (460V 3-PHASE SERIES)

---

Upon receipt of the product and prior to initial operation, read these instructions thoroughly, and retain for future reference.

---



*Table of Contents*

**1. READ THIS FIRST... 1-1**

---

If you are in a hurry... 1-2  
How to use this manual 1-4  
Symbols and terms you should know 1-6  
What's in the box 1-8  
Identifying the parts 1-8  
Handling the inverter 1-9  
Checking the name plate 1-10

**2. INSTALLING THE INVERTER 2-1**

---

What you need for wiring 2-2  
Choosing a location to mount the inverter 2-6  
Mounting the inverter 2-7  
Cable gland 2-12  
Wiring the inverter 2-15  
    Removing the terminal cover of enclosed  
    wall-mounted type (NEMA1) 2-15  
    Removing the front cover or the bottom cover of water  
    and dust tight type (NEMA4) 2-16  
    Standard wiring 2-17  
    Wiring the main circuits 2-18  
    Main circuit terminals 2-21  
MCCBs (Molded-case circuit breakers) and MCs  
(Magnetic contactors) 2-21  
Surge suppressors 2-23  
Using input noise filters 2-24  
Using output noise filters 2-27  
Grounding the inverter 2-28  
Wiring the control circuits 2-29  
Replacing the terminal cover, the front cover or the bottom cover 2-32

**3. BASICS: A HANDS ON INTRODUCTION ..... 3-1**

---

Mounting and removing the digital operator ..... 3-2

    Mounting the digital operator ..... 3-3

    Removing the digital operator ..... 3-4

Digital operator key summary ..... 3-5

    Ⓐ MODE DISPLAY LEADS ..... 3-6

    Ⓑ DISPLAY ..... 3-7

    Ⓒ PROGRAM KEYS ..... 3-8

    Ⓓ RUN COMMAND KEYS ..... 3-9

First operation test ..... 3-10

Changing the program ..... 3-11

Doing a forward/reverse check ..... 3-12

Running and stopping ..... 3-13

Changing the acceleration/deceleration time ..... 3-14

    Setting the acceleration time ..... 3-15

    Setting deceleration time ..... 3-17

Driving the motor from the digital operator ..... 3-19

Restoring the factory settings ..... 3-22

Setting for operation from the control circuits ..... 3-23

**4. USING THE INDICATING COVER ..... 4-1**

---

Mounting the indicating cover ..... 4-1

Doing a test run ..... 4-3

LED displays ..... 4-4

*Table of Contents*

**5. SETTING UP APPLICATIONS . . . . . 5-1**

---

    Using the password . . . . . 5-2  
        Constants that can be set in the drive mode . . . . . 5-4

    Adjusting the frequency setting . . . . . 5-5  
        Setting the bias . . . . . 5-5  
        Setting the gain . . . . . 5-7

    Calibrating a frequency/current meter . . . . . 5-9

    Setting a lower frequency for long wiring . . . . . 5-10

    Remote operation example . . . . . 5-12  
        A heavy-duty motor of non-standard voltage, frequency . . . 5-12

    Motor rated current setting . . . . . 5-20



<b>6. SELECTED APPLICATIONS .....</b>	<b>6-1</b>
Before doing selected applications ... ..	6-2
Entering the program mode .....	6-2
Initializing before new settings .....	6-4
Selecting the operation mode .....	6-5
Quick reference table for selected applications .....	6-7
<i>Password</i> .....	6-8
<i>Operation mode selection</i> .....	6-9
<i>4-step speed change</i> .....	6-11
<i>S-curve pattern accel/decel</i> .....	6-13
<i>Motor torque adjustment</i> .....	6-15
<i>Jog operation</i> .....	6-18
<i>Accel/decel time and patterns</i> .....	6-19
<i>Output frequency control (gain/bias)</i> .....	6-20
<i>Electronic thermal overload</i> .....	6-22
<i>Multifunction analog output monitor</i> .....	6-24
<i>Output frequency limit</i> .....	6-26
<i>Motor stall prevention</i> .....	6-27
<i>Full-range automatic torque boost</i> .....	6-29
<i>Multifunction contact input</i> .....	6-30
<i>Multifunction photocoupler output</i> .....	6-33
<i>DC injection braking</i> .....	6-34
<i>Frequency/current meter calibration</i> .....	6-35
<i>Overtorque detection</i> .....	6-37
<i>Carrier frequency</i> .....	6-39
<i>Speed agreed signal output</i> .....	6-40
<i>Prohibited frequency control</i> .....	6-41
<i>Reduction of machine vibration and shock</i> .....	6-43
<i>Speed search</i> .....	6-44
<i>Operation during momentary power loss</i> .....	6-46
<i>Automatic reset and restart</i> .....	6-48
<i>Accel/decel hold</i> .....	6-50
<i>Slip compensation</i> .....	6-51
<i>Local/remote selection</i> .....	6-52
<i>UP/DOWN command</i> .....	6-53

*Table of Contents*

<b>7. QUICK REFERENCE</b> .....	<b>7-1</b>
First functions: no-00 to no-19 .....	7-2
Second functions: no-20 to no-29 .....	7-5
Third functions: no-30 to no-59 .....	7-7
Initial settings for motor rated current .....	7-11
<b>8. TROUBLESHOOTING</b> .....	<b>8-1</b>
How to avoid faults .....	8-1
Resetting the inverter .....	8-3
Monitoring faults .....	8-3
Clearing faults .....	8-4
When to call for service .....	8-5
Motor faults table .....	8-6
Troubleshooting .....	8-7
Stalling .....	8-8
List of protection features .....	8-9
<b>APPENDIXES</b> .....	<b>9-1</b>
Appendix 1: Maintenance .....	9-1
Appendix 2: High voltage test .....	9-4
Appendix 3: Options and peripheral units .....	9-5
Appendix 4: Specifications for the VS-606PC3 Series .....	9-9

