

SEKITEC KM-Series

KM-6A

CONTROL SYSTEM : FANUC 12M,15M

OPERATION MAINTENANCE MANUAL

SEKITEC CORPORATION
No. 25, Shinanomachi,
Shinjuku-ku, Tokyo,
Japan.
Fax : 03-351-9377
Tel. : 03-351-9571

CONTENTS

1.	MAIN FEATURES	1-1
2.	SPECIFICATIONS	
	2-1. Specifications	2-1
	2-2. The control system	2-2
3.	MACHINE LOCATION	
	3-1. Machine location	3-1
	3-2. Foundation	3-1
	3-3. Leveling the machine	3-2
4.	PRELIMINARY NOTES	
	4-1. Table dimensions	4-1
	4-2. The spindle nose	4-2
	4-3. Tool changing	4-4
	4-4. Stylus	4-5
	4-5. Daily check procedure	4-6
	4-6. Power On/Off procedure	4-8
5.	MACHINE OPERATION	
	5-1. Emergency stop	5-1
	5-2. Reference point return	5-1
	5-3. Spindle operation	5-2
	5-4. Positioning of the axes	5-4
	5-5. Control switches and lamps	5-5
	1. Pendant + Control box	5-6
	- Alarm situation	5-6
	- General operation	5-7
	- Override operation	5-8
	- Jog operation	5-9
	- Handle operation	5-10
	- NC operation	5-10
	- Tracing operation	5-12
	- Digitizing operation	5-14
	- Spindle control	5-15
	2. Spindle control board	5-16
	3. Cabinet control panel	5-17
6.	MAINTENANCE	
	6-1. Preventative maintenance	6-1
	6-2. Lubrication	6-2
	6-4. Recommended lubricants	6-6
	6-5. Clutch brushes	6-7
	6-6. Adjusting the tool clamp	6-8
7.	ADDITIONAL DIAGRAMS	
	7-1. Spindle lubrication system	7-1
	7-2. Main hydraulic circuit	7-2
	7-3. Spindle gear train	7-3

CONTENTS (CONTINUED)

APPENDICES

- A. Pendant control board.
- B. Portable control box.
- C. Foundation drawing
- D. KM-6A drawing