

MIKRON 
After Sales Support

Operating manual


Machining center

MIKRON UCP 600/ VCP 600/ 800

Heidenhain iTNC 530

Version February 2009

222.30.80.110

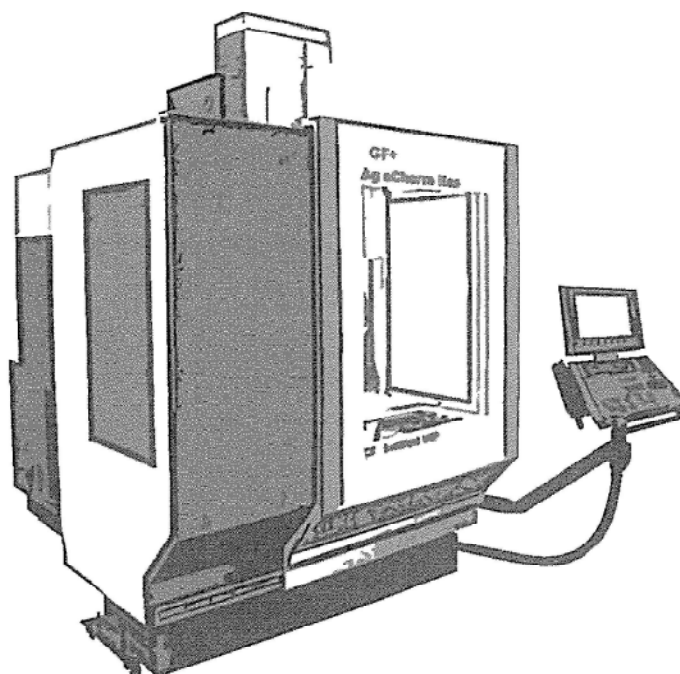

+GF+

AgieCharmilles

Table of contents

1	Introduction	1-1
1.1	Layout of documentation provided	1-2
1.2	Safekeeping and duplication	1-2
1.3	Target group and purpose	1-3
1.3.1	Target group	1-3
1.3.2	Purpose	1-3
1.4	Customer training	1-3
1.5	Service life	1-4
1.6	Warranty terms	1-4
1.7	User evaluation	1-4
2	Safety	2-1
2.1	Warning notices and hazard symbols	2-2
2.2	Compliant machine use	2-5
2.3	Noncompliant machine use	2-6
2.4	Fundamental safety regulations	2-7
2.4.1	Safety regulations for the owner/operator	2-7
2.4.2	Protective clothing	2-9
2.4.3	Safety regulations for the operating and maintenance staff	2-10
2.5	Procedure in an emergency situation	2-13
2.5.1	EMERGENCY STOP	2-13
2.5.2	Freeing persons from entrapment	2-14
2.5.3	Fire protection	2-15
2.6	Particular hazards	2-16
2.6.1	Dangers from electrical energy	2-16
2.6.2	Dangers from hydraulic energy, pneumatic energy and coolant high pressure	2-16
2.6.3	Dangers from operating and auxiliary materials	2-17
2.6.4	Dangers from minimum-quantity cooling lubrication and dry machining	2-17
2.6.5	Dangers from gases and vapors	2-19
2.6.6	Dangers when machining magnesium	2-20
2.6.7	Dangers when machining titanium	2-21
2.6.8	Dangers from using carbon-dioxide fire extinguishing systems	2-22
2.6.9	Dangers from laser radiation	2-22
2.6.10	Dangers from noise	2-22
2.6.11	Dangers from magnetic fields	2-23
2.6.12	Dangers while operating the machine	2-23
2.7	Maintenance	2-25
2.7.1	Safety measures	2-25
2.7.2	Cleaning the machine	2-25
2.7.3	Hydraulics, pneumatics and coolant supply	2-26
2.7.4	Electrical equipment	2-26
2.7.5	Inspection of safety equipment	2-27
2.7.6	Aging of cabin windows	2-27
2.8	Transport of the machine and its components	2-28

2.9	Safety instruction	2-29
3	Machine description	3-1
3.1	Overview	3-2
3.1.1	Machine concept	3-2
3.1.2	Functional description of the basic machine	3-3
3.1.3	Drives and measuring systems	3-4
3.1.3.1	Overview of the basic machine	3-4
3.1.3.2	Guideways	3-4
3.1.3.3	Feed drive	3-5
3.1.3.4	Grease lubrication	3-5
3.2	Safety equipment	3-6
3.2.1	EMERGENCY STOP	3-6
3.2.2	SAFE STOP	3-6
3.2.3	Main switch	3-7
3.2.4	Protective doors with protective switches	3-8
3.2.5	Pressure monitoring system for pneumatics and lubrication	3-9
3.2.6	Markings and labels on the machine	3-10
3.3	Technical specifications	3-11
3.3.1	Parameter specifications	3-11
3.3.2	Quality characteristics	3-12
3.3.3	Tool dimensions	3-13
3.3.4	Ambient conditions	3-14
3.3.5	Electrical connection	3-14
3.3.6	Pneumatics	3-15
3.3.7	Noise emissions	3-16
3.4	Assembly description	3-17
3.4.1	Hydraulics	3-17
3.4.2	Pneumatics	3-17
3.4.3	Electrical subassembly	3-18
3.4.3.1	Measuring system	3-18
3.4.3.2	Control cabinet	3-18
3.4.3.3	Interfaces	3-18
3.4.4	Machine control system	3-19
3.4.5	Tool spindle	3-20
3.4.6	Tool spindle oil lubrication	3-21
3.4.7	Cooling unit	3-22
3.4.8	Tool changer	3-23
3.4.9	Cab enclosures	3-24
3.4.9.1	Cab enclosure specifications	3-24
3.4.9.2	Variants	3-24
3.5	Work tables	3-25
3.5.1	Slot table	3-25
3.5.2	Tilting rotary table	3-26
3.6	Chip management and cooling lubricant system	3-27
3.6.1	Safety instructions for chip management and cooling lubricant system	3-27
3.6.2	Equipment variants	3-27
3.6.3	Cleaning pistol	3-28
3.6.4	Coolant tank	3-28
3.6.5	Scraper chip conveyor	3-29
3.6.6	Belt filter 200 l	3-30
3.6.7	Production package	3-31

3.7	Options	3-33
3.7.1	Interface to third-party robot	3-33
3.7.2	Table touch probe system	3-34
3.7.3	Laser measuring system	3-35
3.7.4	Blow-off unit	3-35
3.7.5	Touch probe	3-36
3.7.6	Movable handwheel	3-37
3.7.7	Rotating viewing window	3-38
3.7.8	Minimum-quantity cooling lubrication system	3-39
3.7.9	Oil mist extraction unit	3-41
3.7.10	Graphite dust suction	3-42
3.7.10.1	VCP 600 / VCP 800 variant	3-42
3.7.10.2	UCP 600 variant	3-42
3.7.10.3	Graphite dust suction	3-42
3.7.11	Dividing head	3-44
4	Transport and installation	4-1
4.1	Training	4-2
4.2	Safety instructions	4-2
4.3	Scope of delivery and transport dimensions	4-3
4.3.1	Scope of delivery	4-3
4.3.1.1	Checking the scope of delivery	4-4
4.3.1.2	Report transport damage immediately	4-4
4.3.2	Transport dimensions	4-5
4.4	Transport	4-6
4.4.1	Safety instructions for transport	4-6
4.4.2	Transport with crane	4-7
4.4.3	Transport with forklift	4-9
4.4.4	Transport with heavy-duty casters	4-10
4.5	Requirements for the location	4-11
4.5.1	Requirements for the location	4-11
4.5.1.1	Space requirements	4-11
4.5.1.2	Floor characteristics	4-12
4.5.1.3	Foundation	4-12
4.5.2	Requirements for the work environment	4-12
4.5.3	Requirements for the room climate	4-13
4.5.4	Requirements for the media	4-14
4.5.4.1	Pneumatic connection	4-14
4.5.4.2	Electrical connection	4-14
4.5.4.3	Voltage stabilizer	4-14
4.6	Packaging materials	4-14
4.7	Transporting the installed machine	4-15
4.7.1	Preparing the machine for transport	4-15
4.7.2	Installing the machine after transport	4-16
4.7.3	Installing the transport equipment	4-17
4.7.3.1	Installing the transport locking device	4-17
5	Commissioning	5-1
5.1	Safety instructions	5-2
5.2	Initial startup	5-2
5.3	Preparations for commissioning	5-2

5.3.1	Inspection prior to commissioning	5-2
5.4	Commissioning	5-3
6	Operation	6-1
6.1	Description of the operating elements	6-2
6.1.1	Monitor and control console	6-2
6.1.2	Machine programming field	6-5
6.1.3	Machine control panel	6-6
6.1.4	Functions of the machine control panel	6-6
6.1.4.1	EMERGENCY STOP	6-6
6.1.4.2	Authorization key	6-6
6.1.4.3	[NC-STOP] key	6-6
6.1.4.4	[NC-START] key	6-7
6.1.4.5	[COOLANT] key	6-7
6.1.4.6	[SPRAY GUN] key	6-7
6.1.4.7	Keys for F-functions	6-8
6.1.4.8	Axis direction keys	6-8
6.1.4.9	[SPINDLE START] key	6-8
6.1.4.10	[RAPID TRAVERSE] key	6-8
6.1.4.11	[SPINDLE STOP] key	6-8
6.1.4.12	Key switch	6-8
6.1.4.13	[ON/OFF] power key	6-9
6.1.4.14	Cooling unit for tool spindle, switch cabinet and drive motors	6-9
6.1.5	Movable handwheel	6-10
6.1.6	Main switch	6-11
6.1.7	EMERGENCY STOP	6-12
6.1.8	Clearing the EMERGENCY STOP state	6-13
6.1.9	Clearing the SAFE STOP state	6-13
6.2	Operating modes	6-14
6.2.1	Normal mode (operating mode 1)	6-14
6.2.2	Setup mode (operating mode 2)	6-15
6.2.3	Programming modes	6-16
6.2.3.1	Programming and editing	6-16
6.2.3.2	Test run	6-16
6.3	Machine operation	6-17
6.3.1	Switching on and off	6-17
6.3.1.1	Switch on the machine	6-17
6.3.1.2	Automatically pass over reference	6-18
6.3.1.3	Switch off the machine	6-18
6.3.2	Move the axes manually	6-19
6.3.2.1	Axis direction keys/Jog mode	6-19
6.3.2.2	Rapid traverse	6-19
6.3.2.3	Step-by-step positioning/ JOG	6-20
6.3.3	Pass over reference manually	6-21
6.3.4	Limit stop	6-22
6.3.5	Tool spindle	6-23
6.3.5.1	Safety at the tool spindle	6-23
6.3.5.2	Starting the tool spindle	6-23
6.3.5.3	Stopping the tool spindle	6-24
6.3.5.4	Warming up the tool spindle	6-24
6.3.5.5	Entering the tool spindle speed	6-25
6.3.6	Manual tool change	6-26
6.3.7	Cooling lubricant/ cooling lubricant emulsion	6-28
6.3.7.1	External cooling	6-28

6.3.7.2	Minimum-quantity cooling lubrication MQCL	6-28
6.3.7.3	Internal cooling system	6-28
6.4	Program run	6-29
6.4.1	Executing a machining program	6-29
6.4.2	Interrupting the machining application	6-30
6.4.2.1	Programmed interruption	6-30
6.4.2.2	Manual entry	6-30
6.4.2.3	Change over to the <SINGLE BLOCK> operating mode	6-31
6.4.2.4	Move the machine axes during interruption	6-31
6.4.3	Continue program run	6-32
6.4.3.1	Continue the program run with the [NC-START] key	6-32
6.4.3.2	Program run after an error	6-32
6.4.3.3	Continuing the program run differently	6-32
6.5	Machine parameters	6-33
6.5.1	Machine-specific user parameters	6-33
6.5.1.1	Entering machine-specific user parameters	6-33
6.5.1.2	Explanations of machine-specific user parameters	6-35
6.6	Programming	6-39
6.6.1	Importing NC-programs	6-39
6.6.2	Cutting data table	6-39
6.6.3	Cycles	6-40
6.7	M-functions	6-42
6.7.1	Explanations of the M-functions	6-44
6.8	Control system message	6-47
6.8.1	Error diagnosis: Procedure	6-47
6.8.2	NC-messages	6-47
6.8.3	PLC messages	6-48
6.9	Tool change	6-49
6.9.1	Tool changer TC	6-49
6.9.1.1	General information about the tool change	6-49
6.9.1.2	Operating the tool changer	6-50
6.9.1.3	Faults	6-52
6.10	Minimum-quantity cooling lubrication MQCL	6-53
6.11	Oil mist extraction unit	6-54
6.12	Dry machining	6-54
6.12.1	Extraction unit	6-54
6.13	Operating status indicator of the signal lamp	6-56
6.14	Backup	6-57
7	Service and maintenance	7-1
7.1	Safety instructions	7-2
7.2	Training	7-4
7.3	Operating materials and cleaning agents	7-4
7.3.1	Cooling lubricant emulsion	7-5
7.3.2	Cutting oils	7-5
7.3.3	Cleaning of the machine	7-6
7.4	Displaying operating times	7-7
7.5	Maintenance and inspection schedule	7-9

7.6	Lubrication schedule	7-10
7.7	Daily checks	7-11
7.8	Work spindle maintenance schedule	7-12
7.9	Machine maintenance schedule	7-13
7.10	Maintenance and inspection tasks	7-16
7.10.1	Safety equipment	7-16
7.10.1.1	Check the [EMERGENCY STOP] button.....	7-16
7.10.1.2	Check the [SAFE STOP] button	7-17
7.10.1.3	Check the [SAFE STOP] button	7-18
7.10.1.4	Check the [ON/OFF] power key.....	7-19
7.10.1.5	Check the [NC-STOP] key	7-19
7.10.1.6	Check the safety locking mechanism of the protective doors	7-20
7.10.2	Lubrication of the recirculating ball screw	7-22
7.10.3	Cooling lubricant emulsion supply system	7-24
7.10.3.1	Check the quality of the cooling lubricant emulsion.....	7-24
7.10.3.2	Check the supply level of the cooling lubricant emulsion	7-25
7.10.3.3	Cleaning pistol	7-25
7.10.4	Scraper chip conveyor	7-26
7.10.4.1	Replacing the cooling lubricant and cleaning the coolant tank.....	7-26
7.10.5	Belt filter system	7-28
7.10.5.1	Check the paper filter roll on the belt filter	7-28
7.10.5.2	Empty and clean the belt filter sludge tank.....	7-28
7.10.5.3	Clean the float switch of the belt filter.....	7-29
7.10.5.4	Cleaning the level sensors on the belt filter system.....	7-29
7.10.5.5	Replacing the cooling lubricant, cleaning the belt filter tank	7-29
7.10.6	Pneumatics	7-31
7.10.6.1	Check the pressure gauge displays.....	7-31
7.10.6.2	Empty the spill-over bottle at the work spindle oil extraction	7-32
7.10.6.3	Check the inspection glasses of the pneumatic panel.....	7-32
7.10.6.4	Check the main maintenance unit	7-33
7.10.6.5	Clean the micro filter in front of the measurement system, inspection glass and filter unit	7-33
7.10.7	Hydraulic unit	7-34
7.10.7.1	Check the oil level.....	7-35
7.10.7.2	Check the operating pressure.....	7-36
7.10.8	Cooling unit	7-36
7.10.8.1	Check the coolant level.....	7-37
7.10.8.2	Check the coolant circuit for function and leaks	7-37
7.10.8.3	Cleaning the air filter.....	7-37
7.10.8.4	Check the quality of the coolant.....	7-37
7.10.9	Work spindle and spindle taper	7-39
7.10.9.1	Check the oil level of the lubrication unit and check the lubrication line	7-39
7.10.9.2	Clean the work spindle taper	7-40
7.10.9.3	Check the collet chuck for save function	7-40
7.10.9.4	Check the clamping force of the collet chucks.....	7-40
7.10.9.5	Check the ejection dimension of the tool clamping system	7-41
7.10.10	Viewing screens and cab enclosure	7-45
7.10.10.1	Viewing screens.....	7-45
7.10.10.2	Clean the interior, windows and exterior.....	7-45
7.10.10.3	Check the interior lighting system.....	7-46
7.10.10.4	Check the viewing screen and the cover of the X-axis for damage	7-46
7.10.11	Rotating viewing window	7-47
7.10.11.1	Check the rotating viewing window.....	7-47
7.10.12	Tool changer (TC)	7-48
7.10.12.1	Checking the tools of the tool changer	7-48

7.10.12.2	Cleaning the gear drive and gear rim	7-48
7.10.12.3	Checking the pockets for wear	7-49
7.10.12.4	Cleaning the proximity switches and the photoelectric barrier.....	7-50
7.10.12.5	Checking the function of the tool changer and door	7-51
7.10.13	Oil mist extraction system (electrostatic precipitator)	7-52
7.10.13.1	Clean the metal prefilter element and the electrostatic precipitator cells.....	7-52
7.10.13.2	Check the after-filter mat	7-53
7.10.14	Touch probe	7-54
7.10.14.1	Clean the touch probe	7-54
7.10.15	Laser measurement system	7-55
7.10.15.1	Clean the pollution protectors	7-55
8	Decommissioning and disposal	8-1
8.1	Safety instructions	8-2
8.2	Prerequisite qualifications for decommissioning personnel	8-2
8.3	Machine shutdown	8-3
8.4	Storage conditions	8-3
8.5	Decommissioning	8-3
8.6	Disposal	8-4
8.6.1	Instructions for disposal	8-4
8.6.2	Disposal locations	8-4
9	Index	9-1
10	Glossary	10-1
10.1	Abbreviations	10-1
10.2	Terminology	10-1
11	Appendix	11-1
11.1	Signature lists for maintenance tasks	11-2
11.1.1	Copy templates for daily maintenance tasks	11-2
11.2	Water-mixed cooling lubricants (emulsions)	11-2
11.3	Cutting oils	11-3
11.4	Your copy of the order confirmation	11-4