


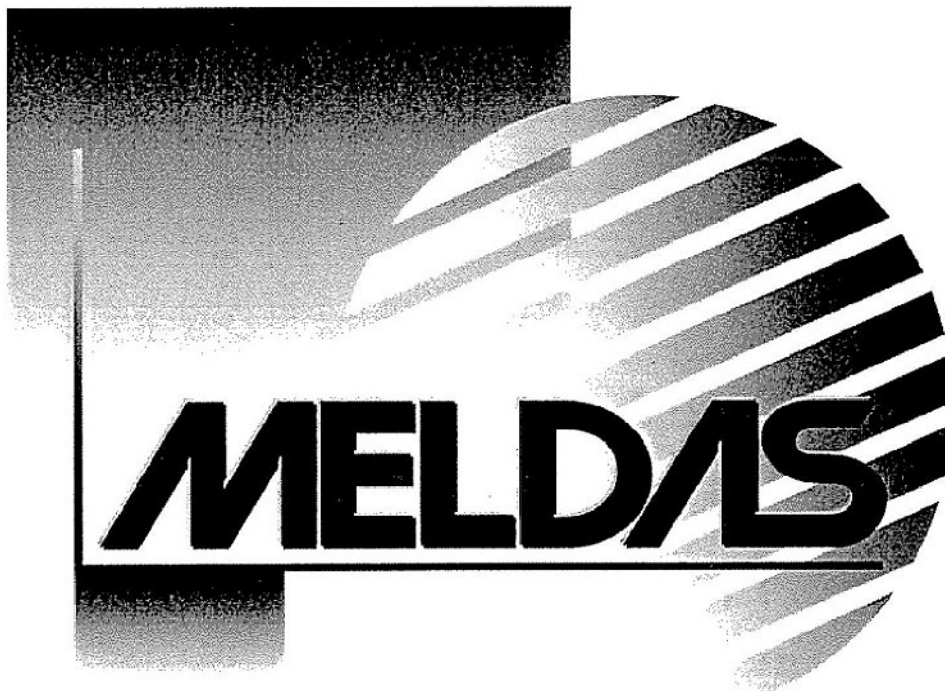

Changes For the Better

CNC MELDAS 60/60S Series

ALARM/PARAMETER MANUAL



CONTENS

I EXPLANATION OF ALARMS

1. LIST OF ALARMS.....	1
1.1 OPERATION ALARMS.....	1
1.2 STOP CODES	9
1.3 SERVO ALARMS	14
1.4 SPINDLE ALARMS	24
1.5 MCP ALARM	29
1.6 SYSTEM ALARMS	32
1.7 ABSOLUTE POSITION DETECTION SYSTEM ALARMS	36
1.8 MESSAGES DURING EMERGENCY STOP	39
1.9 AUXILIARY AXIS ALARMS.....	41
1.10 COMPUTER LINK ERRORS.....	48
1.11 USER PLC ALARMS	49
2. OPERATION MESSAGES ON SETTING AND DISPLAY UNIT.....	50
2.1 OPERATION ERRORS	50
2.2 OPERATOR MESSAGES	60
2.2.1 SEARCH AND OPERATION RELATED	60
2.2.2 MDI/EDITING RELATED	61
2.2.3 DATA INPUT/OUTPUT RELATED	62
2.2.4 S-ANALOG OUTPUT ADJUSTMENT RELATED	63
2.2.5 AUXILIARY AXIS	63
2.2.6 PARAMETER BACKUP RELATED.....	63
2.2.7 OTHERS	64
3. PROGRAM ERROR	65

II EXPLANATION OF PARAMETERS

1. SCREEN CONFIGURATION	1
1.1 SCREEN TRANSITION CHARTS	1
2. MACHINING PARAMETERS	3
2.1 PROCESS PARAMETERS	3
2.2 CONTROL PARAMETERS	10
2.3 AXIS PARAMETERS	12
2.4 BARRIER DATA	14
2.5 TOOL MEASUREMENT PARAMETERS	16
3. I/O PARAMETERS	17
3.1 BASE PARAMETERS	17
3.2 I/O DEVICE PARAMETERS	18
3.3 COMPUTER LINK PARAMETERS	20
4. SETUP PARAMETERS	22
5. BASE SPECIFICATIONS PARAMETERS	23
6. AXIS SPECIFICATIONS PARAMETERS	92
6.1 AXIS SPECIFICATIONS PARAMETERS	92
6.2 ZERO POINT RETURN PARAMETERS	99
6.3 ABSOLUTE POSITION PARAMETERS	102
6.4 AXIS SPECIFICATIONS PARAMETERS 2	104
7. SERVO PARAMETERS	112
7.1 MDS-B-SVJ2	114
7.2 MDS-C1-Vx HIGH-GAIN (MDS-B-Vx4 COMPATIBLE)	140
7.3 MDS-C1-Vx STANDARD SPECIFICATION (MDS-B-Vx COMPATIBLE)	168

7.4	SUPPLEMENT	198
7.4.1	D/A OUTPUT SPECIFICATIONS	198
7.4.2	ELECTRONIC GEARS	204
7.4.3	LOST MOTION COMPENSATION.....	206
8.	MDS-B-SP/SPH,SPJ2 SPINDLE PARAMETERS.....	207
8.1	MDS-B-SP/SPH,SPJ2 SPINDLE BASE SPECIFICATIONS PARAMETERS.....	207
8.2	MDS-B-SP/SPH,SPJ2 SPINDLE PARAMETERS.....	215
8.3	MDS-B-SP/SPH,SPJ2 SUPPLEMENTARY EXPLANATION (FOR D/A OUTPUT FUNCTIONS).....	252
9.	MDS-C1-SP, SPM SPINDLE PARAMETERS	255
9.1	MDS-C1-SP SPINDLE BASE SPECIFICATIONS PARAMETERS.....	255
9.2	MDS-C1-SP SPINDLE PARAMETERS.....	262
9.3	MDS-C1-SPM SPINDLE PARAMETERS.....	292
9.4	MDS-C1-SP SUPPLEMENTARY EXPLANATION.....	321
9.5	MDS-C1-SPM SUPPLEMENTARY EXPLANATION.....	325
10.	MACHINE ERROR COMPENSATION.....	329
10.1	FUNCTION OUTLINE.....	329
10.2	SETTING COMPENSATION DATA	333
10.3	EXAMPLE IN USING A LINEAR AXIS AS THE BASE AXIS	335
10.4	EXAMPLE IN USING A ROTATION AXIS AS THE BASE AXIS	339
11.	PLC CONSTANTS	340
11.1	PLC TIMER.....	340
11.2	PLC COUNTER.....	340
11.3	PLC CONSTANTS.....	341
11.4	SELECTING THE PLC BIT.....	341
12.	MACRO LIST.....	344

13. POSITION SWITCH.....	346
13.1 OUTLINE OF FUNCTION	346
13.2 CANCELING THE POSITION SWITCH.....	348
14. AUXILIARY AXIS PARAMETER SCREEN	349