

Howa

KIWAMI series

MZN-U320H-VCJ ($\alpha 1$)

INSTRUCTION MANUAL

 HOWA MACHINERY, LTD.

OPERATION MANUAL

—TABLE OF CONTENTS—

	PAGE
1. INTRODUCTION	1-1
2. SAFETY INSTRUCTIONS	2-1,2,3
3. SPECIFICATION OF MACHINE AND NC UNIT	3-1
3.1 Standard specification of machine	3-1
3.2 Standard functions of CNC unit	3-2
3.3 M code list	3-3
3.4 G code list	3-4,5
3.5 Overall view	3-6
3.6 Strokes	3-7
3.7 Jig design reference (interference region)	3-8
4. ENVIRONMENT, TRANSFER, AND INSTALLATION	4-1
4.1 Working environment	4-1
(1) Place of installation	4-1
(2) Power supply	4-1
4.2 Lifting of machine	4-1
Fig.4.1 Machining center transfer work	4-2
4.3 Installation	4-3,4
Fig.4.2 Connecting point of air-source	4-5
5. INSPECTION BEFORE TEST RUN	5-1

6.	OPERATION	6-1
6.1	Function of operating parts	6-1 to 7
	Fig.6.1 Operator's panel	6-8
6.2	Preparation for operation	6-9
6.3	Manual operation	6-9
6.4	MDI operation	6-9,10
6.5	ATC sequence	6-10,11
6.6	Automatic operation	6-12
6.7	Handle operation	6-12
6.8	Routine operation procedure	6-12,13
6.9	How to set tools in MG, and ATC operation	6-14
	6.9.1 Attaching and detaching of tools	6-14
	6.9.2 Preparation for tool registration	6-15
	6.9.3 Tool registration	6-15,16
	6.9.4 Tool offset	6-16
	6.9.5 Setting direction of specify boring shift	6-17
	Fig.6.4 Direction of Tool Edge	6-18
	6.9.6 Restoration measures for POWER OFF and EMERGENCY STOP during ATC	6-18
	6.9.7 PLC Interface Diagnosis	6-19
	1) Display PLC-I/F screen.	6-19
	2) Display of PLC device data	6-19
	3) Device data	6-19,20
	4) How to turn ALARM lamp (diagnosis F99=1) off	6-21
	5) In case ATC cannot be returned to home position.	6-22
6.10	PLC switch	6-23
	6.10.1 Display of PLC-SW screen	6-23
	6.10.2 PLC-SW ON / OFF	6-23
7.	INTERLOCK	7-1
7.1	Axis movement	7-1
7.2	Spindle orientation	7-1
7.3	ATC operation (M06)	7-1
7.4	Magazine index by T-command	7-1
7.5	Automatic operation	7-1

MAINTENANCE MANUAL

—TABLE OF CONTENTS—

	PAGE
1. INTRODUCTION	1-1
1.1 Safety instructions	1-1
1.2 Periodic maintenance	1-1
2. CONFIGURATION	2-1
2.1 Configuration of MZN-320H-VCJ (α 1)	2-1
2.2 Layout of sensor, motor, and solenoid valve	2-2
2.3 Stroke setting of MZN-320H-VCJ (α 1)	2-3
2.4 Position switches	2-4
3. PERIODIC MAINTENANCE AND SERVICE	3-1
3.1 Daily maintenance and service	3-1
3.2 Monthly maintenance and service	3-1
3.3 Six - month maintenance and service	3-1
3.4 Greasing	3-2
Fig.3.1 Grease nipples	3-3
3.5 Replacing battery and battery unit	3-4~3-9
4. HOW TO DISPLAY SETUP PARAMETER SCREEN	4-1
5. MAINTENANCE AND ADJUSTMENT OF SPINDLE	5-1
5.1 Adjustment of Spindle Orientation	5-1~5-3
6. MAINTENANCE AND ADJUSTMENT OF FEED MECHANISM	6-1
6.1 Bolt tightening torque	6-1
6.2 Establish X - axis reference point	6-2~6-5
6.3 Soft limit	6-6~6-7

8.	PROGRAMMING AND PROGRAM TRYOUT	8-1
8.1	Introduction	8-1
8.2	Setup before machining	8-1
8.3	Program	8-2,3
8.3.1	New program registration	8-2
8.3.2	MDI data registration in memory	8-2
8.3.3	Editing of program	8-3
8.3.4	Memory operation	8-3
8.4	Example of machining program	8-4
A.	Example of program using tool length compensation and canned cycle	8-4,5
B.	Example of program for cutter radius compensation	8-6,7
8.5	Basic program for Jig-changer	8-8
8.6	Basic program for others	8-9,10
9.	COOLANT UNIT (OPTIONAL) AND REMOVAL OF CHIPS	9-1