

YCM
ELECTRIC MANUAL

MODEL : YCM-TC-26L

(FANUC TXP100I)

PLC:LBA2R02

TURING CENTER

OPTC15E44

R002

INDEX	PAGE
1. CAUTION AND WARNING	
2. PREFACE	
2.1 PREFACE	1
2.2 THE CODE IDENTIFICATION OF TURRET TYPE	2
3. ELECTRIC — SYMBOL DETAIL	
4. CONNECTION BLOCK DIAGRAM	
4.1 EARTHING ARRANGEMENTS	1
4.1.1 FOR TC-15/26/26L/36/36W SERIES	1
4.2 CNC CONNECTION BLOCK DIAGRAM.....	2
4.2.1 FOR TC-15/26/26L/36/36W SERIES	2
4.3 CONNECTION DIAGRAM OF PSM,SPM AND SVM.....	3
4.3.1 FOR TC15/26/26L/36/36W SERIES	3
4.4 MACHINE I/O CONNECTION BLOCK DIAGRAM.....	4
4.5 P.C BOARD CONNECTION BLOCK DIAGRAM.....	5
4.5.1 I/O GROUP 0 PC BOARD (603-E04-IP01)	5
4.5.2 I/O GROUP 1 PC BOARD (603-E04-IR01).....	6
4.5.3 I/O GROUP 1 REALY PIN ASSIGNMENT	7
4.5.4 JUMP PIN DESCRIPTION FOR I/O GROUP 1 P.C BOARD(603-E04-IR01)..	8
5. ELECTRIC LAYOUT	
5.1 WIRING LOYOUT.....	1
5.1.1 THE ELECTRIC CABINET BLOCK DIAGRAM.....	1
5.1.1.1 FOR TC-15/26/26L/36/36W SERIES.....	1
5.1.2 THE OPERATOR CABINET BLOCK DIRAGRAM.....	2
5.2 SYMBOLIC PANEL	3
5.2.1 SYMBOLIC PANEL.....	3

6. WIRING

6.1	POWER SUPPLY	1
6.2	CONTROL VOLTAGE 220/110 VAC /DC 24V	3
6.3	CNC POWER ON/OFF	4
6.4	EMERGENCY STOP	5
6.4.1	STROKE LIMIT	5
6.4.2	DETECT	5
6.4.3	SAFETY COMPONENT	6
6.4.3.1	EMERGENCY STOP RELAY BASE (NON CE MARK MACHINE)	6
6.4.3.2	SAFETY COMPONENT (OPTION) (CE MARK MACHINE)	6
6.5	FUNCTION	7
6.6	MODE	9
6.7	FEEDRATE OVERRIDE	9
6.8	COOLANT	10
6.8.1	PB	10
6.8.2	COIL	10
6.8.3	SOLENOID AND MCC	10
6.8.4	MOTOR	10
6.9	CONVEYOR	11
6.9.1	PB	11
6.9.2	COIL	12
6.9.3	MCC	12
6.9.4	MOTOR	12
6.10	SAFETY DOOR	13
6.10.1	PB	13
6.10.2	COIL	13
6.10.3	SOLENOID	13
6.11	TURRET	14

6.11.1.1 PB.....	14
6.11.2 DETECTION	15
6.11.2.1 FOR ABSOLUTE TURRET.....	15
6.11.2.2 FOR INCREMENTAL TURRET.....	16
6.11.3 COIL	17
6.11.4 SOLENOID AND MCC	17
6.11.5 FOR SERVO MOTOR TURRET (SERVO AMPLIFIER MOUNT OUTSIDE)	18
6.11.5.1 P3 CONNECTER PIN ASSIGNMENT.....	18
6.11.5.2 P4 CONNECTER PIN ASSIGNMENT.....	19
6.11.5.3 P6 CONNECTER PIN ASSIGNMENT.....	20
6.11.5.4 P5 CONNECTER PIN ASSIGNMENT.....	20
6.11.5.5 TURRET MOTOR.....	21
 6.12 EDIT LOCK.....	 22
6.13 LIGHT.....	22
6.13.1 WORK LIGHT	22
6.13.2 POWER INDICATER	22
6.14 CYCLE.....	22
6.15 AUTO POWER OFF FUNCTION(OPTION).....	23
6.15.1 PB.....	23
6.15.2 CONTACT.....	23
6.15.3 TIMER PIN ASSIGNMENT	23
6.16 SPINDLE	24
6.16.1 PB.....	24
6.16.2 LOAD METER.....	25
6.16.3 DETECTION	26
6.16.4 COIL	27
6.16.5 SOLENOID.....	29
6.16.6 MCC(SPINDLE 1 & SPINDLE 2(TURRET))	30
6.16.7 SPINDLE MCC SWITCH UNIT.....	30
6.17 JOG AND AXIS STROKE LIMIT SWITCH UNIT.....	31

6.17.1 ROTARY SWITCH.....	31
6.17.1.1 RAPID OVERRIDE.....	31
6.17.1.2 JOG FEEDRATE%.....	31
6.17.2 PB.....	32
6.17.3 DETECTION.....	33
6.18 HANDLE.....	34
6.18.1 AXIS SELECT SWITCH.....	34
6.17.2 M.P.G.....	34
6.19 AUTO DOOR.....	35
6.19.1 PB.....	35
6.19.2 DETECTION.....	35
6.19.3 COIL.....	35
6.19.4 SOLENOID.....	35
6.20 SIGNAL TOWER.....	36
6.20.1 COIL.....	36
6.20.2 LAMP.....	36
6.21 TAIL STOCK.....	37
6.21.1 PB.....	37
6.21.2 DETECTION.....	37
6.21.3 COIL.....	38
6.21.4 SOLENOID.....	38
6.22 AXES LUBE.....	39
6.22.1 FOR VOLUMETRIC LUBRECATOR.....	39
6.22.1.1 DETECT.....	39
6.22.1.2 COIL.....	39
6.22.1.3 MOTOR.....	39
6.22.2 FOR PROPORTION LUBRECATOR.....	40
6.22.2.1 DETECT.....	40
6.22.2.2 COIL.....	40
6.23.2.3 MOTOR.....	40
6.23 HYDRAULIC UNIT.....	41

6.23.1	MCC.....	41
6.23.2	MOTOR.....	41
6.24	MOTOR OVERLOAD	42
6.25	MEASUREMENT	43
6.25.1	AUTO TOOL OFFSET FOR AUTO ARM UP/DOWN	43
6.25.1.1	PB	43
6.25.1.2	DETECTION.....	43
6.25.1.3	COIL.....	44
6.25.1.4	SOLENOID.....	44
6.25.2	AUTO TOOL OFFSET FOR ARM UP/DOWN BY MANUAL (RENISHOW HPPA FOR 1 POINT MEASUREMENT)	45
6.26	AXIS BRAKE.....	46
6.26.1	COIL	46
6.28	PARTS CATCHER.....	47
6.27.1	COIL	47
6.27.2	SOLENOID.....	47
6.27.3	DETECTION	47
6.28	BAR FEED UNIT(OPTION)	48
6.28.1	BAR FEED UNIT (TYPE 1 FOR DH65).....	48
6.28.1.1	COIL.....	48
6.28.1.2	CONTACT.....	48
6.28.2	BAR FEED UNIT(TYPE 2 FOR HYDRAFEED BARFEED).....	49
6.28.2.1	COIL	49
6.28.2.2	TOTAL CONNECTION OF HYARAFEED BARFEED.....	50
6.28.3	BAR FEED UNIT(TYPE 3 FOR LNS BARFEED).....	51
6.28.3.1	COIL.....	51
6.28.3.2	TOTAL CONNECTION OF LNS BARFEED.....	52
6.28.3.3	LNS BAR FEEDER CONNECTER PIN ASSIGNMENT	53
6.29	OIL SKIMMER UNIT(OPTION)	54
6.29.1	COIL.....	54
6.29.2	MOTOR.....	54

6.30 OIL MATIC(OPTION).....	55
6.30.1 DETECT	55
6.30.2 COIL	55
6.30.3 MOTOR.....	55
6.31 EXTERNAL COUNTER(OPTION)	56
6.31.1 COIL	56
6.31.2 COUNTER COIL	56
6.32 CENTER SUPPORTER(OPTION).....	57
6.32.1 PB	57
6.32.2 COIL	57
6.30.3 SOLENOID.....	57
7. CONNECTION PIN ASSIGNMENT	
7.1 I/O GROUP 0	1
7.1.1 MAIN OPERATOR'S PANEL PIN ASSIGNMENT	1
7.1.2 I/O MODULE <—> OPERATOR PANEL I/O DISTRIBUTION BOARD (MR1).....	2
7.1.3 I/O MODULE <—> OPERATOR PANEL I/O DISTRIBUTION BOARD (MR2).....	4
7.1.4 I/O MODULE <—> OPERATOR PANEL I/O DISTRIBUTION BOARD (MR3).....	6
7.1.5 I/O MODULE <—> OPERATOR PANEL I/O DISTRIBUTION BOARD (MR4).....	8
7.2 I/O GROUP 1	10
7.2.1 I/O MODULE <—> MS I/O DISTRIBUTION BOARD (MS1).....	10
7.2.2 I/O MODULE <—> MS I/O DISTRIBUTION BOARD (MS2).....	12
7.2.3 I/O MODULE <—> MS I/O DISTRIBUTION BOARD (MS3).....	14
7.2.4 I/O MODULE <—> MS I/O DISTRIBUTION BOARD (MS4).....	16
7.3 MR PC BOARD I/O ASSIGNMENT(603-E04-IR01)	18
7.3.1 I/O MODULE <—>OPERATOR PANEL I/O BOARD (X110).....	18
7.3.2 I/O MODULE <—>OPERATOR PANEL I/O BOARD (X120).....	19
7.3.3 I/O MODULE <—>OPERATOR PANEL I/O BOARD (X111).....	20

7.3.4	I/O MODULE <—>PANEL (STATUE DISPLAY) (X112)	21
7.3.5	I/O GROUP0 <—>I/O MODULE (JA3)	22
7.4	MS PC BOARD I/O ASSIGNMENT(603-E04-IP01)	23
7.4.1	I/O DISTRIBUTION BOARD <—> AXIS LIMIT SWITCH(X20X).....	23
7.4.1.1	I/O DISTRIBUTION BOARD <—> AXIS LIMIT SWITCH(X20Z).....	23
7.4.1.2	I/O DISTRIBUTION BOARD <—> AXIS LIMIT SWITCH(X20C).....	23
7.4.1.3	I/O DISTRIBUTION BOARD <—> AXIS LIMIT SWITCH(X20Y)	24
7.4.1.4	I/O DISTRIBUTION BOARD <—> AXIS LIMIT SWITCH(X20A)	24
7.4.2	I/O DISTRIBUTION BOARD(X906) <—>EXTERNAL I/O P.C.B(P15)	25
7.4.3	I/O GROUP 0(X907) <—> I/O GROUP 1(X907)	26
7.4.4	DUPLO. AMP.(P4) <—> I/O DISTRIBUTION BOARD (X022).....	26.1
7.4.5	I/O DISTRIBUTION BOARD <—> AUTO TOOL OFFSET INVERTER BOARD(X050).....	26.1
7.5	AXIS SERVO MOTOR DETAIL OF CABLE	27
7.5.1	FEEDBACK CONTROL DETAIL OF CABLE W22 (JF1,JF2,<—>MOTOR).....	27
7.5.2	POWER CABLE W21 DETAIL(CZ2L/CZ2M<—>SERVO MOTOR)....	27
7.6	SPINDLE DETAIL OF CABLE	28
7.6.1	DETAIL OF W12 (CONTROL JA41<—>SPM JA7B)	28
7.6.2	DETAIL OF CABLE W16 (SPM JYA3<—> POSITION)	28
7.6.3	DETAIL OF CABLE W17(SPM JYA2<—> SPINDLE MOTOR).....	29
7.6.4	DETAIL OF CABLE W33(SPM JY1<—> OPERATER PANEL).....	29
7.7	POWER SUPPLY MODULE DETAIL OF CABLE.....	30
7.7.1	DETAIL OF CABLE W3(PSM<—> GROUP1 P.C BOARD).....	30
7.7.2	DETAIL OF CABLE W6(PSM<—> MCC).....	30
7.7.3	DETAIL OF CABLE W7(PSM<—> EMERGENCE STOP CONTACT).30	
7.7.2	DETAIL OF CABLE W69(BETWEEN THE PSM,SPM,AND SVM).....	30
7.8	CONNECTION WITH INPUT/OUTPUT DEVICE DEAIAL	

OF CABLE.....	31
7.8.1 RS232C CABLE DETAIL JD36A.....	31
7.8.2 ETHERNET CABLE DETAIL CD38A.....	31
7.9 GROUP 1 P.C BOARD TERMINAL BLOCK PIN	
ASSIGNMENT.....	32
7.9.1 TERMINAL BLOCK X010 <—> RELATION TO SPINDLE DEVICE....	32
7.9.2 TERMINAL BLOCK X011 <—> RELATION TO SPINDLE DEVICE....	32
7.9.3 TERMINAL BLOCK X020 <—> RELATION TO TURRET SIGNAL.....	33
7.9.4 TERMINAL BLOCK X021 <—> RELATION TO TURRET SIGNAL.....	33
7.9.5 TERMINAL BLOCK X030 <—> RELATION TO TAILSTOCK SIGNAL..	34
7.9.6 TERMINAL BLOCK X031 <—> RELATION TO TAILSTOCK SIGNAL ..	34
7.9.7 TERMINAL BLOCK X040 <—> RELATION TO BARFEED SIGNAL.....	35
7.9.8 TERMINAL BLOCK X041 <—> RELATION TO BARFEED SIGNAL.....	35
7.9.9 TERMINAL BLOCK X051 <—> RELATION TO AUTO TOOL OFFSET	
SIGNAL.....	35
7.9.10 TERMINAL BLOCK X060 <—> RELATION TO LUBECATOR SIGNAL..	36
7.9.11 TERMINAL BLOCK X070 <—> RELATION TO EMERGENCE STOP	
SIGNAL.....	36
7.9.12 TERMINAL BLOCK X080 <—> RELATION TO SAFTE DOOR/AUTO	
DOOR SIGNAL.....	37
7.9.13 TERMINAL BLOCK X090 <—> RELATION TO X AXIS BRAKE	
SIGNAL.....	37
7.9.14 TERMINAL BLOCK X130 <—> RELATION TO PARTS CATCHER	
SIGNAL.....	37
7.9.15 TERMINAL BLOCK X140 <—> RELATION TO AUTO POWER OFF	
SIGNAL.....	38
7.9.16 TERMINAL BLOCK X150 <—> RELATION TO NC POWER ON/OFF	
SIGNAL.....	38
7.9.17 TERMINAL BLOCK X160 <—> RELATION TO INSIDE TRANSFORM	
SIGNAL.....	39
7.9.18 TERMINAL BLOCK X902 <—> RELATION TO WORK LIGHT SIGNAL.	39
7.9.19 TERMINAL BLOCK X903 <—> RELATION TO MISCELLANEOUS	
SIGNAL.....	40

8. PLC

8.1 TITLE.....	1
8.2 CROSS REFERENCE.....	1

8.3	LADDER.....	1
9. OPERATION ASSIGNMENT		
9.1	PLC DATA	1
9.1.1	TIMER SETTING	1
9.1.2	KEEP RELAY SETTING	2
9.1.3	COUNTER SETTING.....	8
9.1.3.1	TOOL COUNTER	8
9.1.4	TURRET TYPE SETTING	8
9.1.5	SPINDEL JOG SPEED SETTING.....	9
9.1.6	MAXMUM SPINDEL SPEED SETTING BY MANUAL OPERATEING..	9
9.2	MISCELLANEOUS FUNCTION (M FUNCTION)	10
10. TROUBLE SHOOTING		
10.1	ALARM CONTENT.....	1
10.1.1	NOT READY 準備不足.....	1
10.1.2	NC ALARM NC 報警	2
10.1.3	EXTERNAL ALARM MESSAGE 外部報警訊息.....	3
1001	TF<=0 COMMAND ERROR T 碼小於 0 指令錯誤.....	3
1002	TF OVER COMMAND ERROR T 碼太大指令錯誤	3
1003	CHUCK NOT OK ! 夾頭狀態不對	4
1004	SP GEAR SHIFT ALARM 主軸換檔失敗.....	5
1005	SPINDLE MOTOR ALARM 主軸馬達報警	6
1006	MOTOR OVERLOAD 馬達過載.....	7
1007	GEAR NEUTRAL ! 空檔	8
1008	START INHIBIT 啓動限制	9
1009	TOOL POSITION INCORRECT 刀號錯誤.....	10
1010	TURRET NOT INPOSITION 刀塔未定位.....	11
1011	AXIS ZERO RETURN MISSED 軸向原點復歸未完成	12
1012	PROBER INHIBITED 刀長量測使用限制	14
1013	BAR FEED ALARM 自動送料機錯誤.....	15
1014	TAIL CONFIRM MISSED 尾座確認失敗	16
1017	TURRET (C0) INCORRECT 刀塔總刀數錯誤.....	18
1018	TURRET (C2) INCORRECT 刀塔計數錯誤.....	19

1019	DOOR NEED CLOSED 門未關妥.....	20
1020	TAIL.POSITION RECORD FAIL 尾座位置記憶失敗.....	21
1021	TURRET SIGNAL ERROR 刀塔迴授訊號錯誤.....	22
1022	TOOL LIFT EXHAUST 刀具壽命結束.....	23
1023	TURRET ZERO MISSIED 刀塔原點迷失.....	24
1026	TAIL.NOT INPOSITION 拖尾座的位置不正確.....	25
1027	CHUCK INSIDE ERROR 夾頭內外夾選擇錯誤.....	26
1028	TURRET TYPE ERROR 刀塔型式設定錯誤.....	27
1029	OIL MATIC FAILED 油冷機失效.....	28
1032	Z AXIS INHIBITED Z 軸原點限制.....	29
1033	SP1<-> CF CHANGE FAIL 主 C 軸交換失敗.....	30
1034	TAIL OVER TRAVEL 尾座超行程.....	31
1019	TAIL.LOCK S.W ERROR 尾座牽引塊伸出失敗.....	32
1036	GEAR DETECT ERROR 主軸檔位偵測錯誤.....	33
1037	NONE C AXIS SIDE 非 C 軸側命令 C 軸移動.....	34
1039	LOCK PIN NO INPOSITION 溝槽定位 PIN 沒有定位.....	35
1040	T TOGETHER WITH SP COMMAND SAME BLOCK 第二主軸旋轉指令 和 T 指令在相同單節.....	36
1041	TURRET DRIVER NOT SUPPLYED 刀塔驅動器無動力電壓.....	37
1042	TURRET SYSTEM OVER VOLTAGE 伺服刀塔系統過電壓.....	38
1043	TURRET SYSTEM OVER LOAD 伺服刀塔系統過載.....	39
1044	TURRET UNLOCK FAULT 刀塔鬆開失敗.....	40
1045	TURRET LOCK FAULT 刀塔夾緊失敗.....	42
1046	TURRET ZERO SERCH FAULT 刀塔尋找原點失敗.....	44
1047	TOOL CHANGE FAILURE 換刀失敗.....	45
10.1.4	OPERATOR MESSAGE 操作訊息.....	46
10.1.4.1	2000 TRANS TO C AXIS GET TOOL ZERO 切換到 C 軸狀態作換刀動作.....	47
10.1.4.2	2003 GEAR CONFIRM?檔位確認?.....	47
10.1.4.3	2004 LUBE PR/LV ER ! 潤滑單元異常.....	48
10.1.4.4	2006 M.S.T LOCK MODE?M.S.T 鎖定模式?.....	49
10.1.4.5	2007 MANUAL ABSELUTION ENABLE 手動絕對功能使用中?.....	50
10.1.4.6	2008 TAIL.POSITION 尾座位置記憶完成.....	51

A . APPENDIX

A.1 THE OPERATING FLOW CHART FOR CHANGING MEMORY OF CHUCK INSIDE/OUTSIDE CLAMPED	1
A.2 AUTOMATIC TOOL OFFSET MEASUREMENT	2
A.2.1 RELATED PARAMETER SETUP	2
A.2.2 THE PROCEDURE CYCLE OF TOOL SETTER.....	2
A.2.3 THE FLOW CHART OF TOOL OFFSET MEASURE.....	3
A.2.3.1 MENUAL OFFSET VALUE MEASUREMENT	3
A.2.3.2 AUTO TOOL OFFSET MEASURE BY M101 T**%% Q#.....	6