

Operator's Manual

multiset ITM

TRUMPF



Operator's manual

multiset ITM

Edition: **11/2001**

Table of contents

1.	Description	7
2.	Safety	8
3.	Operation	9
3.1	User interface.....	9
3.2	Switching unit on and off.....	10
3.3	Measuring zero position.....	11
3.4	Aligning punch and fixing the alignment ring	12
3.5	Checking punch/die coordination.....	14
3.6	Measuring punch length.....	15
3.7	Measuring the punch regrinding length.....	16
3.8	Measuring die regrinding amount	18
3.9	Measuring the penetration depth of the punch in the stripper	20
3.10	Changing punch inserts	22
4.	Maintenance	23
5.	Replacement parts list	24