

**UDC 3300
Universal Digital Controller
Product Manual**

51-52-25-55C

9/99

Table of Contents

SECTION 1 – OVERVIEW.....	1
1.1 Introduction.....	1
1.2 Operator Interface	3
SECTION 2 – INSTALLATION.....	7
2.1 Overview.....	7
2.2 Model Number Interpretation.....	12
2.3 Mounting.....	13
2.4 Wiring	15
2.5 Wiring Diagrams	18
2.6 Control and Alarm Relay Contact Information	34
SECTION 3 – CONFIGURATION	35
3.1 Overview.....	35
3.2 Configuration Prompts.....	36
3.3 How To Get Started.....	39
3.4 Configuration Tips	40
3.5 Configuration Procedure.....	41
3.6 Loop 1 Tuning Parameters Set Up Group.....	43
3.7 Loop 2 Tuning Parameters Set Up Group (Cascade or Two Loops.....	45
3.8 SP Ramp, SP Rate, or SP Programming Set Up Group	47
3.9 Accutune Set Up Group.....	49
3.10 Algorithm Data Set Up Group.....	51
3.11 Output Algorithm Parameters Set Up Group.....	55
3.12 Input 1 Parameters Set Up Group.....	56
3.13 Input 2 Parameters Set Up Group.....	57
3.14 Input 3 Parameters Set Up Group.....	58
3.15 Loop 1 Control Parameters Set Up Group	59
3.16 Loop 2 Control Parameters Set Up Group	61
3.17 Options Set Up Group	63
3.18 Communications Set Up Group.....	64
3.19 Alarms Set Up Group	66
3.20 Display Parameters Set Up Group	68
3.21 Calibration Group	69
3.22 Maintenance Set Up Group.....	70
3.23 Status Group	71
3.24 Configuration Record Sheet Basic Model: DC330B-XX-XXX DMCS Model: DC330D-XX-XXX	72
3.25 Configuration Record Sheet Expanded Model: DC330E-XX-XXX.....	74
SECTION 4 – CONFIGURATION PROMPT DEFINITIONS	77
4.1 Overview.....	77
4.2 Loop 1 Tuning Parameters Set Up Group.....	78
4.3 Loop 2 Tuning Parameters Set Up Group.....	82
4.4 Setpoint Ramp/Rate/Programming Set Up Group	83
4.5 Accutune Set Up Group.....	86
4.6 Algorithm Data Set Up Group.....	90
4.7 Output Algorithm Parameters Set Up Group.....	107
4.8 Input 1 Parameters Set Up Group.....	110
4.9 Input 2 Parameters Set Up Group.....	113
4.10 Input 3 Parameters Set Up Group.....	114
4.11 Loop 1 Control Parameters Set Up Group	115
4.12 Loop 2 Control Parameters Set Up Group	121
4.13 Options Set Up Group	126
4.14 Communications Set Up Group.....	132

4.15	Alarms Set Up Group	135
4.16	Display Parameters Set Up Group	139
4.17	Calibration Data.....	140
4.18	Maintenance Set Up Group.....	140
4.19	Status Test Data.....	142
SECTION 5 – OPERATION.....		143
5.1	Overview	143
5.2	How to Power Up the Controller.....	144
5.3	Entering a Security Code.....	146
5.4	Monitoring Your Controller	147
5.5	Start-up Procedure	151
5.6	Operating Modes.....	152
5.7	Setpoints.....	156
5.8	Setpoint Ramp Rate	159
5.9	Single Setpoint Ramp.....	160
5.10	Using Two Sets of Tuning Constants	164
5.11	Alarm Setpoints	167
5.12	Two Loops of Control Overview	168
5.13	Configuring Two Loops of Control	173
5.14	Monitoring Two Loops of Control	176
5.15	Operating Two Loops of Control	177
5.16	Three Position Step Control Algorithm.....	178
5.17	Input Math Algorithms.....	179
5.18	Digital Input Option (Remote Switching).....	182
5.19	Auto/Manual Station	186
5.20	Fuzzy Overshoot Suppression	189
5.21	Accutune.....	190
5.22	Carbon Potential.....	198
5.23	HealthWatch.....	200
SECTION 6 – SETPOINT RAMP/SOAK PROGRAMMING OPTION.....		201
6.1	Overview	201
6.2	Program Contents	202
6.3	Drawing a Ramp/Soak Profile	204
6.4	Entering the Setpoint Program Data	206
6.5	Run/Monitor the Program.....	209
SECTION 7 – INPUT CALIBRATION		213
7.1	Overview	213
7.2	Minimum and Maximum Range Values.....	214
7.3	Preliminary Information.....	215
7.4	Input #1, #2, or #3 Set Up Wiring	217
7.5	Input #1, #2, or #3 Calibration Procedure	223
7.6	Restoring Factory Calibration.....	225
SECTION 8 – OUTPUT CALIBRATION		227
8.1	Overview	227
8.2	Current Proportional Output Calibration.....	228
8.3	Position Proportional and Three Position Step Output Calibration.....	230
8.4	Auxiliary Output Calibration.....	234
SECTION 9 – TROUBLESHOOTING / SERVICE		237
9.1	Overview	237
9.2	Troubleshooting Aids.....	239
9.3	Power-up Tests	241
9.4	Status Tests.....	242
9.5	Background Tests.....	244

9.6	Controller Failure Symptoms	246
9.7	Troubleshooting Procedures	247
9.8	Parts Replacement Procedures.....	255
9.9	Maintenance	264
SECTION 10 – PARTS LIST		265
10.1	Exploded View.....	265
SECTION 11 – APPENDIX A – MANUAL TUNING.....		267
11.1	Overview.....	267
11.2	Time, Position, or Current Proportional Simplex Control.....	268
11.3	Time Proportional Duplex or Current Proportional Duplex Control.....	270
11.4	Two Sets of Tuning Parameters for Single Output Operation	270