



SHE HONG INDUSTRIAL CO., LTD.

[http : //www.hartford.com.tw](http://www.hartford.com.tw)

E-MAIL : public@Hartford.com.tw

Tel : 886-4-23592747

Fax : 886-4-23592837 886-4-23593674

MACHINE INSTRUCTION MANUAL

For PRO-800/1000

INDEX

Chapter 1 FOREWORD.....	1-1
Chapter 2 SAFETY PRECAUTIONS.....	2-1
2.1 General Safety Precaution	2-2
2.2 Machine Tool Safety Precautions.....	2-3
2.3 Illustration Of Hazard Region (Including Machinery And Electric).....	2-4
2.4 Illustration Of Safety Device Position	2-6
2.5 The Position Of Warning And Marking Sign.....	2-7
Chapter 3 OUTLINE OF MACHINE.....	3-1
3.1 Concept Of This Machine And Noise Level	3-2
3.1.1 Conception Of This Machine.....	3-2
3.1.2 Airborne Noise.....	3-4
3.2 Profile Diagram And Main Part Name	3-5
3.2.1 Overall Drawing	3-5
3.2.2 Principal Part Name.....	3-8
3.2.3 Maximum Floor Space.....	3-9
3.3 Working Range	3-12
3.4 Machine Specifications.....	3-13
3.5 Tool Specification	3-14
3.6 Spindle Speed Output Performance Curve.....	3-15
Chapter 4 PREPARATION BEFORE PACKING UP.....	4-1
4.1 The Requirement Of Foundation.....	4-2
4.1.1 Space Limits	4-2
4.1.2 Installation Environment	4-2
4.1.3 Foundation.....	4-2
4.2 The Requirement Of Power Sources	4-7
4.2.1 Power And Grounding	4-7
4.2.2 Compressed Air	4-8
4.3 The Requirement Of Transportation Equipment.....	4-9
Chapter 5 TRANSPORTATION AND INSTALLATION	5-1
5.1 Precaution On Transportation For The Sealed Package.....	5-2
5.2 Precaution After Opening Package.....	5-4
5.3 The Transportation And Storage After Opening Package	5-5
5.3.1 The Suggested Machine For Lifting The Machine.....	5-5

5.3.2 Note Of Transporting The Machine.....	5-6
5.3.3 Storage.....	5-6
5.4 Precaution On Installation	5-7
5.5 Leveling Adjusting	5-8
Chapter 6 PREPARATIONS BEFORE TRIAL RUN.....	6-1
6.1 Cleaning.....	6-2
6.2 Removing Protection Attachment.....	6-2
6.3 Replenishing Lubricant	6-4
6.4 Hydraulic And Pneumatic Piping Method	6-6
6.4.1 Air Supply	6-6
6.4.2 Coolant Supply	6-6
6.5 Electricity Connection and Grounding Method.....	6-7
6.6 Safety Inspection	6-7
6.7 Warming-up Explanation	6-8
Chapter 7 SETTING AND ADJUSTING	7-1
7.1 Structural Setting And Adjustment	7-2
7.1.1 Adjusting Of Gibs	7-2
7.1.2 Leveling Adjustment.....	7-3
7.1.3 Adjustment Of Pull Stud Kick-Out Amount	7-4
7.1.4 Adjustment Of Tool Change Point (S-Type)	7-6
7.1.5 Adjustment Of Tool Change Point (A-Type)	7-7
7.1.6 The Adjustment Of The Cam-ATC Mechanism	7-9
7.2 Pressure Adjusting And Setting.....	7-13
7.2.1 Pneumatic System	7-13
7.2.2 Air Pressure System	7-14
7.2.3 Circuit Control Element Layout	7-15
7.2.4 Control Part	7-18
7.2.5 Oil Cooling System.....	7-20
7.2.6 The Control Component.....	7-24
7.3 Lubrication Adjustment And Setting	7-29
7.3.1 The Control Part	7-29
7.3.2 Lubrication Circuit t.....	7-33
7.4 Geometric Precision Adjustment	7-34

Chapter 8 MAINTENANCE	8-1
8.1 Regular Inspection	8-2
8.1.1 Inspection Before Starting, After Starting And End Of Daily Operation	8-2
8.1.2 Weakly, Monthly, Seasonal And Annual Inspection	8-4
8.2 Lubrication Method	8-5
8.3 Cleaning and Replacement Method	8-10
8.3.1 The Cleaning Of The Lubrication Oil Reservoir	8-10
8.3.2 Air Filter	8-12
8.3.3 Coolant Tank	8-14
8.3.4 Assembly Precautions After Cleaning Or Replacing	8-16
8.3.5 The Oil Cooler For The Spindle Cooling	8-17
8.4 The Disposal Of Waste Water, Oil, And Waste Material	8-20
Chapter 9 TROUBLESHOOTING	9-1
9.1 Troubleshooting For Circuit Control Parts	9-2
9.2 Pump installation and piping and trouble shooting	9-7
9.2.1 Installation And Piping	9-7
9.2.2 Operation And Important Notes	9-8
9.2.3 Trouble Shooting	9-9
Chapter 10 MAINTENANCE INFORMATION	10-1
Appendix 1. ASSEMBLY	A1-1
Appendix 2. PART LIST	A2-1
Appendix 3 TOOL DISK TYPE ATC SYSTEM	A3-1
Appendix 4. SPECIFICATION OF THE LIMITS OF THE MACHINE	A4-1