

VERTICAL MACHINING CENTER FNC40-A16 (FANUC SYSTEM 11)

INSTRUCTION MANUAL



**LEBLOND MAKINO
ASIA PTE.LTD**

2, Gul Avenue, Jurong Town, Singapore 2262.

Republic of Singapore

Tel: 8615722 Fax: 8611600

Telex: LEBASIA RS 24257

CONTENTS

1. SPECIFICATION	1-1
1.1 Introduction	1-1
1.2 Main Dimensions and Values	1-6
1.3 Standard Accessories	1-17
2. INSTALLATION	
2.1 Hoisting and Transporting the Machine	2-1
2.2 Foundation	2-2
2.3 Installation	2-2
2.4 Removal of Rust Preventive	2-8
2.5 Removal of Clamp Fixtures	2-8
2.6 A Lubricant Supply	2-13
2.7 Oil Supply to Hydraulic Unit	2-14
2.8 Preparations for Operations	2-16
2.9 Oil Supply to Oilmatic	2-18
3. OPERATING COMPONENTS	3-1
3.1 Machine Proper	3-1
3.2 Numerical Control Unit	3-22
4. OPERATIONS	4-1
4.1 Manual Operations	4-1
4.2 Automatic Operations	4-19
5. PROGRAMMING	5-1
5.1 Basic Machine Coordinates	5-3
5.2 Coordinate Language	5-5
5.3 Feed Functions	5-9
5.4 G Functions (Preparation Functions)	5-11
5.5 S Functions (Spindle Functions)	5-15
5.6 T Functions (Tool Functions)	5-16
5.7 M Functions (Auxiliary Functions)	5-17

6.	CHECK AT BEGINING OF DAILY WORK	6-1
6.1	Lubricant Tank	6-1
6.2	Oilmatic	6-1
6.3	Hydraulic Unit	6-1
6.4	Air Unit	6-1
6.5	ATC Unit	6-2
6.6	Emergency Stop Button	6-2
6.7	Reference Point Return	6-2
6.8	Others	6-2
7.	RUNNING-IN	7-1
7.1	Running-in of Spindle	7-1
7.2	Running-in of Axis	7-1
8.	PRECAUTIONS	8-1