

A large, stylized white graphic on an orange background, resembling a stylized 'M' or a series of overlapping curved lines.

Mazak


OPERATING MANUAL

for

**QUICK TURN
20/20H-P
(MAZATROL T PLUS)**

Manual No. : H341SG0013E

**OPERATING
MANUAL**

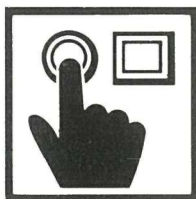

CONSTRUCTION

PART 1	PRELIMINARIES TO MACHINE OPERATION
Chapter 1.	INTRODUCTION
Chapter 2.	NOTES ON SAFETY
PART 2	MACHINE OPERATION
Chapter 1.	MACHINE OVERVIEW
Chapter 2.	OPERATION PANEL
Chapter 3.	MANUAL OPERATION
Chapter 4.	PREPARATION FOR MACHINING
PART 3	OPERATING NC UNIT AND PREPARATION FOR AUTOMATIC OPERATION
Chapter 1.	PREPARATION FOR AUTOMATIC OPERATION
Chapter 2.	DISPLAY OVERVIEW
Chapter 3.	DATA SETTING METHODS
Chapter 4.	DISPLAYS RELATED TO THE MACHINE OPERATIONAL STATUS
Chapter 5.	DISPLAYS RELATED TO MACHINING SET UP
Chapter 6.	DISPLAYS RELATED TO PROGRAM CREATION
Chapter 7.	DISPLAYS RELATED TO TOOLS
Chapter 8.	DISPLAYS RELATED TO PARAMETERS
Chapter 9.	DISPLAY RELATED TO DATA STORAGE
Chapter 10.	DISPLAYS RELATED TO DIAGNOSIS
PART 4	AUTOMATIC OPERATION
Chapter 1.	AUTOMATIC OPERATION EXECUTION
Chapter 2.	SELECTING EXECUTION CONDITIONS
Chapter 3.	CHANGING THE CUTTING CONDITIONS
Chapter 4.	STOPPING AUTOMATIC OPERATION
Chapter 5.	MANUAL INTERRUPTION
Chapter 6.	OPERATIONS POSSIBLE DURING AUTOMATIC OPERATION
Chapter 7.	COMPLETION OF OPERATION
PART 5	APPENDIX
Chapter 1.	STANDARD SPECIFICATION OF THE MACHINE

PART 1

PRELIMINARIES TO MACHINE OPERATION

CONTENTS

(PRELIMINARIES TO MACHINE OPERATION)

	Page
1. INTRODUCTION	1-1
1-1 List of Manuals to Be Used	1-1
1-2 Configuration	1-1
 2. NOTES ON SAFETY	 2-1
2-1 General	2-1
2-2 Basic Safety Items	2-2
2-3 Clothing and Personal Safety	2-3
2-4 Safety Items Related to Operation	2-3
2-5 Safety Items Related to Gripping Workpiece and Tooling	2-4
2-6 Safety Items Related to Maintenance	2-5
2-7 Safety Items Related to the Workplace	2-6
2-8 Safety Equipment	2-6
2-9 Safety Nameplates	2-6

PART 2

MACHINE OPERATION

CONTENTS

(MACHINE OPERATION)

	Page
1. MACHINE OVERVIEW	1-1
1-1 Coordinate Axes	1-1
1-2 Components Location	1-2
1-3 Functional Principle	1-4
1-4 Machine Control	1-5
2. OPERATION PANEL	2-1
2-1 Disposition of Switches and Indicator Lamps	2-1
2-2 Names and Functions of Keys, Buttons and Switches	2-3
2-3 Names and Functions of Indicator Lamps	2-9
2-4 Auxiliary Operation Panel	2-11
3. MANUAL OPERATION	3-1
3-1 Start of Operation	3-1
3-1-1 Inspection at the start of operation	3-1
3-1-2 Procedure for switching the power on	3-2
3-1-3 Inspection after switching the power on	3-4
3-2 Procedure for Zero-Point Return	3-5
3-3 Warmup Operation	3-7
3-4 Opening/Closing of Chuck	3-8
3-5 Spindle Operation	3-10
3-6 Rotation of Turret	3-13
3-7 X- and Z-Axes Feed Operation	3-14
3-7-1 X- and Z-axes rapid feed	3-15
3-7-2 X- and Z-axes cutting feed	3-16
3-7-3 X- and Z-axes manual pulse feed	3-18
3-8 Tailstock Operation	3-19
3-8-1 Checking before tailstock operation	3-19
3-8-2 Moving the tail spindle in the forward and reverse directions	3-21
3-8-3 Moving the tailstock body in the forward and reverse directions	3-22
3-8-4 Feed operations	3-24
3-9 Soft Limit	3-25
3-10 Other Manual Operations	3-26
3-10-1 MACHINE LOCK	3-26
3-10-2 COOLANT MNL. and WORK LIGHT	3-27
3-10-3 BARRIER CANCEL	3-27
3-11 SET UP Switch	3-28
4. PREPARATION FOR MACHINING	4-1
4-1 Mounting/Removal of Tools	4-1
4-2 Preparation for Gripping Workpiece (Soft Jaw Machining)	4-2
4-2-1 In the case of workpiece external gripping	4-3
4-2-2 In the case of workpiece internal gripping	4-4

PART 3

**OPERATING NC UNIT AND PREPARATION
FOR AUTOMATIC OPERATION**

<2-AXIS-SPECIFICATION>

CONTENTS

(OPERATING NC UNIT AND PREPARATION FOR AUTOMATIC OPERATION)

	Page
1. PREPARATION FOR AUTOMATIC OPERATION	
1-1 Preparation Steps for Automatic Operation	1-1
2. DISPLAY OVERVIEW	
2-1 Name of the Components of Each Display	2-1
2-2 Types of Displays	2-2
2-3 Configuration of Displays	2-3
2-3-1 DISPLAY GUIDANCE display	2-6
2-4 Windows	2-8
3. DATA SETTING METHODS	
3-1 Setting Data and Address	3-2
3-2 Selecting Menu Data	3-3
3-3 Erasing Data	3-4
3-4 Modifying Data	3-4
3-5 Incremental Input	3-4
4. DISPLAYS RELATED TO THE MACHINE OPERATIONAL STATUS	
4-1 POSITION Display	4-1
4-2 AUTO MEASURE Display	4-8
4-3 MONITOR Display	4-11
5. DISPLAYS RELATED TO MACHINING SET UP	
5-1 SET UP Display	5-1
5-2 GRAPHIC Display	5-16
5-3 SET UP RECORD Display	5-22
5-4 CHUCK JAW DATA Display	5-27
5-5 JAW CUT DATA Display	5-29
5-6 MANUAL MEASURE Display	5-33
6. DISPLAYS RELATED TO PROGRAM CREATION	
6-1 PROGRAM Display	6-1
6-2 SHAPE CHECK Display	6-2
6-3 TOOL PATH CHECK Display	6-4
6-4 PROCESS LAYOUT Display	6-7
6-5 TPC EDIT Display	6-15
6-6 PROGRAM FILE Display	6-18

7.	DISPLAYS RELATED TO TOOLS	
7-1	TOOL DATA (1) Display	7-1
7-2	TOOL DATA (2) Display	7-15
7-3	TOOL DATA (3) Display	7-27
7-4	TOOL FILE Display	7-31
7-5	TOOL OFFSET Display	7-33
7-6	TOOL LIFE Display	7-39
8.	DISPLAYS RELATED TO PARAMETERS	
8-1	CUTTING CONDITION (MATERIAL) Display	8-1
8-2	CUTTING CONDITION (TURNING) Display	8-5
8-3	USER PARAMETER Display	8-7
8-4	MACHINE PARAMETER Display	8-8
8-5	WORK OFFSET Display	8-9
8-6	Macro Variable Displays	8-14
9.	DISPLAY RELATED TO DATA STORAGE	
9-1	DATA I/O Display	9-1
10.	DISPLAYS RELATED TO DIAGNOSIS	
10-1	DIAGNOSIS (ALARM) Display	10-1
10-2	VERSION Display	10-4
10-3	PLC SIGNAL Display	10-5
10-4	LOAD MONITOR Display	10-6
10-5	MAINTENANCE CHECK Display	10-8
10-6	COUNTER Display	10-12
10-7	DIAGNOSIS (MONITOR) Display	10-13
10-8	ALARM HISTORY Display	10-17
10-9	OPTION Display	10-18

PART 4

AUTOMATIC OPERATION

CONTENTS

(AUTOMATIC OPERATION)

	Page
1. AUTOMATIC OPERATION EXECUTION	
1-1 Automatic Operation Execution Procedure	1-2
1-2 Types of Automatic Operation Mode	1-3
1-2-1 Auto mode operation	1-4
1-2-2 Restart mode operation	1-9
1-2-3 MDI operation	1-14
1-2-4 Single-process mode operation	1-15
2. SELECTING EXECUTION CONDITIONS	
2-1 Optional Stop	2-2
2-2 Dry Run	2-3
2-3 Machine Lock	2-5
2-4 Work Light	2-6
2-5 Barrier Cancel	2-6
2-6 Block Skip	2-7
2-7 Single Block	2-8
2-8 Coolant Automatic	2-9
2-9 Coolant Manual	2-10
2-10 Collation Stop	2-10
3. CHANGING THE CUTTING CONDITIONS	
3-1 Rapid Feed Override	3-1
3-2 Cutting Feed Override	3-2
3-3 Spindle/milling-spindle Override	3-3
3-4 VFC Function	3-4
4. STOPPING AUTOMATIC OPERATION	
4-1 Emergency Stop	4-1
4-2 Reset	4-2
4-3 Feed Hold	4-3
4-4 Stopping by Changeover to a Manual Operation Mode	4-3
4-5 Single-block Stop	4-4
4-6 Program Stop	4-5
4-7 Stopping by Turning the Power Off	4-5
5. MANUAL INTERRUPTION	
5-1 Handle Interruption	5-1
5-2 TPS Function	5-3

6.	OPERATIONS POSSIBLE DURING AUTOMATIC OPERATION	
6-1	Data Rewriting	6-1
7.	COMPLETION OF OPERATION	
7-1	Procedure for Switching the Power OFF	7-1
7-2	Cleaning and Inspections on Completion of Operation	7-1

PART 5

APPENDIX

CONTENTS

	Page
1. STANDARD SPECIFICATION OF THE MACHINE	1-1
1-1 Principle Specification	1-1
1-2 Spindle Nose	1-3
1-3 Spindle Speed - Motor Output Characteristic Curve	1-5
1-4 Program Diagram	1-8
1-5 Tooling	1-16
1-5-1 Tooling system	1-16
1-5-2 Interference chart	1-24
1-5-3 Cutting area	1-28
1-6 TOOL EYE	1-30
1-6-1 Interference chart between chuck and TOOL EYE	1-30
1-6-2 Relative dimensions between chuck and TOOL EYE	1-31

TOOL EYE

Manual No. : M147SA0050E

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical/Service Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personnel injuries or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical/Service Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical/Service Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical/Service Center with the manual No. or the machine name, serial No. and manual name.

Issued by *Manual Publication Section, Yamazaki Mazak Corporation, Japan*

CONTENTS

	Page
1. TOOL EYE OPERATION	1-1
1-1 Tool-Setting Measurement	1-1
1-2 Programmed Operation	1-3
1-2-1 Programming procedure	1-3
1-2-2 TPC (Tool Path Control) function	1-5
2. TOOL EYE PARAMETERS	2-1
3. PROGRAM EXAMPLES	3-1
4. DIMENSIONS RELATED TO CHUCK	4-1
4-1 QUICK TURN 8N	4-1
4-2 QUICK TURN 8N-SP	4-3
4-3 QUICK TURN 15N/18N	4-5
4-4 QUICK TURN 28N/30N	4-7
4-5 QUICK TURN 35N	4-9
5. DIMENSIONS RELATED TO I.D. TURNING TOOL	5-1
6. TOOL EYE DISASSEMBLY AND ASSEMBLY	6-1
6-1 Sensor Disassembly and Assembly	6-1
6-2 TOOL EYE Body Disassembly and Assembly	6-3
6-3 Troubleshooting	6-4
6-4 Alarm	6-12
6-5 TOOL EYE Air-Blow Control Circuit	6-13