



OPERATING INSTRUCTIONS
Universal Toolroom Milling and Drilling Machine

UWF 802 M

CNC Control Hermle HS 401

120.00 V01-00 E

Table Of Contents For The UWF 802 M

General 120.00 V01-00 E

Title Page	0 - 1
Introduction	0 - 2
Table of contents	0 - 3
Table of contents	0 - 4
Table of contents	0 - 5
Table of contents	0 - 6
Table of contents	0 - 7
Table of contents	0 - 8
Safety Instructions	0 - 9
Safety Instructions	0 - 9
Emergency Stop Button/end limits - manual inching/milling spindle-feed - motorprotection	0 - 10
Technical drawing of the UWF 802 M	0 - 11
Machine dimensions - space required	0 - 12
Machine dimensions - space required . (allround protection cabin)	0 - 13
Assembly instructions (allround protection cabin)	0 - 14
Assembly instructions (allround protection cabin)	0 - 15
Assembly instructions (allround protection cabin)	0 - 16
Assembly instructions (allround protection cabin)	0 - 17
Assembly instructions (allround protection cabin)	0 - 18
Technical details	0 - 18

Setting Up the UWF 802 M 120.00 V01-00 E

Preparation for transport	1 - 1
Transport instructions	1 - 2
Transport instructions	1 - 3
Instructions on setting up the machine	1 - 4
Receiving inspection - cleaning	1 - 5
Electrical connection	1 - 6

Control 120.00 V01-00 E

Control console	2 - 1
Enter keys	2 - 2
Enter keys	2 - 3
Display - command keys	2 - 4
Functional operator control keys	2 - 5
M-Functional operator keys	2 - 6
Softkeys - display field	2 - 7
NC Program Store - working storage	2 - 8
Display arrangement	2 - 9
Softkey menu set-up	2 - 10
Types of operation	2 - 11
Types of operation	2 - 12
Types of operation	2 - 13
Types of operation	2 - 14
Types of operation/ operator functions	2 - 15
Types of operation/ operator functions	2 - 16
Types of operation/ command set	2 - 17

Table Of Contents For The UWF 802 M

Types of operation/ command set	2 - 18
Types of operation/ command set	2 - 19
Types of operation/ command set	2 - 20
Types of operation/ command set input	2 - 21
Types of operation/ command set input	2 - 22
Types of operation	2 - 23
Types of operation/feed potentiometer/Switching On	2 - 24
Error message	2 - 25
Error message	2 - 26
Error message	2 - 27
Error message	2 - 28
Explanation of the machine data numbers	2 - 29
Explanation of the machine data numbers	2 - 30
Explanation of the machine data numbers	2 - 31
Explanation of the machine data numbers	2 - 32
Explanation of the machine data numbers	2 - 33
Machine data bits	2 - 34

Spindle Slide and Vertical Milling Head

General guide to operation	3 - 1
Swivelling the vertical milling head in- and outwards	3 - 2
Main drive	3 - 3
Speed selection	3 - 4
Gear diagram	3 - 5
Circulatory oil lubrication	3 - 6
Cooling lubricant- circulatory system	3 - 7
Points to be observed when using cooling lubricant	3 - 8
Vertical milling head with quill	3 - 9
Vertically positioning the vertical milling head	3 - 10
Tool mounting system	3 - 11
Tool mounting system - HERMLE ball chucking	3 - 12
Tool mounting system - HERMLE collet chucking	3 - 13
Tool mounting system - replacing the chuck	3 - 14
Tool mounting system - replacing the chuck	3 - 15
Scale drawing with arbour support 105.15	3 - 16

Table Of Contents For The UWF 802 M

Worktables

Angle Table - data sheet	4 - 1
Angle table - possible screw-on configurations	4 - 2
Universal workholding table (UWT) 103.14	4 - 3
UWT- technical details	4 - 4
UWT, attachment, pivoting, turning table surface	4 - 5
UWT, adjusting the horizontal and/or zero position load on table	4 - 6
UWT, dividing spindle / moving the worm in and out	4 - 7
UWT, readjusting the worm engagement / direct division set-up	4 - 8
UWT, indirect division set-up	4 - 9
UWT, alteration of the perforated plate in the handwheel with circular scale / clamping dividing spindle	4 - 10
UWT, interchanging the drawing-in thread in the dividing spindle	4 - 11
UWT, changing round plate, attachment of table	4 - 12
UWT, removal of table / possibilities of screwing the table plates	4 - 13
UWT, index table	4 - 14
UWT, index table	4 - 15
UWT, index table	4 - 16
UWT, index table	4 - 17
Vertical arbour support	4 - 18
Holding flange for the revolving chuck	4 - 19

Lubrication Instructions

Lubrication instructions for the UWF 802 M	5 - 1
Lubrication table	5 - 2

Table Of Contents For The UWF 802 M

Servicing and Maintenance

General information	6 - 1
Servicing and maintenance plan	6 - 2
Servicing and maintenance plan	6 - 3
Servicing and maintenance plan	6 - 4
Protective bellows - guideway stripper	6 - 5
Servicing of the vertical milling head	6 - 6
Servicing of the lubricating oil circulation	6 - 7
Servicing of the lubricating oil circulation	6 - 8
Servicing of the cooling lubricant circular lubrication	6 - 9
Servicing of the cooling lubricant circular lubrication	6 - 10
Servicing and fitting the v-belt drive	6 - 11
Servicing and fitting the v-belt drive	6 - 12
Servicing and fitting the v-belt drive	6 - 13
Breakdown of the v-belt drive	6 - 14
Servicing of the horizontal milling spindle	6 - 15
Servicing of the workpiece mounting system	6 - 16
Resetting the adjusting strips	6 - 17
Resetting the longitudinal spindle nut	6 - 18
Resetting the transverse spindle nut	6 - 19
Resetting the vertical taper drive	6 - 20
Central lubrication	6 - 21
Central lubrication	6 - 22
Hydraulic power pack	6 - 23
Servicing the hydraulic equipment	6 - 24
Servicing the feed motor/ tachogenerator	6 - 25

Table Of Contents For The UWF 802 M

Spare Parts Diagrams

Advice on ordering spare parts	7 - 1
Spindle slide	7 - 2
Spindle slide	7 - 3
Spindle slide	7 - 4
Spindle slide	7 - 5
Compensating device	7 - 6
Milling spindle, complete	7 - 7
Pivoting arm device	7 - 8
Arbour support with support bearing	7 - 9
Feed drive	7 - 10
Feed drive	7 - 11
Feed drive	7 - 12
Protective bellows - guideway stripper	7 - 13
Limit switch - measuring system, longitudinal	7 - 14
Limit switch - measuring system, transverse	7 - 15
Limit switch - measuring system, vertical	7 - 16
Central lubrication diagram	7 - 17
Hydraulics diagram	7 - 18
Hydraulics equipment list	7 - 19
Vertical milling head with quill, fine adjustment	7 - 20
Vertical milling head with quill, fine adjustment	7 - 21
Vertical milling head with quill, fine adjustment	7 - 22
Workholding table	7 - 23
Workholding table - slide	7 - 24
Universal workholding table	7 - 25
Universal workholding table	7 - 26
Circular lubrication and cooling lubricant circulation system	7 - 27

Appendix

Siemens - servo motors 1 HU 3

EWN 610.41179 / 21 b

Hawe Hydraulics E 6900

Hawe Hydraulics E 7470 N

Hawe Hydraulics E 7470 A

Hawe Hydraulics E 7470 B

Hawe Hydraulics E 7362

Spare parts list:

High-pressure pumps power pack HP O 5 271 975 4 284 885 pages 1+2

Basic module 393956

3/2-way valves 393957

End plate 393958