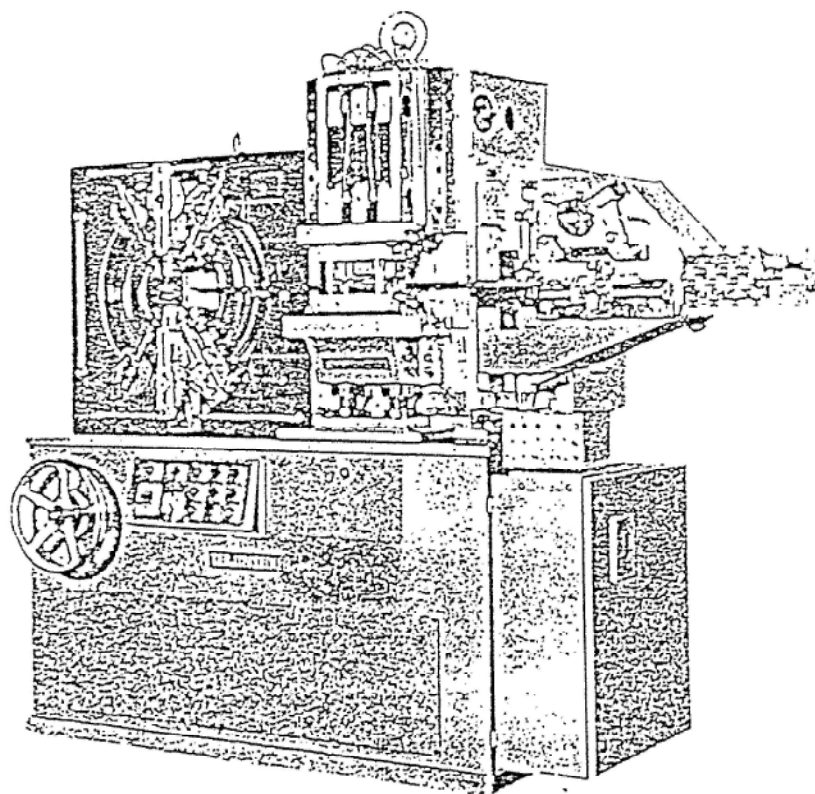

MULTI-FORMING MACHINE
PROFORMA-200-15
OPERATION INSTRUCTIONS



TEIJIN SEIKI
PRECISION CO., LTD

CONTENTS

No.	Item	Page
1.	Features	4
2.	Main specifications	6
3.	Installation	7
	3.1. Unpacking and hanging the machine	7
	3.2. Foundation	7
	3.3. Test run	8
4.	Operation	10
	4.1. Preparation prior to operation	10
	4.1.1. Checking of machine	10
	4.1.2. Checking of lubrication	10
	4.1.3. Checking of compressed air	10
	4.1.4. Checking of electric equipment	11
	4.2. Routine work	12
	4.2.1. Control panel	12
	4.2.2. Order of operation	15
	4.2.3. Caution for operations	16
5.	Adjustment	19
	5.1. Zero position (initial position)	19
	5.2. Driving device	21
	5.2.1. Air clutch with brake	23
	5.2.2. Non-step speed changing pulley	25
	5.2.3. Instruments for compressed air	27
	5.2.4. Chain tension	30
	5.3. Feed device	30
	5.3.1. Feed adjustment	32
	5.3.2. Adjustment of gripper	37
	5.3.3. Adjustment of each part	39
	5.4. Stamping device	40
	5.5. Bending slide	42
	5.6. Rear cam device	44
	5.7. Air ejector	45
	5.8. Straightener	46

6. Maintenance and checking	48
6.1. Maintenance and checking	48
6.2. Checking of lubrication	49
6.3. Spare parts	50
7. Accessories	52
7.1. Regular accessories	52
7.2. Extra accessories	54
8. Attached drawings	
8.1. Outline drawing	55
8.2. Foundation drawing	56
8.3. Compressed air circuit drawing	57
8.4. Lubrication connection diagram	58
8.5. In-panel diagram drawing	59
8.6. Development connection drawing	60
8.7. Back- panel wiring diagram drawing	61
8.8. In-machine wiring diagram drawing	62
8.9. Die set dimension 15 ton	63
8.10. Die set dimensions	64