


PRECISION HIGH SPEED LATHE

INSTRUCTION AND SPARE PARTS MANUAL

MODEL : TC 17"×30"、17"×40"、17"×60"
TC 20"×30"、20"×40"、20"×60"

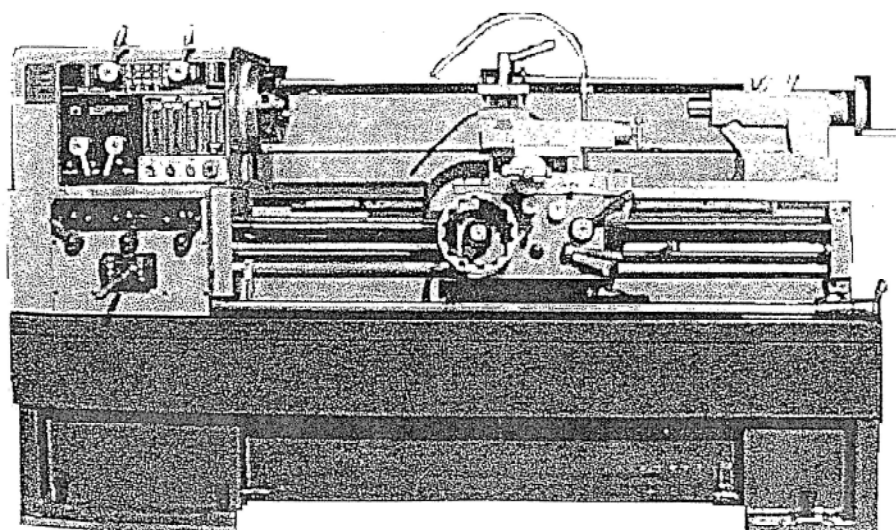

MICROCUT

BUFFALO MACHINERY CO.,LTD.
P.O. BOX 320 TA YA, TAICHUNG COUNTY, TAIWAN, R.O.C.
PHONE: 886-4-25603759 FAX: 886-4-25603769
E-mail: paul@mail.buffalo.com.tw

INDEX

CHAPTER 1 GENERAL INSTRUCTION

- MOVING THE MACHINE..... 4
- FOUNDATION PLAN..... 4
- CLEANING..... 5
- ELECTRICAL SUPPLY CONNECTION..... 5
- LUBRICATION CHECKS..... 6
- ELECTRICAL COMPONENT LIST..... 7~9
- CHUCK AND CHUCK MOUNTING..... 10

CHAPTER 2 OPERATION

- LATHE CONTROL..... 11
- HEADSTOCK SELECTORS..... 13
- THREADS AND FEEDS..... 13
- APRON CONTROL..... 14
- THREADING DIAL INDICTAOR..... 15
- CROSS-SLIDE AND TOPSLIDE..... 16
- TAILSTOCK..... 16
- END GEAR TRAINS..... 17
- DRIVING BELTS..... 17

CHAPTER 3 SPARE PARTS (ILLUSTRATED)

CHAPTER 4 PART NUMBER AND PART NAME