

# User's Manual

English - Pages 50 - 83

MANUAL No. 4655

## Linear Scale AT25

**Mitutoyo**

# CONTENTS



- SERVICE FACILITY AND WARRANTY ..... i**
  
- 1. INTRODUCTION ..... 50**
  - 1.1 Preface ..... 50
  - 1.2 Configuration of the AT25 System ..... 50
  - 1.3 Part Names ..... 51
  
- 2. INSTALLATION PREPARATIONS ..... 52**
  - 2.1 Confirming the Scale Size ..... 52
  - 2.2 Scale Unit Mount and Scale Unit Positions ..... 53
  - 2.3 Notes on the Signal Cable Layout ..... 55
  - 2.4 Design and Fabrication of Brackets and Covers ..... 56
  
- 3. INSTALLATION ..... 58**
  - 3.1 Installation Procedure ..... 58
  - 3.2 Installing Operations ..... 59
    - 3.2.1 Establishing the mounting surfaces for the main scale and detecting head ..... 59
    - 3.2.2 Selecting the head cable outlet position ..... 61
    - 3.2.3 Mounting the main scale ..... 62
    - 3.2.4 Mounting the detecting head ..... 65
    - 3.2.5 Cable layout ..... 68

# CONTENTS

3.2.6	Mounting the protective covers .....	70
3.3	Operation Check of the Scale Unit .....	70
<b>4.</b>	<b>MAINTENANCE .....</b>	<b>72</b>
4.1	Maintenance of the Scale Unit .....	72
4.2	Periodic Operation Check .....	72
4.3	Periodic Mounting Condition Check .....	72
4.4	Maintenance of Rubber Lips .....	72
<b>5.</b>	<b>SPECIFICATIONS .....</b>	<b>74</b>
5.1	Scale Unit Specifications .....	74
5.2	Dimensions and Mounting Positions of the AT25 Scale Unit .....	77
<b>6.</b>	<b>REFERENCE .....</b>	<b>78</b>
6.1	Designing the Scale Unit Mounting Surface .....	78
6.2	Designing the Brackets .....	79
6.3	Designing the Cover .....	82
6.3.1	The purpose of mounting covers .....	82
6.3.2	Notes on designing the covers .....	82