

USER'S INSTRUCTIONS FOR BALANCING MACHINE

MODEL : BM 10



HANBANDO MFG. CO.

CONTENTS

1. General Description
 - 1-1) Detecting the Unbalance
 - 1-2) Read Out
 - 1-2-1) Amount of the Unbalance
 - 1-2-2) Angular Location
 - 1-3) Measurement
 - 1-4) Driving System
2. Structure
 - 2-1) General Structure
 - 2-2) Operating Elements and Their Function
 - 2-2-1) Electronic Unit
 - 2-2-2) Driving Unit
 - 2-2-3) Work Supports
3. General Specifications
 - 3-1) Standard Specification
 - 3-2) Optional Specification
4. Installation Instructions
 - 4-1) Foundations
 - 4-2) Electrical Connections
 - 4-3) Machine Connection
5. Measurement and Correction of the Unbalance
 - 5-1) Preliminary Test
 - 5-2) Measurement Preparation
 - 5-3) Two Plane Correction
 - 5-4) Single Plane Correction
 - 5-5) Preliminary Measurements of Heavy Unbalance
 - 5-6) Balancing of Rotors which Incur Large Wind Loss (eg. Blowers, Fans, Impellers Etc)

- 5-7) Partial Forces Correction
- 5-8) Measuring Rotational Speed Range
- 5-9) Relationship Between Meter Indication, Unbalance and Rotational Speed.

6. Correction Plane Separation

- 6-1) Circuit of Correction Plane Separation
- 6-2) Procedure of Correction Plane Separation

7. Permissible Tolerance of the Unbalance

- 7-1) Permissible Tolerance and Related Regulations of the Unbalance
- 7-2) Calculation of the Unbalance Tolerance
- 7-3) Examples of calculating the Unbalance Tolerance

8. Trouble Shooting and Correction

9. Useful Information

- 9-1) Balancing of the Drive Shaft
- 9-2) Calibration of the Indexing Angle Plate

10. Representation of the Unbalance