

PROVISOR TC200 INSTRUCTION MANUAL

May 1994

These technical data and information are subject to the Foreign Exchange and Foreign Trade Control Law of Japan, and the sale or supply thereof is required to be approved under such law.
Purchaser shall not disclose or transfer these technical data or information to third parties without the prior written permission of Toshiba Machine Co., Ltd.

TOSHIBA MACHINE CO., LTD.

TOSHIBA MACHINE CO., LTD.

Table of Contents

	Page
Introduction	3
1. Special Cautions	3
2. System Configuration	6
2.1 Basic Rack Configuration	6
2.2 Configuration by Connecting Extension I/O Rack	7
2.3 General System Configuration by Connecting Communication Module	8
3. Specifications	9
3.1 General Specifications	9
3.2 Performance Specifications	10
3.3 Input/Output Module Specifications	14
3.4 Direct Access Module Specifications	30
4. Outer Dimensions	34
4.1 Basic Rack and Remote I/O Rack	34
4.2 Extension I/O Rack	34
4.3 Various Units and Modules	35
5. Configuration and Function of Each Module	40
5.1 Power Supply Module	40
5.2 CU Module	45
5.3 I/O Module	53
6. Installation	64
6.1 Cautions on Installation	64
6.2 Installing Procedures	65
6.3 Installing Rack in Machine Control Unit (MCU)	66
7. Wiring	67
7.1 Cautions on Wiring	67
7.2 Wiring to Basic Power Supply Module	69
7.3 Wiring to Extension Power Supply Module	71
7.4 Wiring to I/O Module	73

	Page
8. Operation.....	74
8.1 Confirmation before Shakedown Operation.....	74
8.2 Procedures for Shakedown Operation.....	75
9. Maintenance and Check	76
9.1 Daily Check.....	76
9.2 Battery Replacement.....	77
9.3 Fuse Replacement.....	78
9.4 Check Points at Generation of Abnormality.....	79