

**TMW**

# **MANUAL**

MICRO-CELL 4-AXIS CONTROL COMPACT TYPE  
CNC PRECISION TURNING CENTER

## **TNC-LM5**

Instruction Manual

**TAKAHASHI MACHINERY Co., LTD.**

株式会社 **タカハシキカイ**

# Table of Contents

## Chap. 1 SAFETY PRECAUTIONS

1-1	Basic Safety Precautions .....	1- 1
1-2	Hazardous Area .....	1- 4
1-3	Protective Components .....	1- 6
1-3-1	Location of Protective Components and Interlocks .....	1- 7
1-3-2	Functions of Protective Components and Interlocks .....	1- 8
1-3-3	Location of Keys for Protective Components .....	1-10
1-4	Precaution Labels .....	1-11
1-4-1	Warning Labels .....	1-11
1-4-2	Location of Warning Labels .....	1-13
1-4-3	Machine Labels .....	1-14
1-4-4	Location of Machine Labels .....	1-14
1-5	Safety Precautions .....	1-15
1-5-1	General .....	1-15
1-5-2	Installation .....	1-17
1-5-3	Turning on Power .....	1-18
1-5-4	Setup .....	1-19
1-5-5	Operation .....	1-19
1-5-6	Closing-down .....	1-21
1-5-7	Maintenance .....	1-21

## Chap. 2 SPECIFICATIONS

2-1	Machine Specifications .....	2- 1
2-1-1	Machine Specifications .....	2- 1
2-1-2	Accessories .....	2- 2
2-2	NC Unit Specifications (FANUC Series 18-TC) .....	2- 4
2-2-1	Standard Specifications .....	2- 4
2-2-2	Optional Specifications .....	2- 5

2-3	G Codes .....	2- 6
2-4	M Codes .....	2-10

## Chap. 3 OUTLINE

3-1	Features .....	3- 1
3-2	Name of Each Component.....	3- 2

## Chap. 4 FUNCTIONS OF OPERATING SECTION

4-1	Operation Panels .....	4- 1
4-1-1	Layout of Operation Panels .....	4- 1
4-1-2	Functions of Operation Panels.....	4- 2
4-2	Control Panel .....	4-17
4-2-1	Layout of Control Panel .....	4-17
4-2-2	Functions of Control Panel.....	4-17

## Chap. 5 PREPARATION

5-1	Safety Precautions .....	5- 1
5-1-1	Power ON/OFF .....	5- 1
5-2	Turning Power ON/OFF .....	5- 2
5-2-1	Inspection before Power ON .....	5- 2
5-2-2	Power ON/OFF Procedure .....	5- 3
5-2-3	Inspection after Power ON .....	5- 6

## Chap. 6 MANUAL OPERATION

6-1	Safety Precautions .....	6- 1
6-2	Manual Operation Procedure .....	6- 3
6-2-1	Name and Direction of Each Axis .....	6- 3
6-2-2	Reference Point Return .....	6- 4
6-2-3	Handle Feed .....	6- 6

6-2-4	Jog Feed .....	6- 8
6-2-5	C-Axis Connection .....	6- 9
6-2-6	Turret Operation .....	6-10
6-2-7	Spindle Rotation .....	6-11
6-2-8	Tool Spindle Rotation .....	6-13

## Chap. 7 SETUP

7-1	Safety Precautions .....	7- 1
7-2	Mounting Cutting Tools .....	7- 3
7-3	Tool Offset .....	7- 6
7-4	Adjustment of Coolant Discharge and Direction .....	7-12

## Chap. 8 MDI OPERATION

8-1	Safety Precautions .....	8- 1
8-2	MDI Operation Procedure .....	8- 2

## Chap. 9 AUTOMATIC OPERATION

9-1	Safety Precautions .....	9- 1
9-2	Operation Prior to Automatic Operation .....	9- 3
9-3	Preparation of Program .....	9- 5
9-3-1	Inputting Program .....	9- 5
9-3-2	Editing Program .....	9- 7
9-3-3	Deleting Program .....	9-10
9-4	Automatic Operation Procedure .....	9-11
9-4-1	Test Run .....	9-11
9-4-2	Continuous Operation .....	9-17
9-4-3	Feed Hold and Restart of Automatic Operation .....	9-19
9-5	Tool Wear Offset Data Setting .....	9-20

## Chap. 10 MAINTENANCE

10-1	SAFETY PRECAUTIONS .....	10- 1
10-2	Periodic Inspection .....	10- 3
10-2-1	Daily Maintenance and Inspection .....	10- 3
10-2-2	Monthly Maintenance and Inspection .....	10- 4
10-2-3	Yearly Maintenance and Inspection .....	10- 5
10-3	Lubrication .....	10- 6
10-4	Resetting Overtravel .....	10- 7
10-5	Troubleshooting .....	10- 9

## Chap. 11 INSTALLATION

11-1	SAFETY PRECAUTIONS .....	11- 1
11-2	Working Environment .....	11- 2
11-2-1	Installation Site .....	11- 2
11-2-2	Power Source .....	11- 2
11-2-3	Air Source .....	11- 2
11-3	Foundation .....	11- 3
11-3-1	Concrete Foundation Thicker than 200 mm .....	11- 3
11-3-2	Concrete Foundation of 100 mm in Thickness on Rubble .....	11- 4
11-4	Hoisting Machine .....	11- 5
11-4-1	Hoisting by Crane .....	11- 5
11-5	Removing Slide Fixtures and Wooden Block .....	11- 7
11-6	Leveling .....	11- 8
11-7	Connection of Air Source .....	11- 9
11-8	Power Connection and Grounding .....	11-10
11-8-1	Power Connection .....	11-10
11-8-2	Grounding .....	11-11

11-9	Connecting Machine to Peripheral Equipment .....	11-12
11-9-1	Connecting Hydraulic Unit .....	11-12
11-9-2	Connecting Coolant Unit.....	11-13

## Chap. 12 DISPOSAL

12-1	Disposal of Machine .....	12- 1
------	---------------------------	-------

## Chap. 13 APPENDIX

Fig.4	Hydraulic Unit / Coolant Unit Dimensional Drawing for Installation .....	13- 3
Fig.5	Turret Head Dimensional Drawing.....	13- 4
Fig.6	C-Type Headstock Spindle Nose Dimensional Drawing (Standard).....	13- 5
Fig.7	E-Type Headstock Spindle Nose Dimensional Drawing (Optional : E-ADBB) .....	13- 6
Fig.8	C-Type Headstock Tooling Zone (Standard) .....	13- 7
Fig.9	E-Type Headstock Tooling Zone (Optional : E-ADBB) .....	13- 8
Fig.10	Tooling System Diagram.....	13- 9
Fig.11	Vertical Tool Holder (sq. 20) .....	13-10
Fig.12	Horizontal Tool Holder (sq. 20) .....	13-10
Fig.13	Vertical / Horizontal Optional Tool Holder (sq. 20) .....	13-11
Fig.14	Boring Bar Holder ( $\phi$ 25).....	13-12
Fig.15	Boring Bar Holder ( $\phi$ 32).....	13-12
Fig.16	O.D. Drill Unit.....	13-13
Fig.17	Face Drill Unit .....	13-13
Fig.18	Main Operation Panel Layout .....	13-14
Fig.19	Right- / Left-Hand Operation Panel Layout .....	13-14
Fig.20	Hydraulic Circuit Diagram .....	13-15