

OPERATION MANUAL

MACHINING CENTER

MC1510



MAKINO MILLING MACHINE CO., LTD.

MC 1510
SPECIFICATIONS

CONTENTS

	Page
1. INTRODUCTION	A - 1
1.1 General View of Machine and Name of Each Part	A - 1
1.2 Outline of Each Section	A - 2
2. MAIN DIMENSIONS AND VALUES	A - 8
2.1 Machine Proper	A - 8
2.2 NC Unit	A - 11
2.2.1 FANUC SYSTEM 6MB	A - 11
2.2.2 FANUC SYSTEM 9	A - 15
3. OPTIONAL ACCESSORIES	A - 21
4. MAIN DIMENSIONS	A - 23
4.1 Outer Dimension Diagram	A - 23
4.2 Arrangement Diagram	A - 24

MC 1510
INSTALLATION

CONTENTS

	Page
1. LOCATION	B - 1
2. OUTER DIMENSION AND ARRANGEMENT DIAGRAMS	B - 1
3. POWER AND AIR SOURCE	B - 1
4. FOUNDATION	B - 2
5. HOISTING	B - 4
5.1 Hoisting the Front Bed	B - 4
5.2 Hoisting the Rear Bed, Column and ATC	B - 6
5.3 Hoisting the Coolant Tank	B - 8
5.4 Hoisting the NC Unit	B - 8
5.5 Hoisting the Lift-up Chip Conveyor	B - 9
6. INSTALLATION	B - 10
6.1 Installation of Machine	B - 10
6.2 Assembling on Column	B - 11
7. PIPING AND WIRING	B - 13
7.1 Hydraulic Piping	B - 13
7.2 Air and Lubricant Piping	B - 14
7.3 Connection of Air Source	B - 15
7.4 Piping of Coolant Tank	B - 15
7.5 Automatic Spindle Lubricant Temperature Regulator	B - 17
7.6 Wiring	B - 18
7.7 Connection of Power Supply	B - 22
8. OIL SUPPLY	B - 24
8.1 Lubricant	B - 24
8.2 Hydraulic Oil	B - 30
8.3 Coolant	B - 31
9. PREPARATIONS FOR OPERATION	B - 32
9.1 Removing the Rust Preventive	B - 32
9.2 Removing the clamp	B - 32
10. TURNING POWER ON	B - 37
11. LEVELING	B - 39

MC 1510
OPERATION

MC 1510

MACHINE PROPER

CONTENTS

	Page
1. ARRANGEMENT OF CONTROL UNIT AND CONTROL PANEL	C - 1
2. SAFETY PRECAUTIONS	C - 2
3. HANDLING OF MAIN SECTIONS	C - 4
3.1 Power Switch (Fig. 3.1)	C - 4
3.1.1 Main power switch (No-fuse Breaker)	C - 4
3.2 Main Control Panel	C - 5
3.2.1 Overview	C - 5
3.2.2 Power on status	C - 6
3.2.3 Display and switches	C - 7
3.2.4 Data input with ten key switches	C - 37
3.3 Manual Pulse Generator (Option)	C - 45
4. EMERGENCY STOP AND STOP WITH ALARM	C - 47
4.1 Emergency Stop	C - 47
4.2 Reset of Emergency Stop	C - 47
4.3 Stop by Alarm	C - 49
4.4 Power Out	C - 49
5. START OF DAILY WORK	C - 50
6. OPERATION	C - 53
6.1 Manual Operation	C - 54
6.1.1 Manual axis feed	C - 54
6.1.2 Manual zero return	C - 57
6.2 Automatic Operation	C - 60
6.2.1 Automatic operation mode	C - 60
6.2.2 Preparations for automatic operations	C - 61
6.2.3 Starting the automatic operations	C - 63
6.2.4 Automatic operations	C - 64
6.2.5 Stop and restart of automatic operations	C - 67
6.2.6 Intervention during automatic operations	C - 73
6.2.7 End of automatic operations	C - 75

7.	LUBRICANT AND HYDRAULIC OIL	C - 76
7.1	Lubricant	C - 76
7.2	Hydraulic Oil	C - 77
8.	STOP OF DAILY WORK	C - 77
8.1	Power Cut-off.....	C - 77
8.2	Cleaning	C - 77
8.3	Air Pressure Cut-off	C - 77

MC 1510
SPINDLE HEAD

CONTENTS

	Page
1. NAME OF EACH PARTS	D - 1
2. HANDLING OF MAIN SECTIONS	D - 2
2.1 Main Control Panel	D - 2
2.2 Sub Control Panel	D - 10
2.3 Manual Rotation of Spindle	D - 11
3. SPINDLE OPERATIONS	D - 12
3.1 Start and Stop	D - 12
3.2 Spindle Speed Change	D - 14
3.3 Spindle Speed Override	D - 16
3.4 Spindle Orientation	D - 16
4. SPINDLE LOAD DISPLAY	D - 17
5. LUBRICATION	D - 17

MC 1510

ATC UNIT

CONTENTS

	Page
1. NAME OF EACH PARTS	E - 1
2. HANDLING OF MAIN SECTIONS	E - 2
2.1 Main Control Panel	E - 2
2.2 ATC Magazine Control Panel	E - 12
2.3 Manual Switches for Maintenance	E - 14
2.4 Loading to Tool Magazine	E - 19
2.5 Limit of Tool Weight and Size	E - 19
3. OPERATION	E - 21
3.1 Stand-by of Automatic Tool Changer (ATC Unit)	E - 21
3.2 Registering the Tool Numbers	E - 21
3.2.1 Sequential registering from pot No. 01	E - 22
3.2.2 Registering only the tool Nos. of particular pots ...	E - 26
3.3 Call of Tool	E - 29
3.3.1 Tool call by designating tool No.	E - 29
3.3.2 Tool call by designating tool pot No.	E - 35
3.4 Automatic Tool Change	E - 37
3.4.1 Automatic tool change with ten key switches or MDI proceed as follows	E - 37
3.4.2 Automatic tool change with tape or memory operation .	E - 37
4. RESET OF EMERGENCY STOP DURING ATC OPERATION	E - 40
4.1 When the ATC Arm Stops in S/G	E - 41
4.1.1 When the ATC arm stops in OUT condition	E - 41
4.1.2 When the ATC arm stops in IN condition	E - 42
4.2 When the ATC Arm Stops Outside S/G	E - 43
4.2.1 When the ATC stops in OUT condition	E - 43
4.2.2 When the ATC arm stops in IN condition	E - 44

MC 1510

PALLET CHANGER

CONTENTS

	Page
1. INTRODUCTION	F - 1
2. NAME OF EACH PART	F - 2
3. PALLET CHANGE OPERATIONS OF PALLET CHANGER	F - 3
3.1 Carrying-in Operations	F - 3
3.2 Carrying-out Operations	F - 3
4. CONTROL PANELS	F - 7
4.1 Main Control Panel	F - 7
4.1.1 Program number display switch	F - 7
4.2 Pallet Changer Control Panel	F - 9
4.2.1 Emergency stop switch	F - 9
4.2.2 Automatic operation halt switch	F - 9
4.2.3 Manual mode selector switch	F - 9
4.2.4 Ready switches	F - 9
4.2.5 Rotary stoker number selector switches	F - 12
4.3 Manual Control Panel for Maintenance of Pallet Changer ..	F - 13
4.3.1 MANUAL SWITCH	F - 14
4.3.2 CARRIER	F - 14
4.3.3 HOOK	F - 14
4.3.4 PALLET	F - 14
4.3.5 Setting for pallet carrying	F - 15
5. OPERATIONS	F - 18
5.1 Program	F - 18
5.1.1 When continuously performing the same machining ..	F - 18
5.1.2 When continuously performing two kinds of machining processes	F - 18
5.2 Operations	F - 20
5.2.1 When starting from pallet carrying-in	F - 20
5.2.2 When starting from pallet carrying-out	F - 21

6.	PALLET CHANGER WITH RANDOM PROGRAM CALL	F - 22
6.1	Introduction	F - 22
6.2	Control Panel	F - 22
6.2.1	Work data display switch	F - 23
6.2.2	Random operation mode selector switch	F - 23
6.3	Operations of Random Pallet Changer	F - 24
6.3.1	When starting from pallet carrying-in	F - 24
6.3.2	When starting from pallet carrying-out	F - 25
6.4	Program for Random Pallet Changer	F - 25
6.5	Registering of Work Data	F - 25
6.6	Operations	F - 27
6.7	Operation Mode Change	F - 28
6.8	Spare Tool Selection	F - 30