

A large, stylized white graphic on an orange background, resembling a stylized 'M' or a series of overlapping curved lines.

Mazak

OPERATING MANUAL

for

QUICK TURN NEXUS

200-II/250-II

MANUAL No. : H321SG0021E

**OPERATING
MANUAL**



OPERATING MANUAL

for

QUICK TURN NEXUS 200-II/250-II

MANUAL No. : H321SG0021E

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical Center or Technology Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical Center or Technology Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical Center or Technology Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical Center or Technology Center with the manual No. or the machine name, serial No. and manual name.

Issued by *Manual Publication Section, Yamazaki Mazak Corporation, Japan*

CONSTRUCTION

Part 1 PRELIMINARIES TO MACHINE OPERATION

Chapter 1 INTRODUCTION

Chapter 2 SAFETY PRECAUTIONS

Part 2 MACHINE OPERATION

Chapter 1 MACHINE OVERVIEW

Chapter 2 OPERATING PANEL AND FUNCTIONS OF SWITCHES

Chapter 3 PREPARATION FOR OPERATION

Chapter 4 MANUAL OPERATION

Chapter 5 PREPARATION FOR MACHINING

Part 3 OPERATING NC UNIT AND PREPARATION FOR AUTOMATIC OPERATION

Chapter 1 PREPARATION FOR AUTOMATIC OPERATION

Chapter 2 DISPLAY OVERVIEW

Chapter 3 DATA SETTING METHODS

Chapter 4 DISPLAYS RELATED TO THE MACHINE OPERATIONAL STATUS

Chapter 5 DISPLAYS RELATED TO MACHINING SET UP

Chapter 6 DISPLAYS RELATED TO PROGRAM CREATION

Chapter 7 DISPLAYS RELATED TO TOOLS

Chapter 8 DISPLAYS RELATED TO PARAMETERS

Chapter 9 DISPLAY RELATED TO DATA STORAGE

Chapter 10 DISPLAYS RELATED TO DIAGNOSIS

Part 4 AUTOMATIC OPERATION

Chapter 1 AUTOMATIC OPERATION EXECUTION

Chapter 2 SELECTING EXECUTION CONDITIONS

Chapter 3 CHANGING THE CUTTING CONDITIONS

Chapter 4 STOPPING AUTOMATIC OPERATION

Chapter 5 MANUAL INTERRUPTION

Chapter 6 OPERATIONS POSSIBLE DURING AUTOMATIC OPERATION

Chapter 7 COMPLETION OF OPERATION

Part 5 APPENDIX

Chapter 1 STANDARD SPECIFICATION OF THE MACHINE

PART 1

PRELIMINARIES TO MACHINE OPERATION

CONTENTS

	Page
1 INTRODUCTION	1-1
1-1 List of Manuals to Be Used.....	1-1
1-2 Numbering System for Pages.....	1-1
1-3 Numbering System for Figures and Tables	1-1
1-4 Distinction between Standard and Optional Specifications.....	1-2
2 SAFETY PRECAUTIONS.....	2-1
2-1 Rule	2-1
2-2 Basic Safety Items.....	2-1
2-3 Clothing and Personal Safety	2-3
2-4 Safety Items Related to Operation	2-4
2-5 Safety Items Related to Gripping Workpiece and Tooling	2-6
2-6 Safety Items Related to Maintenance.....	2-7
2-7 Safety Items Related to Workplace	2-8
2-8 Safety Items Related to Chip Conveyor.....	2-9
2-9 Safety Equipment	2-9
2-10 Remarks on the Cutting Conditions Recommended by the NC.....	2-9
2-11 Safety Nameplates	2-10
2-12 Location and Function of Safety Devices	2-13

PART 2

MACHINE OPERATION

CONTENTS

Page

1	MACHINE OVERVIEW	1-1
1-1	Features	1-1
1-2	Overview of Mechanisms	1-2
1-3	Overview of Control System	1-3
1-4	Disposition of Machine Components	1-4
1-5	Coordinate Axes	1-5
2	OPERATING PANEL AND FUNCTIONS OF SWITCHES	2-1
2-1	Layout of Operating Panels	2-1
2-2	NC Operating Panel and Machine Operating Panel	2-2
2-2-1	Disposition of switches and lamps	2-2
2-2-2	Controls on the NC operating panel	2-3
2-2-3	Indicator lamps on the operating panel	2-5
2-2-4	Status indicator window	2-6
2-3	Machine Operating Panel	2-7
2-4	Auxiliary Operating Panel	2-9
2-5	USB Interface Panel	2-10
3	PREPARATION FOR OPERATION	3-1
3-1	Inspection at the Start of Operation	3-1
3-2	How to Stop the Machine	3-2
3-2-1	How to stop the machine in emergencies	3-2
3-2-2	Other stopping methods	3-2

3-3	Procedure for Switching the Power ON	3-2
3-4	Inspection after Switching the Power ON	3-4
3-5	Switching the Power OFF	3-5
3-6	Zero-Point Return	3-5
3-6-1	Axis zero point return procedure.....	3-6
3-7	Warmup Operation	3-7
3-8	Opening the Front Door.....	3-7
3-9	Opening/Closing of Chuck.....	3-8
4	MANUAL OPERATION.....	4-1
4-1	Manual Operation Modes	4-1
4-1-1	Selecting a manual operation mode	4-1
4-2	Spindle Operation.....	4-1
4-2-1	Spindle start.....	4-1
4-2-2	Spindle stop	4-3
4-2-3	Spindle jog	4-3
4-3	X- and Z-Axis Feed Operation	4-3
4-3-1	Rapid feed	4-4
4-3-2	Cutting feed	4-5
4-3-3	Pulse feed.....	4-6
4-3-4	BARRIER CANCEL	4-7
4-4	Tool Selection.....	4-8
4-4-1	Rotation of turret.....	4-8
4-5	Tailstock Operation.....	4-9

4-5-1	Display and selection of tailstock thrust.....	4-9
4-5-2	Moving the tailstock	4-10
4-6	Other Manual Operations	4-11
4-6-1	Soft limit and its release.....	4-11
4-6-2	MACHINE LOCK	4-12
4-6-3	WORK LIGHT and COOLANT MANUAL.....	4-12
4-6-4	Machine set up switch	4-13
4-6-5	Manual operation of parts catcher (Option)	4-14
4-6-6	Manual operation of the automatic door (Option)	4-14
5	PREPARATION FOR MACHINING	5-1
5-1	Mounting of Tools	5-1
5-1-1	Mounting/removal of tool holder and tools.....	5-1
5-1-2	Heavy tool layout	5-4
5-2	Preparation for Gripping Workpiece (Soft Jaw Machining).....	5-6
5-2-1	In the case of workpiece external gripping	5-6
5-2-2	In the case of workpiece internal gripping	5-8
5-3	Notes on the Diameter Turned	5-10
5-3-1	For a diameter turned up to 150 mm (5.91 in.).....	5-10
5-3-2	For a diameter turned over 150 mm (5.91 in.).....	5-10
5-4	Useful Information	5-11
5-4-1	Specifying tailstock positions	5-11
5-4-2	Automatic operation of the tailstock.....	5-12
5-4-3	Precautions for using the tailstock	5-16
5-4-4	Energy saving mode	5-17

PART 3

OPERATING NC UNIT AND PREPARATION FOR AUTOMATIC OPERATION

(for Turning Machines)

CONTENTS

	Page
1 PREPARATION FOR AUTOMATIC OPERATION	1-1
1-1 Preparation Steps for Automatic Operation	1-1
2 DISPLAY OVERVIEW	2-1
2-1 Name of the Components of Each Display	2-1
2-2 Types of Displays	2-3
2-3 Configuration of Displays.....	2-4
2-3-1 DISPLAY MAP display.....	2-6
2-4 Windows.....	2-7
3 DATA SETTING METHODS.....	3-1
3-1 Setting Data and Address.....	3-2
3-2 Selecting Menu Data	3-3
3-3 Erasing Data.....	3-3
3-4 Modifying Data	3-4
3-5 Incremental Input.....	3-4
3-6 Saving Data onto the Hard Disk	3-4
3-7 Naming Machining Programs	3-5
4 DISPLAYS RELATED TO THE MACHINE OPERATIONAL STATUS.....	4-1
4-1 POSITION Display.....	4-1
4-1-1 Data display	4-1
4-1-2 Data registration	4-4

4-1-3	Display operations	4-5
4-2	TRACE Display.....	4-6
4-2-1	Data display	4-6
4-2-2	Displaying machining shape and tool tip	4-7
4-2-3	Plane select	4-8
4-2-4	Change of scale values	4-9
4-3	AUTO MEASURE Display	4-10
4-3-1	Data display	4-10
4-4	EIA MONITOR Display	4-12
4-4-1	Data display	4-12
4-4-2	EIA/ISO monitor function	4-13
4-4-3	Editing functions	4-13
4-4-4	RESTART 2 NONMODAL function.....	4-14
4-5	MACHINING - MONITORING Display.....	4-15
4-5-1	Data display	4-15
4-5-2	Selecting graphs to be displayed.....	4-16
4-5-3	Setting the display time scale	4-18
4-6	DRILL MONITOR Display.....	4-20
4-6-1	Data display	4-20
4-6-2	Setting the threshold.....	4-22
4-6-3	Scale change	4-22
4-6-4	Setting the display time scale	4-23
5	DISPLAYS RELATED TO MACHINING SET UP	5-1
5-1	SET UP MANAG. Display.....	5-1

5-1-1	Data display	5-2
5-1-2	Data registration	5-4
5-1-3	Display operations	5-19
5-2	CHUCK JAW Display	5-20
5-2-1	Data display	5-20
5-2-2	Data registration	5-21
5-2-3	Procedure for setting data related to chuck barriers	5-22
5-3	SET UP RECORD Display	5-25
5-3-1	Data display	5-25
5-3-2	Data saving/reading	5-28
5-3-3	Data registration	5-28
5-4	TOOL LAYOUT Display	5-30
5-4-1	Data display	5-30
5-4-2	Tool layout procedure	5-31
5-4-3	Clearing tool numbers	5-36
5-4-4	Specifying a spare tool	5-36
5-4-5	Erasing spare tool data	5-37
5-4-6	Erasing procedures for registered tool data	5-37
5-4-7	Other functions	5-38
5-5	WORK OFFSET Display	5-40
5-5-1	Data display	5-40
5-5-2	Data registration	5-41
5-5-3	Display operations	5-44
5-6	MACRO VARIABLE Display	5-45

5-6-1	Data display	5-46
5-6-2	Data registration	5-47
5-6-3	Display operations	5-47
5-7	SPINDLE LOAD GRAPHIC DISPLAY Display	5-49
5-7-1	Data display	5-49
5-7-2	Displaying spindle load data	5-50
5-7-3	Display mode selection	5-50
5-7-4	Displaying additional data related to spindle load.....	5-52
5-8	MACHINING NAVIGATION - RESULT Display	5-53
5-8-1	Data display	5-53
5-8-2	Displaying data	5-56
5-8-3	Display modes	5-56
5-9	BF SCHEDULE Display (Option).....	5-58
5-9-1	Data display	5-58
5-9-2	Data registration	5-59
5-9-3	Other display operations	5-60
5-9-4	Examples of setting up a bar feeder schedule.....	5-61
6	DISPLAYS RELATED TO PROGRAM CREATION.....	6-1
6-1	PROGRAM Display	6-1
6-2	TOOL PATH CHECK Display	6-2
6-2-1	Data display	6-2
6-2-2	Basic display operation.....	6-3
6-2-3	Restarting tool path check	6-4
6-2-4	Block skip.....	6-4

6-2-5	Window function	6-4
6-2-6	Changing over the TOOL PATH CHECK display to other displays	6-4
6-2-7	Virtual Machining	6-4
6-2-8	Checking for collision in the solid mode.....	6-5
6-3	SHAPE CHECK Display	6-8
6-3-1	Data display	6-8
6-3-2	Display operations	6-9
6-4	PROGRAM FILE Display.....	6-10
6-4-1	Data display	6-10
6-4-2	Program name setting	6-11
6-4-3	Work number change	6-12
6-4-4	Program erasure.....	6-12
6-4-5	Program copy	6-13
6-4-6	Program editing	6-14
6-4-7	Converting MAZATROL programs to EIA/ISO programs.....	6-14
6-4-8	Opening the shape drawing window.....	6-14
6-4-9	Directory change.....	6-15
6-4-10	Program transfer.....	6-16
6-4-11	Rearranging programs.....	6-17
6-4-12	Changing a reference folder	6-18
6-4-13	Program management functions.....	6-19
6-5	PROCESS CONTROL Display.....	6-20
6-5-1	Data display	6-20
6-5-2	Process-number search.....	6-21
6-5-3	Other functions	6-21

6-6	PROGRAM LAYOUT Display	6-22
6-6-1	Data display	6-22
6-6-2	Priority number setting	6-23
6-6-3	Delay priority designation	6-23
6-6-4	Priority number assignment	6-23
6-6-5	Priority number movement	6-24
6-6-6	Giving priority to roughing steps	6-25
6-6-7	Erasure of all priority numbers	6-25
6-6-8	Store	6-25
6-6-9	Program write	6-26
6-6-10	Simultaneous use of functions	6-26
6-6-11	Changing the display mode	6-27
6-6-12	Program reference window	6-27
6-7	MACHINING NAVIGATION - PREDICT Display	6-28
6-7-1	Data display	6-28
6-7-2	Displaying data	6-32
6-7-3	Display modes	6-32
6-7-4	Modifying the cutting conditions	6-34
7	DISPLAYS RELATED TO TOOLS	7-1
7-1	TOOL DATA Display	7-1
7-1-1	Data display	7-1
7-1-2	LIST INPUT display mode	7-10
7-1-3	Registering the tools to be used (for MAZATROL programs)	7-11
7-1-4	Adding the tool (MAZATROL program)	7-21

7-1-5	Tool setting measurement	7-22
7-1-6	Other functions (for MAZATROL programs)	7-35
7-1-7	Setting tool data (for EIA/ISO programs)	7-38
7-1-8	Setting tool group numbers	7-39
7-1-9	Manual measurement of tool lengths (Setting tool length offset data using the LENG-OFS TEACH menu function)	7-40
7-1-10	Other functions (for EIA/ISO programs)	7-40
7-1-11	MAZATROL tool data "INVALIDATION" (Option)	7-40
7-2	TOOL FILE Display	7-44
7-2-1	Data display	7-45
7-2-2	Registering milling tool data	7-47
7-2-3	Erasing a part of the registered data	7-51
7-3	TOOL OFFSET Display	7-52
7-3-1	Data display	7-52
7-3-2	Tool-compensation data setting procedures	7-55
7-3-3	Setting the current position	7-59
7-4	Input Error Prevention Function	7-60
7-4-1	Outline	7-60
7-4-2	Data display	7-60
7-4-3	Display data description	7-60
7-4-4	Data items to be checked	7-60
7-5	Changed Data Check Function	7-61
7-5-1	Outline	7-61
7-5-2	Operation	7-61
7-6	Function of Checking Tool-Setting Values	7-63

7-6-1	Outline	7-63
7-6-2	Data display	7-63
8	DISPLAYS RELATED TO PARAMETERS	8-1
8-1	CUTTING CONDITION - W.-MAT./T.-MAT. Display	8-1
8-1-1	Data display	8-1
8-1-2	Data registration	8-2
8-1-3	Read and Write of text file	8-3
8-2	CUTTING CONDITION - C-SP/FR Display	8-5
8-2-1	Data display	8-5
8-2-2	Data registration	8-7
8-3	CUTTING CONDITION - PERCENTAGE Display	8-9
8-3-1	Data display	8-9
8-3-2	Data registration	8-10
8-4	CUTTING CONDITION - TURNING Display	8-11
8-4-1	Data display	8-11
8-4-2	Data registration	8-12
8-5	CUTTING CONDITION LEARN Display	8-13
8-5-1	Data display	8-13
8-5-2	Menu functions	8-15
8-6	USER PARAMETER Display	8-16
8-6-1	Data display	8-16
8-7	MACHINE PARAMETER Display	8-18
8-7-1	Data display	8-18
8-8	PLC PARAMETER Display	8-19

8-8-1	Data display	8-19
9	DISPLAY RELATED TO DATA STORAGE	9-1
9-1	DATA I/O Display	9-1
9-1-1	Data display	9-1
9-1-2	DATA I/O operations (HARD DISK).....	9-2
9-1-3	DATA I/O operations (USB).....	9-7
9-1-4	DATA I/O operations (CARD)	9-11
9-1-5	DATA I/O operations (CMT)	9-15
9-1-6	DATA I/O operations (TAPE).....	9-17
9-1-7	Saving CAM data	9-21
9-1-8	Data input/output in text file format	9-22
9-1-9	Saving programs additionally	9-23
9-1-10	MAZATROL program loading	9-23
9-2	Program Transfer from the Host PC to the Memory Card	9-26
9-2-1	Outline	9-26
9-2-2	Detailed description	9-26
9-3	DATA I/O PARAMETER Display	9-32
9-3-1	Data display	9-32
10	DISPLAYS RELATED TO DIAGNOSIS.....	10-1
10-1	DIAGNOSIS (USER) - ALARM Display	10-1
10-1-1	Data display	10-2
10-2	DIAGNOSIS (USER) - ALARM HISTORY Display	10-6
10-2-1	Data display	10-6
10-2-2	Output of an alarm history text file	10-8

10-2-3	Viewing the alarm history text file on the screen	10-8
10-2-4	EXCLUDE ALARM function	10-10
10-3	DIAGNOSIS (USER) - PLC SIGNAL Display	10-11
10-3-1	Data display	10-11
10-4	MAINTENANCE CHECK Display	10-14
10-4-1	Data display	10-14
10-4-2	Data display for long-term check items (1500 and 3000 hours check items)	10-15
10-4-3	Display operations	10-15
10-4-4	Entry of the check items to be displayed	10-16
10-5	RUNNING CONTROL Display	10-18
10-5-1	Data display	10-18
10-5-2	Display period setting	10-19
10-5-3	Display of detailed data	10-20
10-5-4	Display for each work number	10-21
10-5-5	Spindle load display	10-22
10-5-6	Alarm list display	10-23
10-5-7	Other functions	10-24
10-6	DIAGNOSIS (MAKER) - VERSION Display	10-27
10-6-1	Data display	10-27
10-7	DIAGNOSIS (MAKER) - DIAGNOSIS MONITOR Display	10-28
10-7-1	Data display	10-28
10-7-2	Display operations	10-29
10-8	DIAGNOSIS (MAKER) - OPTION Display	10-33
10-8-1	Data display	10-33

11	OPTION	11-1
11-1	Function Relating EIA/ISO Program (Option)	11-1
11-1-1	Setting method	11-1
11-1-2	Configuration of displays	11-1
11-1-3	POSITION display	11-4
11-2	Geometry Compensation Function	11-6
11-2-1	Function general	11-6
11-2-2	Detailed description	11-9
11-2-3	Hold status	11-15
11-2-4	Notes	11-16
11-2-5	Parameters	11-16
11-2-6	Appendix	11-17
11-3	Hard Disk Operating Function	11-20
11-3-1	Outline	11-20
11-3-2	Preparation for HD operation	11-20
11-3-3	Selection of operation mode	11-20
11-3-4	Program selection for HD operation	11-22
11-3-5	Restart in the HD operation mode	11-23
11-3-6	Format for HD operation programs	11-23
11-4	IC Memory Card Operating Function	11-25
11-4-1	Outline	11-25
11-4-2	Preparation for CARD operation	11-25
11-4-3	Selection of operation mode	11-25
11-4-4	Program selection for CARD operation	11-27

11-4-5	Restart in the CARD operation mode	11-28
11-4-6	Format for CARD operation programs	11-28
11-5	Ethernet Operating Function	11-30
11-5-1	Outline	11-30
11-5-2	Preparation for ENET operation	11-30
11-5-3	Selection of operation mode	11-31
11-5-4	Program selection for ENET operation	11-33
11-5-5	Restart in the ENET operation mode	11-34
11-5-6	Format for ENET operation programs	11-34
11-6	EIA/ISO Conversion	11-36
11-6-1	Outline	11-36
11-6-2	EIA conversion program format	11-36
11-6-3	Output data unit	11-37
11-6-4	Operating procedure	11-37
11-6-5	Supplementary description and precautions	11-38
11-6-6	Parameter list	11-42
11-7	Inch/Metric Unit System Change Simplifying Function	11-43
11-7-1	Outline	11-43
11-7-2	Data concerned	11-44
11-7-3	Operating procedure	11-44
11-7-4	Internal management of data	11-45
12	DISPLAYS RELATED TO SIMULATION	12-1
12-1	Tool Model Setting Display	12-1
12-1-1	Data display	12-1

12-2	INTELLIGENT SAFETY SHIELD.....	12-6
12-3	3D MONITOR Display	12-12
12-3-1	Data display	12-12
12-3-2	3D monitor menu	12-13
12-4	3D SETUP Display	12-16
12-4-1	3D SETUP display	12-16
12-4-2	3D setup functions	12-17
12-4-3	Material model setting.....	12-19
12-4-4	Fixture model setting	12-26
12-4-5	Manual arrangement of the material and fixture models	12-31
12-5	Editing the Database	12-40
12-5-1	Editing the material database	12-40
12-6	3D Display Operation	12-46
12-7	VIRTUAL MACHINING Display	12-51
12-7-1	Outline	12-51
12-7-2	Data display	12-51
12-7-3	Work simulation	12-54
12-7-4	Machine simulation	12-65
13	OTHER FUNCTIONS	13-1
13-1	Voice Advisor	13-1
13-1-1	Outline	13-1
13-1-2	Change settings.....	13-1
13-1-3	Greeting Message	13-3
13-1-4	Exclusion of alarms from warning.....	13-3

13-2 Custom Menu Function	13-4
13-2-1 Outline	13-4

PART 4

AUTOMATIC OPERATION

CONTENTS

	Page
1 AUTOMATIC OPERATION EXECUTION.....	1-1
1-1 Automatic Operation Execution Procedure.....	1-1
1-2 Types of Automatic Operation Mode	1-3
1-2-1 Automatic operation	1-4
1-2-2 Restart operation	1-8
1-2-3 MDI operation	1-15
1-2-4 Single-process mode operation	1-15
2 SELECTING EXECUTION CONDITIONS.....	2-1
2-1 Optional Stop.....	2-2
2-1-1 Procedure	2-2
2-1-2 Description.....	2-2
2-2 Dry Run	2-3
2-2-1 Selecting Dry Run function	2-3
2-2-2 Cancelling Dry Run function	2-4
2-3 Machine Lock	2-5
2-3-1 Procedure	2-5
2-3-2 Description.....	2-5
2-4 Work Light	2-5
2-4-1 Procedure	2-5
2-5 Barrier Cancel	2-6
2-5-1 Procedure	2-6
2-6 Block Skip.....	2-6

2-6-1	Procedure	2-6
2-6-2	Description.....	2-6
2-7	Single Block.....	2-7
2-7-1	Procedure	2-7
2-7-2	Description.....	2-7
2-8	Comparison Stop.....	2-8
2-8-1	Setting procedure	2-8
2-8-2	Description.....	2-9
2-9	Threading Position Storage Option.....	2-11
2-9-1	Procedure	2-11
2-9-2	Description.....	2-12
3	CHANGING THE CUTTING CONDITIONS.....	3-1
3-1	Rapid Traverse Override	3-1
3-1-1	Procedure	3-1
3-2	Cutting Feed Override	3-2
3-2-1	Procedure	3-2
3-2-2	Rate of feed during dry run	3-2
3-3	Spindle/Milling-Spindle Speed Override	3-3
3-3-1	Procedure	3-3
3-4	VFC Function	3-4
3-4-1	Procedure	3-4
3-4-2	Description.....	3-4
3-5	AFC Function	3-8
3-5-1	Setting the desired current load value	3-9

3-5-2	Tools available with AFC and AFC supervisory modes	3-10
3-5-3	Functional operation	3-10
4	STOPPING AUTOMATIC OPERATION	4-1
4-1	Emergency Stop	4-1
4-1-1	Emergency stop	4-1
4-1-2	Releasing the emergency stop status	4-1
4-2	Reset	4-2
4-3	Feed Hold	4-2
4-4	Stopping by Changeover to a Manual Operation Mode	4-3
4-5	Single-block Stop	4-4
4-5-1	Single-block stop by changing within automatic operation modes	4-4
4-5-2	Single-block stop using the single block key	4-4
4-6	Program Stop	4-5
4-7	Stopping by Turning the Power Off	4-5
5	MANUAL INTERRUPTION	5-1
5-1	Handle Interruption	5-1
5-1-1	Handle interruption	5-1
5-1-2	Clearing the manual handle interruption	5-1
5-2	TPS Function	5-2
5-2-1	Storing the data of only the stop point of automatic operation	5-2
5-2-2	Storing the data of both the stop point of automatic operation and the passage point(s) existing during manual interruption	5-3
5-2-3	Storing the data of only the passage point(s) existing during manual interruption	5-4

5-2-4	General remarks on TPS function	5-4
6	OPERATIONS POSSIBLE DURING AUTOMATIC OPERATION	6-1
6-1	Data Rewriting	6-1
6-1-1	Data writing conditions.....	6-1
7	COMPLETION OF OPERATION	7-1
7-1	Procedure for Switching the Power OFF	7-1
7-2	Cleaning and Inspections on Completion of Operation.....	7-1

PART 5

APPENDIX

CONTENTS

Page

1	STANDARD SPECIFICATION OF THE MACHINE.....	1-1
1-1	Principal Specification	1-1
1-2	Spindle Nose Diagram.....	1-5
1-3	Characteristic of Spindle Motor	1-7
1-4	Stroke Diagram	1-8
1-5	Tooling Interference Diagram (QTN200-II/250-II)	1-16
1-6	Tooling System Diagram (QTN200-II/250-II)	1-18
1-7	Relation Diagram between Chuck and TOOL EYE	1-22