



USER GUIDE

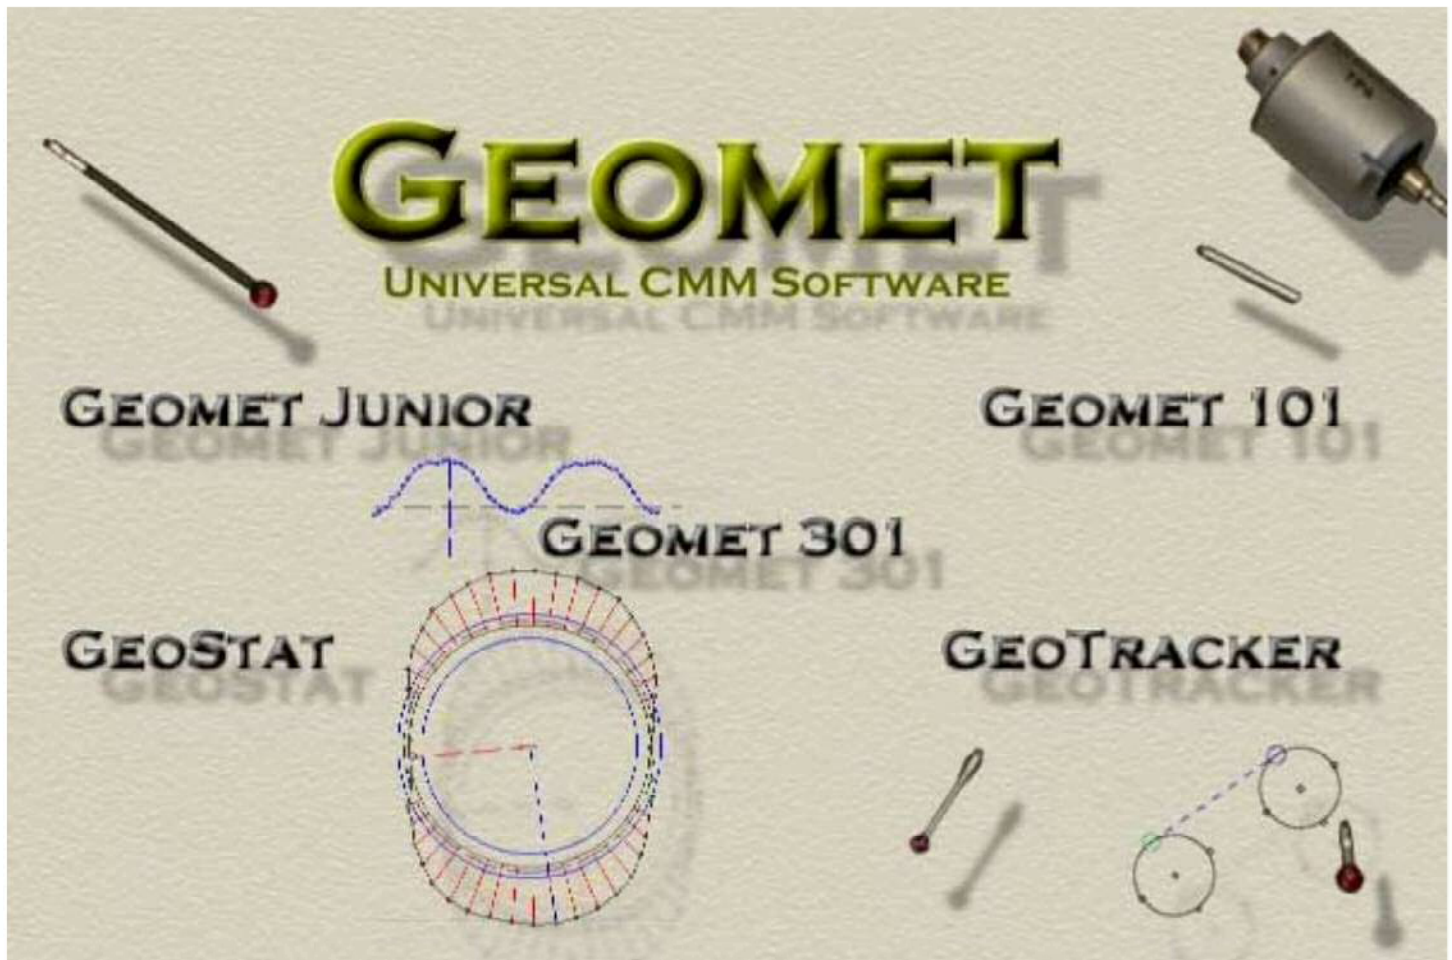

GEOMET

Helmel Engineering Products, Inc.

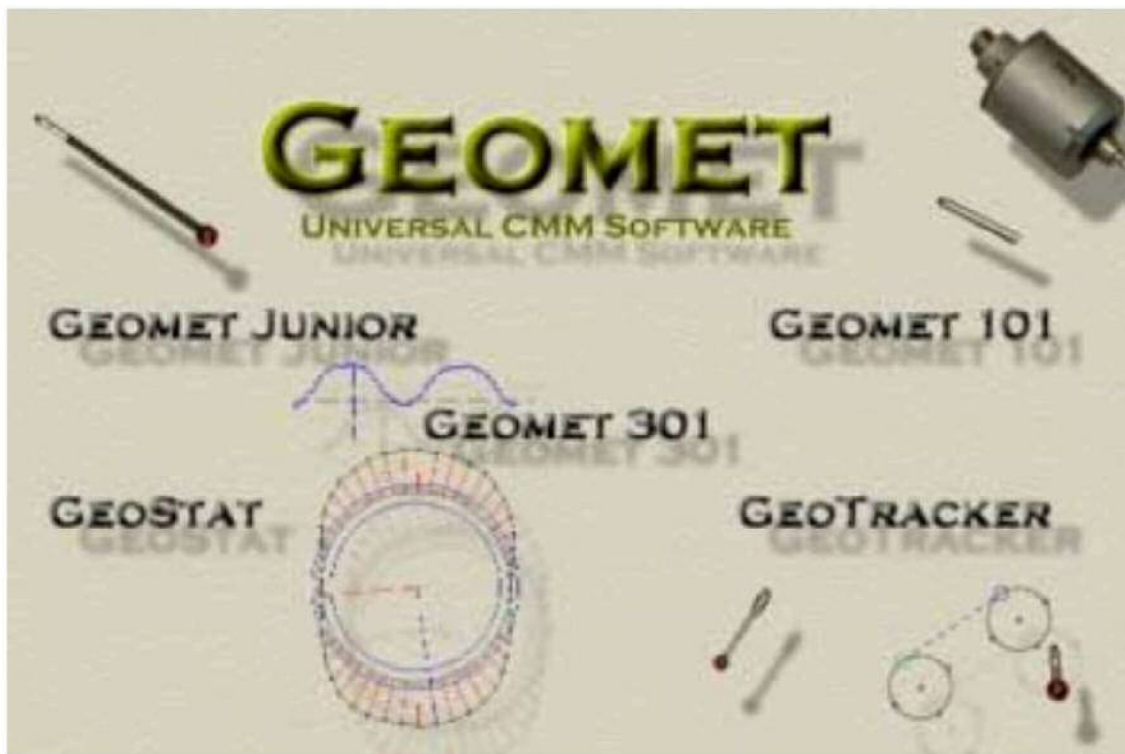

Universal CMM Software

Title of Contents

Installation Instructions

Geomet 101

Geomet 301

Geomet Junior

GeoStat

GeoTracker

Renishaw Probes and Accessories

Vector Point

Geomet

Installation Instructions

Version 4.00

Helmel Engineering Products, Inc.

Table of Contents

1. Geomet Software Installation.....	4
2. GeoClean Authorization.....	10
3. Adobe Acrobat Reader Installation.....	12

Geomet

User Guide

Version 6.66
June 2006

Covering:

Geomet 101, Geomet 101+, Geomet 301

Helmel Engineering Products, Inc.

Contents

Chapter 1 - Geomet

- Geomet Program Levels
- Geomet Options
- Geomet Comparison Chart

Chapter 2 – Table of Contents

Geomet Installation Guide – Introduction	2.2
Changes to the Protection Device	2.2
Geomet Installation Program Summary.....	2.3
Microsoft Direct X.....	2.3
Drivers and System Support Files	2.3
Installing Geomet – step-by-step Guide	2.4
Installing the Crypkey License Driver.....	2.7
Authorizing Geomet Software	2.8
Geomet System Options	2.10
Enhanced Features	2.10
Tolerance.....	2.13
Probes and Sensors	2.14
File Locations	2.15
Report States	2.17
Feature Characteristics.....	2.18
CMM Characteristics.....	2.19
Report Configuration	2.21
Colors.....	2.24
Form Control.....	2.25
SPC Formats	2.26
Tolerance Codes.....	2.27
Graphic Controls.....	2.28
CMM Scale Compensation.....	2.30
Linear Compensation.....	2.30
Non-Linear Compensation.....	2.34
Geomet Toolbar Control.....	2.36
Interface Data Strip	2.36
Working with Toolbars.....	2.37
Geomet Toolbar Tables.....	2.38

Contents

Chapter 3 – Stylus Management

Stylus Manager	3-2
Probe Qualification Process	3-2
Stylus Manager Sub Menus	3-2
Deleting Stylus.....	3-3
Remove Pre-Qualified Stylus	3-6
Duplicate a Stylus	3-7
Labeling a Stylus	3-8
 Qualifying a Ball Stylus.....	3-9
 Qualifying Ball Styli in Multiple Positions	3-10
Note on Reference Sphere Location	3-10
 Entering a Known Probe Diameter	3-11
 Stylus Tip Relationships	3-12
 Qualifying with a Motorized Probe Head.....	3-13
 Qualifying with a Stylus Change Rack.....	3-15
 Qualifying a Motorized Probe Head and Stylus Change Rack.....	3-18
 Stylus Database Manager.....	3-19
Create a new Stylus Database	3-20
Import a Stylus Database	3-20
Delete a Stylus Database Listing	3-21
Set active a Stylus Database	3-21
Loading a Part Program	3-22
 Renishaw SCR200/MCR 20 Stylus Rack Setup.....	3-24
 Renishaw SCR200/MCR20 Maintenance Operations	3-31
 Stylus Database Edit Control	3-35

Chapter 4 – Feature Measurement

Basic Features	
Point	4-2
1D Point	4-3
Auto Direction Sensing and 1D Points	4-4
2D Point	4-5
Inside Radial / Outside Radial 2D Point	4-6

Contents

3D Point	4-7
Inside Radial / Outside Radial 3D Point	4-7
Vector Point	4-8
Understanding Vector Points	4-9
Vector Point Technical Discussion	4-11
Vector Point Report Format	4-12
Vector Point, XYZ/IJK Known	4-13
Vector Point Unknown Data	4-16
Vector Point IJK Known	4-18
Vector Point XYZ Known	4-19
Vector Point Import File	4-21
 Line	 4-34
 Circle	 4-37
 Plane	 4-39
Upper / Lower Boundary Plane	4-41
 Sphere	 4-43
 Cylinder	 4-44
 Cone	 4-46
Cone Offset	4-47
Cone Diameter	4-48
Cone Drop Ball Test	4-49
 Macro Features	
4 Point Intersect	4-50
Slot/Web	4-51
Oval Slot	4-52
 Feature Averaging	 4-54

Chapter 5 – Coordinate Systems

Understanding Coordinate Systems	5-3
Machine Coordinate System – MCS	5-3
Part Coordinate System – PCS	5-3
PCS Base Planes	5-5
PCS versus MCS	5-5
Fixture Coordinate System – FCS	5-5
Interim Coordinate System – ICS	5-6
Clearance Coordinate Systems – CCS	5-6

Contents

Wobble Coordinate System – WCS.....	5-6
The PCS Setup Guide	5-7
Coordinate System Commands.....	5-8
ICS⇒PCS	5-8
Orient	5-10
Align	5-11
Origin	5-12
Offset Align	5-13
Editing an Offset Align.....	5-14
Pivot Align.....	5-15
Rotate	5-16
Edit an Existing Rotation Value	5-17
Translate.....	5-18
Edit an Existing Translation Value	5-19
PCS Program Examples.....	5-20
#1, Basic Alignment.....	5-21
#2, Plane-Line-Point	5-23
#3, Quick PCS.....	5-25
#4, Plane-Circle-Circle	5-27
#5, Plane-Cylinder-Circle	5-29
#6, Plane-Bisect Points-Circle	5-31
#7, Cylinder-Circle-Point.....	5-33
#8, Plane-Intersect Lines-Bisect Points-Circle	5-35
#9, Offset Alignment	5-38
#10, Pivot Alignment.....	5-39
#11, Translate.....	5-40
#12, Rotate	5-41
Coordinate System Manager.....	5-42
Recalling a Part Coordinate System	5-42
Recalling the Machine Coordinate System.....	5-42
Recalling a Fixture Coordinate System	5-42
Recalling a Vector Drive System.....	5-43
Fixture Coordinate System Manager	5-44
Import and Convert Pre-Geomet v 6.66 FCS Definitions.....	5-45
Using the FCS Manager.....	5-47
Adding a new FCS to the database	5-48
Selecting a FCS Record	5-49
Attach Step.....	5-49
Updating.....	5-49
Deleting.....	5-50
Locking	5-50

Contents

Details	5-50
Delete All	5-50
Clearance Coordinate Systems	5-51
Chapter 6 – Tolerance	
Introduction to Tolerance.....	6-2
Linear Tolerance Theory.....	6-3
Working with Geomet Tolerance Windows	6-5
Working with True Position Tolerance Windows	6-7
Interpreting Linear Tolerance in Geomet	6-8
True Position Tolerance Theory	6-9
Datum Bonus Tolerance	6-11
Process Control Tolerance	6-12
Out-of-Tolerance Flash Message.....	6-15
Vector Point Features – Apply Tolerance using Profile Bands	6-16
GeoTol – Form Tolerance.....	6-17
Runout: Cylinder/Plane.....	6-18
Chapter 7 – Constructions	
Constructions – Brief Overview	7-2
Selecting Features	7-2
Implicit Selection	7-2
Targeted Highlighting	7-2
Feature Selection Tool	7-2
Bisect	7-3
Intersect.....	7-4
General Features – Single Point Solutions	7-4
Circle / Circle.....	7-4
Circle Line	7-6

Contents

Offset Features	7-8
Offset Point	7-8
Offset Line	7-9
Offset Plane.....	7-10
Angle.....	7-11
Distance	7-12
Extended Distance	7-13
Reporting Format Control.....	7-13
Circle / Circle.....	7-14
Cylinder / Sphere	7-16
3D Point / 3D Point.....	7-18
Boundary Planes	7-19
Inscribed / Circumscribed Circle	7-20
Recall Feature	7-21
Recall Feature Tool.....	7-21
On Demand Recall.....	7-21
Recall PCS Base Components	7-22
 Chapter 8 – Support Tools and Features	
Understanding Auto Direction Sensing	8-3
Activate Auto Direction Sensing	8-4
Program Header	8-5
Fixture Usage Data Fields.....	8-6
Restart Program Header.....	8-7
Rerun Step Selection, Manual and DCC CMMs	8-7
EZ Launch Menu System.....	8-8
Activating the EZ Launch Menu System.....	8-8
Creating and Editing Cradle Definitions.....	8-8
Cradle Definitions	8-9
Editing Cradle Definitions	8-10
Assign and FCS to a Cradle.....	8-12
Assign Inspection Files to a Cradle	8-13
EZ Launch Polling System	8-15
EZ Launch Operational Sequence	8-18

Contents

Feature Selection Tool	8-19
Using PCS Filters.....	8-19
Display only Measured and Constructed Features.....	8-20
Column Sorting.....	8-20
Applying your Selections.....	8-20
Math Function.....	8-21
Diameter Averaging.....	8-22
Stylus Size Updating using a Ring Gage.....	8-22
DCC Option Menu.....	8-23
Rerun Feature Selector – Manual CMMs	8-24
Text Features.....	8-25
Manual Step Text Entry	8-25
Basic Text	8-27
User Prompt with Image Support	8-28
In-Line Text Entry	8-29
Custom Ordered Reports	8-31
Concise Reports	8-34
Report Control Center.....	8-36
Print Exception / SPC Tags.....	8-37
Report Offset.....	8-41
Digital Readout	8-42
Standard DRO.....	8-42
Full DRO.....	8-44
In-Line Math Calculator	8-46
GeoPlus Library	8-48
Inspection Program Editing Tools	8-53
Undo.....	8-53
Delete	8-53
Delete Permanently	8-55
Delete All After.....	8-56
Edit History Tool	8-57
Insert	8-59
Move	8-60
Copy and Append	8-61
Jump to Feature Number.....	8-62

Contents

Feature Properties	8-63
Single Feature Selection Submenu	8-63
Single Feature Property Tool	8-64
Multiple Selected Features Submenu.....	8-65
Report Navigation Keys.....	8-67
File Archive	8-68

Chapter 9 – Working with Motion Control

Introduction to Motion Control.....	9-2
Point Type Definitions.....	9-2
Special Considerations when Teaching Motion	9-3
Motion Adjustment Tools.....	9-4
Feature Generators.....	9-4
DCC Home Position	9-5
DCC Variables	9-6
Motion Control Ribbon.....	9-7
Motion Edit Tool	9-8
One-Step Motion Edit.....	9-15
Disable Motion on Features	9-17
Motion Map Test	9-19

Chapter 10 – Offline Tools

Introduction.....	10-2
Feature Generators – Common Tools and Controls	10-3
Offline IP Generator	10-6
Circle Generator.....	10-11
Cylinder Generator.....	10-15
Line Generator	10-20

Contents

Plane Generator.....	10-22
Point Generator	10-31
Bolt Hole Generator	10-35

Chapter 11 – Reverse Engineering

Introduction.....	11-2
Reverse Engineering for Surface Generation	11-2
Summary of Reverse Engineering Tools	11-3
Choosing a Scan Method	11-4
Manual Free Scan	11-5
GeoTracer	11-6
Line Auto Scan	11-9
4 Point Boundary Surface Scan	11-11
Radial Boundary Surface Scan	11-16
Understanding the Data Cloud Structure	11-17
Cardinal Spline	11-18
Exporting	11-23

Technical Notes

Curved Surface Measurement with Vector Point	App 1 - 2
Multi-Point Feature and CMM Inherent Errors	App 1 - 9

Geomet

Geomet Junior Manual

Version 4.00

Hemel Engineering Products, Inc.

Geomet

**INTEGRATED SPC FOR GEOMET
UNIVERSAL CMM SOFTWARE**

GEOSTAT



Helmel Engineering Products, Inc.

Geomet

GEOTRACKER

Helmel Engineering Products, Inc.

Geomet

INSTALLATION AND SETUP GUIDE FOR RENISHAW PROBING SYSTEMS

MCR20 STYLUS CHANGE RACK PH9/10/50 MOTORIZED PROBE

Helmel Engineering Products, Inc.

Geomet

Vector Point Data

Helmel Engineering Products, Inc.