

OPERATION MANUAL

PROFESSIONAL A

SNC43/64

SF64

HYPER5

MAKINO MILLING MACHINE CO., LTD.

No.299D-9702(E)

Contents

MAIN CONTROL PANEL

1. Emergency Stop	A-2
2. NC Program Start and Stop	A-4
3. Operational Mode Select Switch	A-5
4. NC Function Switches	A-6
5. Machine Functions	A-8
6. Spindle Start and Stop	A-10
7. Machine Status Indications	A-11
8. Single-Touch Routine Function	A-12
9. Job Switch	A-14
10. Rotary Switches	A-15
11. Main Control Panel Flexible Switch	A-16

PC SCREEN

(For 9-inch Screen)

1. PC Screen, General	B-1
2. PC PRIMARY Screen	B-3
3. TOOL DETAIL Screen	B-6
4. HELP Screen	B-9
5. ALARM Screen	B-11
6. DIAGNOSE Screen	B-14
7. MAINTENANCE Screen	B-16
8. PARAMETER Screen	B-21
9. REGULAR MAINTENANCE Screen	B-23

(For 14-inch Screen)

1. PC Screen, General	B-1
2. PC PRIMARY Screen	B-3
3. TOOL DETAIL Screen	B-6
4. HELP Screen	B-9
5. ALARM Screen	B-11
6. DIAGNOSE Screen	B-15
7. MAINTENANCE Screen	B-18
8. PARAMETER Screen	B-24
9. REGULAR MAINTENANCE Screen	B-27

TOOL MONITOR FUNCTION

- 1. Tool Lift Monitor C-1
- 2. Spare Tool Select Function (STS) C-3

IMPORTANT OPTIONAL FUNCTIONS

- 1. Built-in Hale (Spring Tool) (Option) D-1
- 2. ATC (Option) D-3
- 3. DTC (HYPER5 DIRECT TOOL CHANGE: Option) D-22

MACHINE PARAMETERS

- 1. All Clear of Professional a Machine Side Retentive Memory E-1
- 2. How to Set the Machine Parameters E-2
- 3. Machine Parameter E-3

LIST OF ALARMS F-1

LIST OF M CODES G-1

MACHINE I/O TABLE H-1