


ROBOFORM 23

CE

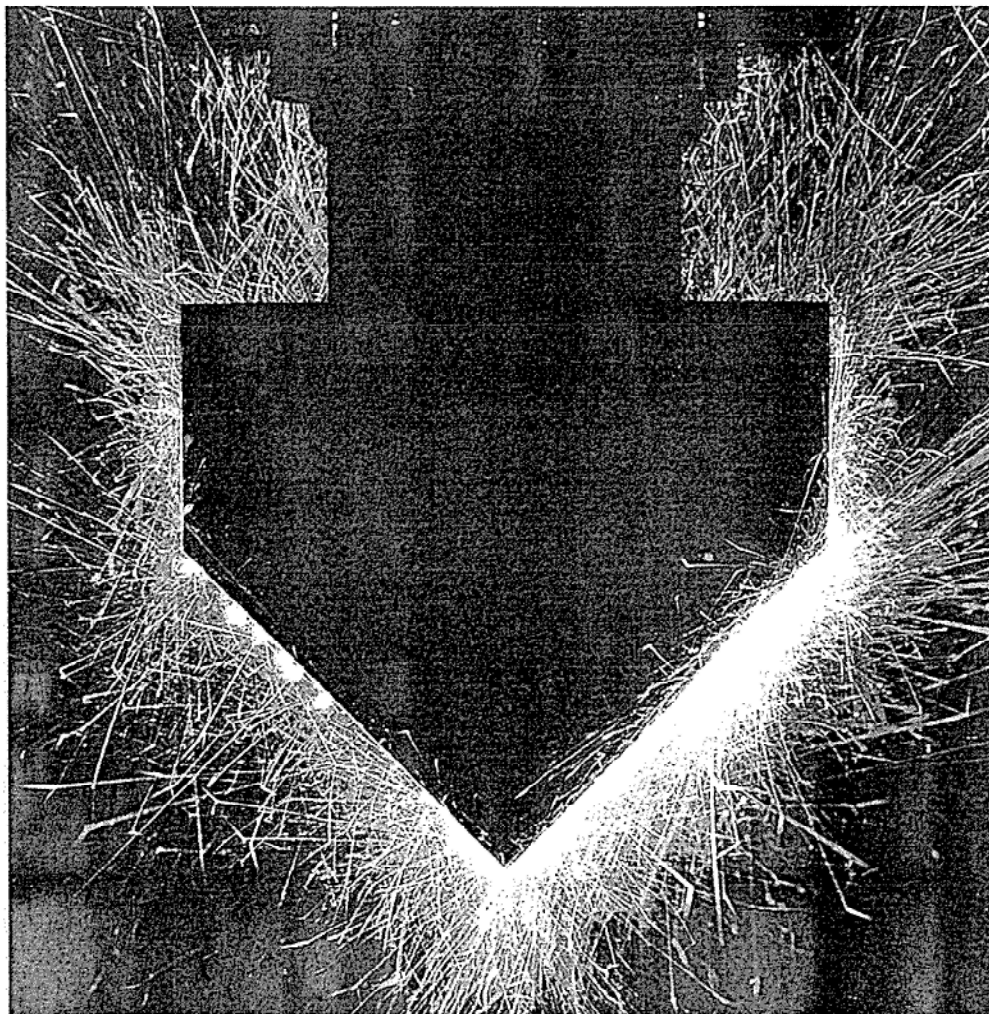

NC Manual

140 001 017/E/05.2004

ver. A

CHARMILLES 

140 001 132/E/06.05.2004

NC Manual

ROBOFORM 23

1. General

2. PREP Mode

3. EXE Mode

4. INFO Mode

5. GRAPH Mode

6. Command language programming

7. Programming with PROFORM

8. ISO Programming

General table of contents

General	1.1
Introduction	1.3
Structure of the NC	1.7
Screen organization	1.12
PREP Mode	2.1
Editor	2.3
Program Expert 1.1	2.9
Files	2.19
Editing tables	2.23
EXE Mode	3.1
Introduction	3.3
Executing a program	3.5
User parameters	3.7
PILOT EXPERT	3.13
Drawing parameters	3.17
Activate tables	3.19
Measurements	3.21
Manual	3.33
Reference	3.37
Dielectric	3.39
Service	3.41

**Table of
contents**

INFO Mode	4.1
Introduction	4.3
GRAPH Mode	5.1
Introduction	5.3
Command language programming	6.1
Introduction	6.5
List of commands words	6.7
Program execution commands	6.9
Movement commands and auxiliary functions	6.17
File and table commands	6.33
Part program parameter commands	6.41
Measurement commands	6.45
Miscellaneous commands	6.53
External commands	6.57
Direct machining commands	6.61
Flushing commands	6.65

Programming with PROFORM	7.1
Introduction	7.3
PROFORM syntax	7.4
Programming	7.7
Basic instructions	7.12
Cycles	7.20
Machining modes	7.27
Auxiliary functions	7.31

ISO Programming	8.1
Introduction	8.3
ISO codes and format	8.5
Rules	8.7
Preparatory G functions	8.13
Words other than G and M	8.53
Auxiliary M functions	8.55
Definition of M functions	8.57
Optional M functions	8.69