

Division
Machine Tools



Mikron AG Biel Telephone 032 21 77 33
Allestrasse 11 Telex 934 327
CH-2501 Biel/Switzerland Telefax 032 22 79 64

Operators' Manual, mechanical part

WF 31 D

152.34.74.021

valid from series 51 onwards

Table of contents

	Sheet
1. General	
1.1 Technical specification	6
1.2 Machine dimensions	8
2. Installation	
2.1 Transport of the machine	9
2.2 Installation of the machine	10
2.3 Levelling and fixing the machine onto the floor	11
2.4 Cleaning of the new machine	12
2.5 Connection of the machine	12
2.6 Precautions to be taken before starting the operation of the machine	12
2.7 Milling spindle bearing and drive	13
2.8 Transport support	14
2.9 Swivelling arm for control panel	15
2.10 Levelling of the control panel	16
2.11 Support for swivelling arm	17
3. Maintenance	
3.1 Lubrication of the machine	18
Central lubrication	19
Vertical milling head	20
3.2 Electric motors	20
3.3 Periodic cleaning of the machine	20
3.4 Coolant	21
3.4.1 Lubricants	21
3.4.2 Filling	21
3.4.3 Mixing	22
3.4.4 Checking	22
3.4.5 Cleaning of coolant chamber	22
3.5 Maintenance of the feed motors	23
3.5.1 Necessary to be observed before disassembly	23
3.5.2 Trouble shooting	23
3.5.3 Tachogenerator	23
3.5.4 Motor noise	23
3.6 Slide guideway wipers	24
4. Description of the machine	
4.1 View from the right	25
4.2 Front view	26
4.3 View from the left	27
4.4 Overdrive (overrun) of the limit switches	28
4.4.1 Safety clutches	30
4.4.2 X and Y axes, reengagement	30
4.5 Milling spindle drive	30

Table of contents

4.5.1	Speed monitoring system	30
4.6	Automatic tool clamping	31
4.6.1	Checking the groove distance ISO 40	32
4.6.2	Adjustment of the collet	32
4.6.3	Tool change	33
4.6.4	Bleeding	34
4.7	Hydraulic aggregate	35
4.7.1	Maintenance	36

5. Maintenance

5.1	Readjustment of the slide guides	37
5.1.1	Readjustment of the V-ledge on spindle slide	37
5.1.2	Readjustment of the V-ledge on the longitudinal slide	38
5.1.3	Readjustment of the V-ledge on the cross support	39
5.2	Belt tightener for the toothed driving belt of the cross feed spindle	40
5.3	Replacement and tension of the Poly-V-belt	41
5.4	Rollband replacement	42
5.5	Horizontal spindle	43
5.5.1	Disassembly of the spindle unit	43
5.5.2	Assembly of the spindle unit	43
5.6	Tool clamping	44
5.6.1	Dismounting of the spring assembly	44
5.6.2	Remounting the Belleville spring assembly	45
5.6.3	Adjustment of the tool ejector	45
5.7	Mounting and dismounting of the vertical bellow	46

6. Accessories

6.1	Vertical milling head	47
6.1.1	Mounting	48
6.1.2	Tool clamping	49
6.1.3	Selection of the milling spindle speed	49
6.1.4	Limitation of the spindle stroke	49
6.1.5	Swivelling of the vertical milling head	49
6.1.6	Locking of the vertical quill	50
6.1.7	Removal of the vertical milling head from the swivel arm by means of a crane	51
6.1.8	Protective (dust proof) cap for the vertical milling head	51
6.2	Vertical milling head with manual fine feed of the quill	52
6.2.1	Change-over cross handle graduated crank	53
6.2.2	Boring or turning according to given dimensions	53
6.2.3	Subsequent mounting of the fine feed gear	54
6.3	Vertical swivelling milling head with automatic quill feed	55
6.3.1	Change-over cross handle graduated crank	56
6.3.2	Adjustment of the boring depth	56
6.3.3	Fine adjustment of the feed stop	56
6.3.4	Data sheet to the transistorized control unit Type TR 36-2,6	57
6.3.5	Replacement of the feed rate adjustment knob	58
6.3.6	Maintenance of the d.c. motor	59
6.3.6.1	Replacement of the carbon brushes	59
6.4	Overarm	60
6.5	Angle milling head	61

Table of contents

6.5	Angle milling head	61
6.6	Slotting attachment (Keyway broaching device)	62
6.6.1	Adjustments of stroke	63
6.6.2	Adjustment of the slide clearance	63
6.7	Splash and chip guard enclosure	64
6.7.1	Chip removal (emptying)	64
6.7.2	Cleaning and maintenance	64
