


CNC SYSTEM

OSP5000L-G

for models: LC10 LC20 LC30 LC40 LC50

MAINTENANCE MANUAL (2nd Edition)

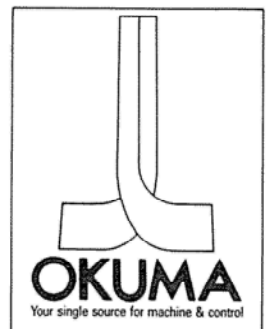

Publication No. 2448-E-R1
(April 1985)

TABLE OF CONTENTS

	<u>PAGE</u>
SECTION 1 SPECIAL FEATURES OF OSP 5000 SERIES	1
SECTION 2 SUMMARY OF OPERATION	2
SECTION 3 STRUCTURE OF OSP 5000L-G	3
3-1. CPU UNIT	3
3-2. SERVO DRIVE UNIT	3
3-3. RELAY AND MAGNETIC SWITCH CIRCUITS	4
3-4. SPINDLE DRIVE MOTOR CONTROL	4
3-5. CONTROL ENCLOSURE	4
3-6. OPERATION PANEL	4
3-7. ABSOLUTE POSITION FEEDBACK ENCODERS	5
3-8. COOLING UNIT	5
SECTION 4 MAINTENANCE AND INSPECTION	6
4-1. INSPECTION DURING INSTALLATION	6
4-1-1. Installation Site	6
4-1-2. Environmental Requirements	7
4-1-3. Power Supply Voltage Inspection	7
4-2. PERIODICAL INSPECTION	8
4-3. OPERATION AND STRUCTURE OF THE NC	9
4-3-1. Example of Operation	9
4-3-2. Description on Each Major NC Unit	10
4-4. SELF-DIAGNOSTICS	13
4-4-1. Alarm Display and Error Display	14
4-4-2. Check Data Display	14
SECTION 5 TROUBLE AND TROUBLESHOOTING	33
5-1. ANALYSIS OF TROUBLE	34
5-2. MACHINE-MOUNTED ELECTRICALS	35
5-2-1. Inspection of Limit Switches (Check Method by Multi-meter).....	35
5-2-2. Inspection of Rotary Switch for Turret Indexing (Testing by Self-Diagnostic Function)	36

	<u>PAGE</u>
5-3. BRUSHLESS SERVO MOTOR DRIVE UNIT	38
5-3-1. Configuration of BDU-A	38
5-3-2. BDU-A Protection Function and Alarm Indication	41
5-3-3. Trouble and Troubleshooting	45
5-3-4. Spare Parts of BDU-A	46
5-4. INSPECTION OF POSITION ENCODER	47
5-5. CHECK PANEL	48
5-6. CPU	49
5-6-1. Operation and Structure of the CPU	49
5-6-2. Checking CPU Operations	51
5-6-3. Loading Control Software through Floppy Disk	52
5-6-4. CPU Power Supply	55
5-7. RELAY AND MAGNETIC SWITCH CIRCUITS	57
5-7-1. Operation and Structure of Relay and Magnetic Switch Circuits	57
5-7-2. Inspection of Relays and Magnetic Switches	58
5-7-3. Checking Cannon Plug/Connector	61
SECTION 6 SPINDLE DRIVE UNIT FOR DC MOTOR - SDU-600 W SERIES	62
6-1. OUTLINE	62
6-2. ALARM CONDITIONS AND DISPLAY OF SDU-600 W SERIES UNIT	65
6-2-1. Alarm Display and Details	65
6-2-2. Resetting of Alarm Condition, Replacement of Blown Fuses and Resetting of No-Fuse Circuit Breaker	66
6-3. CONSTRUCTION OF SDU-600 W SERIES SPINDLE DRIVE UNIT	69
6-3-1. Layout of Component Parts	69
6-3-2. Principle Functions	71
6-4. SPERE AND REPLACEMENT PARTS	72
6-4-1. Spare and Replacement Parts of SDU-600 W	72
6-4-2. Spare and Replacement Parts for DC Motors and Tachogeneraters	73
6-5. INSPECTION AND MAINTENANCE OF DC MOTORS AND TACHOGENERATORS ..	75
6-5-1. Inspection and Maintenance of Brushes	75
6-5-2. Inspection and Maintenance of Bearings	75
6-5-3. Inspection and Maintenance of Air Filter	75
6-6. TROUBLESHOOTING CHART	76
SECTION 7 COOLING UNIT	78
7-1. MAINTENANCE AND INSPECTION	78

	<u>PAGE</u>
ELECTRICAL SPARE PARTS LIST	79
(1) LC10	79
(2) LC20	80
(3) LC30	82
(4) LC40	84
(5) LC50	86
 NC-LATHE RATED POWER DATA	 88
(1) Table of Power Requirements for LC10-2S	88
(2) Table of Power Requirements for LC20-1S	89
(3) Table of Power Requirements for LC20-2S	90
(4) Table of Power Requirements for LC30-1S	91
(5) Table of Power Requirements for LC30-2S	92
(6) Table of Power Requirements for LC40-1S	93
(7) Table of Power Requirements for LC40-2S	94
(8) Table of Power Requirements for LC50-1S	95
(9) Table of Power Requirements for LC50-2S	96
 APPENDED FIGURES	
(1) Layout Diagram of Machine-mounted Electricals (LC10-2S)	97
(2) Layout Diagram of Machine-mounted Electricals (LC20-1S/2S)	98
(3) Layout Diagram of Machine-mounted Electricals (LC30/40-1S/2S) ..	99
(4) Layout Diagram of Machine-mounted Electricals (LC50-1S/2S)	100
(5) NC Operation Panel	101
(6) Machine Operation Panel (LC10)	102
(7) Machine Operation Panel (LC20/30/40/50)	103
(8) Internal Layout of OSP5000L-G CNC Unit (LC10)	104
(9) Internal Layout of OSP5000L-G CNC Unit (LC20)	105
(10) Internal Layout of OSP5000L-G CNC Unit (LC30/40)	106
(11) Internal Layout of OSP5000L-G CNC Unit (LC50)	107