

AUTO-BACKGAUGE II

OPERATOR'S MANUAL

Q MADA

AUTO B/G-E01-199206

CONTENTS

SAFETY PRECAUTIONS	<i>iv</i>
1. SYSTEM DESCRIPTION	1-1
Stopper assembly	1-2
Backgauge mechanism	1-3
2. SPECIFICATIONS	2-1
3. CONTROLS	3-1
Auto-backgauge power switch	3-1
Control panel	3-1
4. AUTO-BACKGAUGE OPERATION	4-1
Power on and return-to-origin operation	4-1
Program entry	4-1
Automatic operation	4-4
Manual operation	4-5
Clearing all entry data	4-5
Power off	4-5
5. PARAMETER	5-1
List of parameters	5-1
Parameter input	5-2
Returning all parameters to defaults	5-3
6. ALARM	6-1
7. ADJUSTMENT	7-1
Stopper height adjustment	7-1
Stopper horizontal adjustment	7-2
Left and right stopper horizontal adjustment	7-2
Correction of difference between programmed and current backgauge positions	7-2
Extension and die parallel adjustment	7-4
Auto-backgauge origin adjustment	7-6
8. MAINTENANCE	8-1
Battery replacement	8-1
Location of battery pack	8-2
Motor brush check and replacement	8-3
9. TROUBLESHOOTING	9-1
APPENDIX	