
HITEC-TURN INTERACTIVE TYPE

15SII, 20SII

CNC LATHE
PROGRAMMING MANUAL

SEIKI MULTI

(L8804E-2) Edition 1 3-1989

SEIKI *Hitachi Seiki Co., Ltd.*

TABLE OF CONTENTS

1. GENERAL	1 - 1
1. Outline	1 - 1
2. Programming	1 - 2
3. Before Reading This Programming Manual	1 - 2
2. OPERATION PANEL	2 - 1
1. Description of Operation Panel	2 - 1
2. Description of Keys	2 - 2
2-1 Keys Used for Automatic Programming	2 - 2
3. AUTOMATIC PROGRAM OPERATION	3 - 1
1. What Is Automatic Program ?	3 - 1
2. Starting the Automatic Program	3 - 1
3. Executing the Automatic Program	3 - 2
3-1 Executing the Automatic Program	3 - 2
3-2 Selecting the Item	3 - 2
3-3 Inputting the Blank Shape	3 - 3
3-3-1 Selecting the Item	3 - 3
3-3-2 Setting the Input Type	3 - 4
3-3-3 Selecting the Material	3 - 5
3-3-4 Selecting the Blank Shape	3 - 6
1. Round Bar	3 - 6
2. Hollow Round Bar	3 - 7
3. Hexagonal Bar	3 - 7
4. Formed Bar	3 - 8
3-4 Inputting the Blank Shape (Formed Bar)	3 - 9
3-4-1 Precautions for Inputting the Blank Shape	3 - 9
3-4-2 Setting the Element Start Point	3 - 10
3-4-3 Selecting the Inputting Method	3 - 11
3-4-4 Image Input	3 - 11
3-4-5 Symbol Input	3 - 15
1. Element Key ↓	3 - 16
2. Element Key ←	3 - 17
3. Element Key ↘	3 - 18
4. Element Key ↗	3 - 19

5. Element Key 	3 - 20
6. Element Key 	3 - 21
7. Element Key 	3 - 22
8. Element Key 	3 - 23
3-4-6 List Input	3 - 24
3-5 Inputting the Final Shape	3 - 26
3-5-1 Selecting the Item	3 - 26
3-5-2 Setting the Input Type	3 - 27
3-5-3 Setting the Element Start Point	3 - 28
3-5-4 Selecting the Inputting Method	3 - 29
3-5-5 Image Input	3 - 29
3-5-6 Symbol Input	3 - 34
1. Element Key 	3 - 34
2. Element Key 	3 - 35
3. Element Key 	3 - 37
4. Element Key 	3 - 38
5. Element Key 	3 - 39
6. Element Key 	3 - 41
7. Element Key 	3 - 42
8. Element Key 	3 - 43
9. Element Key 	3 - 44
10. Thread Specification	3 - 47
11. Overall Precautions	3 - 49
3-5-7 List Input	3 - 52
3-6 Turret Index Position	3 - 54
3-6-1 Selecting the Item	3 - 54
3-6-2 Setting the Turret Index Position	3 - 55
3-7 Selecting the Type of Machining	3 - 56
3-7-1 Selecting the Item	3 - 56
3-7-2 Selecting the Type of Machining	3 - 57
3-8 Automatic Program Creation	3 - 60
3-8-1 Selecting the Item	3 - 60
3-8-2 Selecting the Item	3 - 61
1. Automatic Program Creation	3 - 63
2. Custom Auto Programming	3 - 64
3. Jaw Shape Setting	3 - 64
4. Enlargement/Reduction of Picture	3 - 66

5. Interference Check with Picture	3 - 66
6. Program Editing	3 - 68
7. Replotting	3 - 68
8. Transfer	3 - 69
9. NC Data Check	3 - 70
3-9 Displaying the Tools Used	3 - 71
3-9-1 Selecting the Item	3 - 71
3-9-2 Displaying the Tools Used	3 - 72
3-10 Inputting/Outputting the Shape Data	3 - 73
3-10-1 Selecting the Item	3 - 73
3-10-2 Inputting/Outputting the Shape Data	3 - 74
3-11 Arithmetic Calculations and Incremental Programming	3 - 75
3-11-1 Four Arithmetic Calculations and Functional Calculations	3 - 76
3-11-2 Incremental Programming	3 - 77
3-12 Correcting the Shape Input	3 - 79
3-13 Custom Auto Programming	3 - 84
3-13-1 Selecting the Item	3 - 84
3-13-2 Operation List	3 - 85
3-13-3 Machining Contents (Tool Data)	3 - 87
3-13-4 Machining Contents (Cutting Conditions)	3 - 91
3-13-5 Machining Contents (Machining Area)	3 - 95
3-13-6 Machining Area Enlarged Plotting	3 - 101
3-14 NC Data Check	3 - 103
3-14-1 Selecting the Item	3 - 103
3-14-2 NC Data Check	3 - 103
3-14-3 Setting the Blank Shape	3 - 104
3-14-4 Graphic Check	3 - 104
4. MACHINING CONDITION FILE	4 - 1
1. Selecting the Item	4 - 1
2. Selecting the Item	4 - 2
3. Machining Sequence File	4 - 2
4. Tool File (HT15SII, HT20SII, HT20SII(BIG CHUCK))	4 - 5
5. Cutting Condition File (HT15SII, HT20SII, HT20SII(BIG CHUCK))	4 - 24

5. PARAMETERS	5 - 1
1. Selecting the Item	5 - 1
2. Real Value Parameters	5 - 3
3. Alphabet Parameters	5 - 15
4. Bit Parameters	5 - 29
5. Integer Value Parameters	5 - 30
6. Details of Parameter Functions	5 - 33

REFERENCE MATERIALS

1. When More Tools Are Automatically Selected Than the Number of Turret Faces (Tool Mounting Faces) Depending on Work-piece Shape	R - 1
2. Input Examples of Blank Shape and Final Shape	R - 4
3. How to Always Output High-speed Steel Drill (Nose Angle 118°)	R - 40
4. MULTI System Lathe Automatic Programming Plan Input Data Sheet	R - 41

6. PREPARATION OF TOOL LAYOUT	6 - 1
6-1 Machine Strokes	6 - 1
6-2 Tool Interference Drawing	6 - 6
6-3 Quick Setter and Workpiece Interference Drawing	6 - 10
6-4 Tool Layout	6 - 12
7. PROGRAMMING	7 - 1
7-1 Basis for Programming	7 - 1
7-1-1 Program Reference Point and Coordinate Values	7 - 1
7-1-2 Machine Reference Point	7 - 2
7-1-3 Program Example	7 - 3
8. NC PROGRAM	8 - 1
8-1 Details of F, S, T and M Functions	8 - 1
8-1-1 F Function (Feed Function)	8 - 1
8-1-2 S Function (Spindle Function)	8 - 2
8-1-3 T Function (Tool Function)	8 - 4
8-1-4 M Function (Miscellaneous Function)	8 - 7
8-1-5 Spindle Output Chart (Details of M40, and M41)	8 - 12
8-2 Details of G Function	8 - 14
8-2-1 List of G Function (Preparatory Function)	8 - 14
8-2-2 G50 Maximum Spindle Speed Setting	8 - 17
8-2-3 G00 Positioning	8 - 17
8-2-4 G01 Linear Cutting	8 - 19
8-2-5 G02/G03 Circular Cutting	8 - 22
8-2-6 G04 Dwell	8 - 25
8-2-7 G28 Automatic Reference Point Return	8 - 26
8-2-8 G30 2nd Reference Point Return	8 - 27
8-2-9 G36/G37/G38/G39 Stored Stroke Limit	8 - 29
8-2-10 G90/G94 Canned Cycle	8 - 33
8-2-11 G70/G71/G72/G73/G74/G75 Multiple Repetitive Cycle ...	8 - 44
8-2-12 G32/G92/G76 Threading	8 - 57
8-2-13 G10 Setting Tool Offset Amount	8 - 82
8-2-14 G150/G151 Groove Width Offset	8 - 83

8-2-15 G54 Work Coordinate System Setting (Workpiece Length) ..	8 - 86
8-2-16 G141/G142 Direct Designation of Tool Nose Radius Compensation Direction	8 - 87
9. DESCRIPTION OF ENGLISH PROGRAM	9 - 1
9-1 Number and Tool Function	9 - 1
9-2 Status Display Function	9 - 2
9-2-1 List of Status Display Functions	9 - 2
9-2-2 Rapid Traverse	9 - 4
9-2-3 Cutting Feed	9 - 7
9-2-4 Circular Arcs  and 	9 - 13
9-2-5 Maximum Spindle Speed	9 - 17
9-2-6 Spindle Speed Command (RPM) and Surface Speed Command (M)	9 - 18
9-2-7 Feed per Revolution F/E and Feed per Minute	9 - 20
9-2-8 Groove width Offset ON/OFF	9 - 21
9-2-9 Dwell Time	9 - 22
9-2-10 OD Cutting Cycle and End Facing Cycle	9 - 23
9-2-11 Threading, Variable lead Threading and Threading Cycle ..	9 - 38
9-2-12 X-axis Reference Point Return, Z-axis Reference Point Return and 2-axis Reference Point Return	9 - 72
9-3 Details of Miscellaneous Functions	9 - 73
10. TOOL NOSE RADIUS COMPENSATION AUTOMATIC CALCULATING FUNCTION ..	10 - 1
11. PROGRAM EXAMPLE (NC PROGRAMS)	11 - 1
11-1 Chuck Work	11 - 1
11-1-1 Machining Drawing	11 - 1
11-1-2 Chuck Work Program	11 - 2
11-2 Center Work	11 - 7
11-2-1 Machining Drawing	11 - 7
11-2-2 Center Work Program	11 - 8
11-3 Bar Work	11 - 10
11-3-1 Machining Drawing	11 - 10
11-3-2 Bar Work Program	11 - 11
11-4 Grooving	11 - 13
11-4-1 OD Grooving	11 - 14

11-4-2	ID Grooving	11 - 15
11-4-3	End Face Grooving	11 - 15
11-5	Sequential Machining of the 1ST/2ND Processes	11 - 17
11-6	Machining to Obtain Many Pieces from Short Material	11 - 21
12.	PROGRAM EXAMPLES (ENGLISH PROGRAMS)	12 - 1
12-1	Chuck Work	12 - 1
12-1-1	Machining Drawing	12 - 1
12-1-2	Chuck Work Program	12 - 2
12-2	Center Work	12 - 9
12-2-1	Machining Drawing	12 - 9
12-2-2	Center Work Program	12 - 10
12-3	Bar Work	12 - 13
12-3-1	Machining Drawing	12 - 13
12-3-2	Bar Work Program	12 - 14
12-4	Grooving	12 - 18
12-4-1	OD Grooving	12 - 18
12-4-2	ID Grooving	12 - 20
12-4-3	End Face Grooving	12 - 22
13.	APPENDIX TABLES	13 - 1
13-1	HITEC-TURN Tooling System	13 - 1
14.	REFERENCE MATERIALS	14 - 1
14-1	How to Calculate Tool Nose Radius Compensation Amount without using Tool Nose Radius Compensation Function	14 - 1
14-1-1	How to Obtain Tool Nose Radius Compensation Amount in Chamfering and Taper Cutting	14 - 3
14-1-2	How to Obtain Tool Nose Radius Compensation Amount in Circular Cutting	14 - 6
14-2	Calculation Formulas	14 - 8
14-2-1	How to Obtain Side and Angle of Right Triangle	14 - 8
14-2-2	How to Obtain Side and Angle of Inequilateral Triangle .	14 - 10
14-2-3	How to Obtain Taper and Intersecting Point of Circular Arc	14 - 11
14-2-4	Others (Metric Dimension)	14 - 14