

MACHINE MANUAL

The logo consists of the letters 'L1B' in a bold, stylized font. Each letter is filled with horizontal black bars, creating a striped effect. The 'L' has 8 bars, the '1' has 8 bars, and the 'B' has 8 bars.

L1B SERIES

L1B200/300/500

MODEL	L1B200BM
-------	----------

KOMATSU

CONTENS

1. FOREWORD	0 - 1
2. SAFETY INFORMATION	0 - 2
2.1 Safety infomation	0 - 2
2.4 Main specification lable	0 - 3

SAFETY

4. GENERAL PRECAUTIONS	1 - 1
5. PRECAUTIONS FOR INSTALLATION	1 - 3
6. PRECAUTIONS DURING OPERATION	1 - 4
6.1 Before operation	1 - 4
6.2 Operation machine	1 - 4
7. PRECAUTIONS FOR DIE CHANGE AND MAINTENANCE	1 - 5
7.1 Befor performing maintenance and die shange	1 - 5
7.2 Die change and maintenace	1 - 7
8. SAFETY FEATURES	1 - 8
8.1 Safety keys,plug and safety block	1 - 8
8.2 Safety distance and the two-hand control/the light guard	1 - 8
11. SAFETY LABELS	1 - 1 1
11.1 Position of safety labels	1 - 1 1
11.2 Safety labels	1 - 1 2

OPERATION

12. PARTS NAMES OF THE PRESS	2 - 1
12.1 General view	2 - 1
12.2 Parts names of operating equipment	2 - 2
12.3 Pneumatic and hydraulic panel	2 - 3
12.2 Parts names of operating equipment	2 - 5
13. EXPLANATION OF OPERATING EQUIPMENTS	2 - 6
13.1 Display panel	2 - 6
13.2 Portable two-hand control and operation panel	2 - 1 0
14. OPERATING OF THE PRESS	2 - 1 6
14.1 Chack before turning on the electric power and befor you work	2 - 1 6
14.2 Daily check before starting the main motor and befor you work	2 - 1 7
14.3 Starting the main motor	2 - 1 8
14.4 Daily check after starting the main motor	2 - 1 9
14.5 Starting operation	2 - 2 5
14.6 Stopping operation	2 - 2 7
14.7 Operation of total counter	2 - 2 9
14.8 Opetation of lot(reset)counter(optional)	2 - 3 1
14.9 Load monitor(LOM-SIT)	2 - 3 3

15. ADJUSTMENT	2-35
15.1 Slide adjustment	2-35
15.2 Ejector (automation optional)	2-36
15.3 Adjustment of electronic rotary cam (angle detector)	2-41
16. DIE CHANGE	2-47
16.1 Die change using the quick die change system (electrical control optional)	2-47
16.2 Die removing	2-52
17. PRECAUTIONS ON PRESS OPERATIONS	2-58
17.1 Precautions for blanking	2-59
17.2 Precautions for drawing and bending	2-59
17.3 Precautions for starting the motor	2-59
17.4 Precautions for press protective parts	2-59
17.5 Precautions on the die structure	2-60
18. RESET OPERATION	2-61
18.1 Reset operation when the EMG. STOP button is depressed	2-61
18.2 Reset operation when machine stops due to lowered air pressure of the clutch and brake	2-63
18.3 Reset operation when machine stop due to lowered lubricant pressure	2-65
18.4 Reset operation when the machine stops as light guard functions	2-67
18.5 Reset operation when machine stop due to hydraulic overload protector on	2-68

TROUBLE SHOOTING GUIDE

19. TROUBLE SHOOTING	
19.1 Troule shooting	3-1

MAINTENANCE

20. GENERAL MAINTENACE	
20.1 Guides to maintenance	4-1
20.2 Standard tightening torques for bolts and nuts	4-3
20.3 Recommended oil and grese	4-4
20.4 Periodic replacement of safety critical parts	4-5
21. INSPECTION AND MAINTENACE	
21.1 Inspection and maintenance table	4-6
21.2 Monthly check	4-11
21.3 Six month or per 1,000 hours check	4-15
21.4 Annual or per 2,000 heure check	4-29
21.5 Three year check by Komatsu upon order (overhaul)	4-48

INSTALLATION

22. INSTALLATION OF THE PRESS	
22.1 Precaution for installation	5 - 1
22.2 Oil supply	5 - 1
23. AFTER INSTALLATION	5 - 3
23.1 Connection of the shop air line	
23.2 Connection of electric power supply	5 - 5
23.3 Check the rotate direction of the flywheel	5 - 6
	5 - 7

SPECIFICATION

PRESS SPECIFICATION

Press specifications

Tonnage diagram

Limit on working capacity

Motion diagram

Slide

Belster

Flow-diagram

Foundation

General view

Circuit diagram (hard,soft)

Wiring diagtam

Haisenzu

INFIMATION

List of major electric components