

CNC SYSTEM

OSP-P200M

OPERATION MANUAL

(1st Edition)

Pub No. 5224-E (ME32-094-R1) June 2005

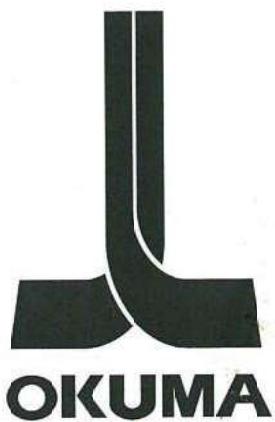


TABLE OF CONTENTS

FUNDAMENTALS

SECTION 1 PART NAMES AND FUNCTION 1

1. Operation Panels 1
1-1. Basic Construction of Operation Panels 1
1-2. Guide to Controls on Operation Panels 2
2. Screens 16
2-1. Mode Transition Charts 16
2-2. Screen Operations 26
3. One-touch Window Close Operation 29

OPERATION

SECTION 1 TURNING THE POWER ON AND OFF 30

1. Turning the Power ON 30
2. Turning the Power OFF 30
3. Emergency Stop 30

SECTION 2 OPERATION MODES 31

1. Operation Mode Basic Screen 31
1-1. Screen Display 31
1-2. Pop-up Windows 32

SECTION 3 MANUAL OPERATION 34

1. Axis Feed Operations 34
1-1. Manual Rapid Traverse Operation 34
1-2. Manual Cutting Feed Operation 35
1-3. Pulse Handle Feed 36
2. Spindle Operation 37
2-1. Starting the Spindle 37
2-2. Stopping the Spindle 37
2-3. Releasing the Spindle 37
2-4. Spindle Orientation 37
3. ATC 38
3-1. ATC Operation 38
3-2. Manual Tool Change Operation 46
3-3. Manual Magazine Operation 47
3-4. Manual Tool Change during Automatic Operation 48
4. APC 49
4-1. APC Operation 49

4-2. Automatic APC Operations.....	51
4-3. Manual APC Operation.....	52
SECTION 4 MDI OPERATION.....	53
1. Procedure for MDI Operation.....	53
2. Automatic Operation and MDI Operation.....	54
3. Subprogram Call in MDI Operation.....	55
SECTION 5 AUTOMATIC OPERATION	56
1. Program Files	56
2. Program Selection	58
2-1. Selection of Main/Subprogram	58
2-2. Schedule Program Function	61
3. Cycle Start and Slide Hold.....	63
3-1. Cycle Start.....	63
3-2. Slide Hold	63
4. Resetting the NC	65
5. Sequence Number Search and Mid-Cycle Start.....	66
5-1. Sequence Number Search	66
5-2. Mid-Cycle Start (Start after Sequence Number Search)	69
6. Return Search and Sequence Restart.....	70
6-1. Return Search	70
6-2. Sequence Restart.....	72
7. Sequence Stop (Option)	74
8. Single Block	76
9. Optional Block Skip.....	77
10. Program Branch(Optional).....	77
11. Optional Stop	77
12. Mirror Image Function.....	78
12-1. Mirror Image (Local Coordinate System).....	78
12-2. Mirror Image Function in Work Coordinate System.....	81
13. Override	84
13-1. Feedrate Override	84
13-2. Spindle Override.....	84
14. Manual Intervention and Restart.....	85
15. Pulse Handle Shift Operation	88
16. Lock Functions.....	89
16-1. Machine Lock	89
16-2. Axis Command Cancel	89
16-3. Auxiliary (S.T.M) Function Lock.....	90
17. Dry Run.....	91
18. Library Program Registration.....	92

18-1.Registering a Library Program.....	93
18-2.Erasing a Library Program.....	94
18-3.Initializing Library Program Storage Buffer Area	94
18-4.Specifying the Library Program Storage Buffer Area Size	95
19.Editing Selected Program.....	96
19-1.QUICK EDIT Function	96
19-2.Editing the Main Program	98
20.Operation End Lamp (Option).....	99
21.Operation End Buzzer (Option)	99
22.Alarm Lamp (Option)	99
23.Automatic Power OFF	99
24.Work Counter (Option).....	100
25.Hour Meter (Option).....	101
25-1.POWER ON TIME Hour Meter	101
25-2.NC RUNNING TIME Hour Meter	101
25-3.CUTTING TIME Hour Meter	101
25-4.SPINDLE REVOLUTION TIME Hour Meter	101
SECTION 6 NC OPERATION PANEL/SCREEN DISPLAY.....	102
1. Actual Position Display	102
1-1. ACTUAL POSITION Display Screen 1/4 (Normal Display Screen).....	102
1-2. ACTUAL POSITION Display Screen 2/4 (RELATIVE ACTUAL POSITION Dis- play Screen)	105
1-3. ACTUAL POSITION Display Screen 3/4 (Detail Display Screen)	108
1-4. ACTUAL POSITION Display Screen 4/4	109
2. Main Program Display	110
2-1. Main Program Display Screen with Machine Conditions.....	110
2-2. Main Program Display Screen with Subprogram.....	111
2-3. Main Program Display Screen with Valid G/M Code	112
2-4. Main Program Display Screen with Schedule Program.....	113
3. Schedule Program Display	114
3-1. Schedule Program Display Screen with Machine Conditions.....	114
3-2. Schedule Program Display Screen with Main Program.....	115
4. MDI Program Display.....	116
5. BLOCK DATA Display	117
SECTION 7 HELP FUNCTION	119
1. Help Screen	119
1-1. Using the Menu Display Area	120
1-2. Item Selection from Contents Screen	120
2. Search	121
3. Terminating Help Screen.....	121
4. Supplementary Information.....	121

DATA OPERATION

SECTION 1 DATA SETTING MODES	122
1. Guide to Modes	122
SECTION 2 ZERO SETTING	123
1. Work Coordinate System Zero Point	123
2. Zero Offset Setting.....	123
2-1. Basic Procedure for Setting Zero Offset Data	123
2-2. Other Operations	125
SECTION 3 TOOL DATA SETTING.....	126
1. Tool Data Setting Operation	126
1-1. Basic Tool Data Setting Operation	126
1-2. Other Operations	129
2. Tool Shape	130
3. ATC Pot Number/Tool Number Correspondence	133
3-1. Memory Random ATC	133
3-2. ATC with Fixed Addresses (Including Multi-magazine)	138
3-3. Collective Clear (TOOL CANCEL) and Collective Setting (TOOL SET).....	142
SECTION 4 PARAMETER SETTING	144
1. Types of Parameter	144
2. Basic Parameter Setting Operations	145
2-1. Parameter Setting Screens	145
2-2. Setting Parameters.....	146
2-3. Other Operations	149
3. Setting the Parameters	151
3-1. General Parameters	151
3-2. NC Optional Parameters	165
3-3. Machine User Parameter	186
3-4. Machine System Parameter	216
SECTION 5 PARAMETER I/O FUNCTION.....	232
1. Parameter Input/Output Operations.....	232
1-1. Input.....	233
1-2. Output.....	234
1-3. Verify	239
1-4. Correspondence between Q Numbers and Parameters	242
1-5. Data Format.....	245
1-6. Supplementary Explanation of Parameter Input/Output Function	246

SECTION 6 PROGRAM OPERATIONS	248
1. Basic Screen in the Program Operation Mode	248
1-1. DIRECTORY Screen	248
1-2. PROGRAM EDITING Screen	249
2. Program File Operations.....	252
2-1. Changing the Directory Display	253
2-2. Creating a New File or Directory	259
2-3. Displaying a Program Source.....	260
2-4. Copying a File or Directory	261
2-5. Renaming a File or Directory	264
2-6. Deleting a File or Directory	265
2-7. Protecting a File or Directory	266
2-8. File/Directory Operations	267
3. Program Editing Operations	282
3-1. Copy	283
3-2. Delete	284
3-3. Paste	285
3-4. 1 Line Insert.....	285
3-5. 1 Character Delete	286
3-6. Overwr/Insert	286
3-7. Another File	287
3-8. Find.....	290
3-9. Replace	291
3-10. Line Jump	293
3-11. Sequence No. Arrange	295
3-12. File Insert.....	297
3-13. Save	298
3-14. Quit / Stop.....	299
3-15. Select & Quit.....	300
4. Device Information Operations	301
5. Initialization	302
6. Preference Setting Operations	303
6-1. File Pattern	304
6-2. Sort	305
6-3. Display Property	306

APPENDIX

SECTION 1 APPENDIX	307
1. Optional Parameter.....	307