

INSTRUCTION MANUAL

TL-3/5

MORI FANUC 10T-A



MORI SEIKI

MORI SEIKI CO., LTD.

NARA JAPAN

MACHINE MANUAL

TL-3/5

TABLE OF CONTENTS

- A. EXTERNAL VIEW
- B. SPECIFICATIONS
- C. OPERATING RANGES
- D. TOOLING MANUAL
- E. INSTALLATION
- F. LUBRICATION
- G. HYDRAULIC UNIT
- H. STANDARD CHUCK AND CYLINDER
- I. CENTERING THE TURRET
- J. TAIL STOCK
- K. INSPECTION AND MAINTENANCE
- L. MAIN MOTOR DRIVE UNIT

A. EXTERNAL VIEW

CONTENTS

EXTERNAL VIEW

TL-3/5 Front View	P-1
TL-3/5 Right Side View	P-2

B. SPECIFICATIONS

CONTENTS

SPECIFICATIONS

1.	TL-3A, 3B Machine Specifications	P-1
1.1	TL-5A, 5B (1000/2000/3000) Machine Specifications	P-3
2.	TL-3/5A Spindle Speed - Output Performance Curve (High-speed type)	P-5
2.1	TL-3/5B Spindle Speed - Output Performance Curve (Low-speed type)	P-6
3.	▲ Ratings	P-7
3.1	▲ Continuous rating	P-7
3.2	▲ Short-time rating	P-7

C. OPERATING RANGES

CONTENTS

OPERATING RANGES

1.	TL-3 Operating Range	P-1
2.	TL-5 Operating Range	P-2
3.	6-station (B type) and 8-station (A type) Turret Movable Range	P-3
4.	▲8-station Turret Cutting Interference Diagram	P-4
5.	▲8-station Turret Cutting Tool Interference Diagram	P-5
6.	▲6-station Turret Cutting Tool Interference Diagram	P-6
7.	▲6-station Turret Cutting Tool Interference Diagram	P-7
8.	▲TL-3/5 Swing	P-8
9.	▲TL-5 (1000) Tail Stock Spindle Interference Diagram	P-9
10.	▲TL-5 (2000, 3000) Tail Stock Spindle Interference Diagram ..	P-10

D. TOOLING MANUAL

CONTENTS

TOOLING MANUAL

	TL-3/5 Tooling System	P-1
1.	▲ Standard Cutting Tool	P-2
1.1	▲ Standard fitting of the O.D. cutting tool	P-2
1.2	▲ Non-standard "normal" fitting of the O.D. cutting tool	P-3
1.3	▲ Clamping plate and spacer for center work (TL-3)	P-4
2.	▲ Cutting Tool Holder for Center Work (TL-5)	P-5
3.	Cutting Tool Holder for I.D. and Face Work	P-6
3.1	Cutting tool holder for 20 mm (3/4") sq. tool	P-6
3.2	Cutting tool holder for 25 (1") sq. tool	P-6
4.	Exclusive Cutting Tool Holder for Grooving, Cutoff, and Thread	P-7
5.	Cutting Tool Holder for I.D. Cutting	P-8
5.1	Boring bar holder	P-8
5.2	Socket holder	P-9
6.	Drill Sockets	P-10
6.1	MT-3 drill socket	P-10
6.2	MT-4 drill socket	P-10
6.3	Dimensions of MT-3 drill socket (T-22012) [T-22013]	P-11
6.4	Dimensions of MT-4 drill socket (T-22014) [T-22015]	P-12
7.	Boring Bar Socket	P-13
7.1	Small diameter boring bar socket	P-13
7.2	Boring bar socket	P-13
7.3	Dimensions for boring bar socket (ø8, ø10, ø12, and ø16)	P-14
7.4	Dimensions for boring bar socket (ø20, and ø25)	P-15
8.	Distance from Spindle Center Line to Cutting Tool Holder at X-axis Zero Return Position	P-16
9.	Tooling Diagram	P-17

E. INSTALLATION

CONTENTS

INSTALLATION

1.	▲ Installation Site	P-1
2.	▲ Electric Power Source	P-1
3.	▲ Grounding	P-1
4.	Machine Power Capacity List (TL-3/5)	P-2
5.	▲ Cautionary Notes during Installation	P-2
6.	▲ Before Turning the Power ON for the First Time	P-3
7.	▲ After Turning the Power ON for the First Time	P-3
8.	▲ TL-3/TL-5 (1000) Installation Diagram	P-4
9.	▲ TL-5 (2000)/TL-5 (3000) Installation Diagram	P-5
10.	▲ TL-3/TL-5 (1000) Foundation Diagram	P-6
11.	▲ TL-3/TL-5 (2000) Foundation Diagram	P-7
12.	▲ TL-5 (3000) Foundation Diagram	P-8
13.	▲ Hoisting the TL-3/5 (1000)	P-9
14.	▲ Hoisting the TL-5 (2000, 3000)	P-10
15.	▲ Level and Level Base	P-11

F. LUBRICATION

CONTENTS

LUBRICATION

TL-3/5 Headstock and Surrounding Components	P-1
1. ▲ Headstock	P-2
2. ▲ Tool Post	P-3
3. X-axis Gearbox	P-3
4. ▲ Z-axis Gearbox	P-4
5. ▲ Tail Stock (Built-in Type)	P-4
6. Cutting Oil	P-5
7. ▲ Chuck	P-6
8. ▲ Slideway Lubrication	P-7
8.1 ▲ Adjustment of discharging amount	P-8
8.2 Parts identification	P-8
8.3 ▲ Manual lubrication	P-9
8.4 ▲ Cautionary notes	P-9
8.5 Motor rotational direction check	P-9
8.6 ▲ Filter removal	P-10
8.7 ▲ Float switch	P-10
8.8 ▲ Lubrication oil distributor (Showa Kiki)	P-11
8.9 ▲ Daily inspection	P-13
8.10 Destination instruction plate	P-14
9. ▲ Headstock Lubrication Oil Filter	P-15
9.1 ▲ Oil guide table	P-16
9.2 ▲ Types of oil available	P-17

G. HYDRAULIC UNIT

CONTENTS

HYDRAULIC UNIT

Hydraulic Unit Assembly Diagram	P-1
1. ▲ Hydraulic Pressure Adjustment	P-2
1.1 ▲ Main pressure adjustment	P-2
1.2 Turret clamping	P-3
1.3 ▲ Chuck pressure	P-3
1.4 Tail stock spindle pressure	P-3
2. Working Oil Supply and Quantity	P-4
3. Oil Change (every 6 months)	P-4
4. Hydraulic Circuit Diagram (DAIKIN-made)	P-5
5. Hydraulic Unit Maintenance Parts List	P-6
6. ▲ Solenoid Coil and Valve Replacement	P-7
6.1 Exploded view	P-7
6.2 Terminal box replacement (JSO-GO2)	P-8
6.3 Solenoid coil replacement (JSO-GO2)	P-8
6.4 ▲ Solenoid valve replacement	P-9
7. Solenoid Valve Assembly Diagram	P-11
7.1 Solenoid valve troubleshooting	P-12
8. Motor/Pump Disassembly	P-14
8.1 Appearance	P-14
8.2 Cross section of connections	P-14
8.3 Disassembly diagram	P-15
8.4 Motor pump disassembly procedure	P-15
9. Troubleshooting	P-16
9.1 Irregular cylinder operation	P-16
9.2 Pump noise or other noise	P-17
9.3 Excessive pump wear and damage	P-17
9.4 Overheated or burnt motor	P-18
9.5 Overheated hydraulic oil	P-18
9.6 Improper valve operation	P-19
9.7 Piping problems	P-19

H. STANDARD CHUCK AND CYLINDER

CONTENTS

STANDARD CHUCK AND CYLINDER

1.	▲ Chuck Mounting Procedure	P-1
2.	Draw Bar Length	P-5
3.	▲ Chuck Cylinder Combination Table	P-6
4.	▲ "HOWA" Hydraulic Chuck (HO1MA-10"/12")	P-7
4.1	HOWA rotary hydraulic cylinder HH4C-140	P-9
4.2	Draw bar	P-10
4.3	Cylinder adapter	P-12
5.	▲ "MATSUMOTO" Hollow Chuck (HA8-11 (III), HA8-12 (II))	P-13
5.1	MATSUMOTO rotary hydraulic cylinder	P-14
5.2	MATSUMOTO rotary hydraulic cylinder dimensions	P-15
5.3	Draw pipe and cylinder adaptor	P-16
6.	MATSUMOTO Hollow Chuck (SH-12)	P-18
6.1	Chuck flange (F14301) (in mm)	P-19
6.2	Draw pipe and cylinder adaptor	P-20
7.	Soft Jaw	P-21
8.	Main Spindle Nose (A ₂ Type)	P-25

I. CENTERING THE TURRET

CONTENTS

CENTERING THE TURRET

- 1. ▲ Centering the Turret Head P-1
 - 1.1 Tool requirements P-1
 - 1.2 ▲ Adjustment procedure P-2

J. TAIL STOCK

CONTENTS

TAIL STOCK

1. Tail Stock Adjustment P-1

K. INSPECTION AND MAINTENANCE

CONTENTS

INSPECTION AND MAINTENANCE

1.	▲ Functional Tests of Major Electrical Components	P-1
1.1	▲ Magnet switch	P-1
1.2	▲ Thermal relays	P-2
1.3	Relay	P-3
1.4	Circuit protector (breaker)	P-5
1.5	Fuse	P-6
1.6	Electrical control unit	P-8
1.7	Limit switch and proximity switch	P-14
2.	▲ Zero Return Adjustment	P-20
2.1	Zero return adjustment	P-20
2.2	Cautionary notes	P-23
2.3	Zero return adjustment procedure	P-23
2.4	▲ Z-axis zero return position list	P-25

L. MAIN MOTOR DRIVE UNIT

CONTENTS

MAIN MOTOR DRIVE UNIT

AC SPINDLE MOTOR

1. Spindle Servo Unit P-1

OPERATION MANUAL

MORI FANUC 10T-A

IMPORTANT

Before using your Mori Seiki CNC lathe for the first time, this Instruction Manual should be read carefully. It is especially important that the WARNINGS contained in the Instruction Manual be thoroughly understood.

This Instruction Manual should be kept in a safe place where it is always easily accessible during operations of your Mori Seiki CNC lathe.

TABLE OF CONTENTS

1. SPECIFICATIONS
2. FUNCTION EXPLANATION
3. MANUAL OPERATION
4. AUTOMATIC OPERATION
5. PREPARATION FOR PROCESSING
6. SELF DIAGNOSIS FUNCTION
(LADDER DIAGRAM EXPLANATION)
7. PARAMETER SETTING
8. ERROR INDICATION
9. VOLUME AND SHORT BAR SETTING
10. AC SPINDLE

1. SPECIFICATIONS

CONTENTS

SPECIFICATIONS

1. MORI FANUC 10T-A Specifications P-1
2. G Code List P-4
3. M Code List P-7

2. FUNCTION EXPLANATION

NOTICE

Refer to "FANUC SYSTEM-10TA, 11TA Operation Manual," issued by FANUC, for a functional explanation and operating procedures of the NC unit (MDI & DPL unit).

CONTENTS

FUNCTION EXPLANATION

	Ex: SL-3 Right Side View	P-1
	MDI & DPL PANEL IDENTIFICATIONS (F10T-A)	P-2
	MDI & DPL PANEL IDENTIFICATIONS (F10T-F)	P-3
	Machine side control panel	P-4
	SYMBOL DECIPHERMENT LIST	P-5
	Upper Side of Control Panel	P-7
	Left side of DRIVE UNIT BOX (SL-1 ~ 4)	P-8
	LEFT SIDE OF DRIVE UNIT BOX (SL-5 ~ 7)	P-9
	BACK OF NC & ELECTRICAL CONTROL UNIT (SL-1 ~ SL-7)	P-9
	BACK DOOR OF DRIVE UNIT BOX (SL-1 ~ SL-7)	P-9
1.	MDI & DPL Panel	P-10
1.1	CRT Character Display	P-10
1.2	PAGE	P-10
1.3	CURSOR	P-10
1.4	ADDRESS	P-11
1.5	DATA	P-11
1.6	INPUT	P-11
1.7	START	P-11
1.8	RESET	P-11
1.9	NC/PC	P-12
1.10	Soft keys	P-12
1.11	▲ POWER ON/OFF Pushbuttons	P-12
2.	Function selection keys	P-14
3.	Machine Control Panel	P-15
3.1	MODE	P-15
3.1.1	EDIT	P-15
3.1.2	MEMORY	P-15
3.1.3	MDI (MANUAL DATA INPUT)	P-15
3.1.4	▲ HANDLE	P-16
3.1.5	JOG	P-16
3.1.6	RAPID	P-16
3.1.7	ZRN (ZERO RETURN)	P-16
3.2	CYCLE START	P-17
3.3	FEED HOLD	P-17
3.4	HANDLE (MANUAL PULSE GENERATOR)	P-17

3.5	HANDLE AXIS	P-18
3.6	▲ JOG BUTTONS	P-18
3.7	▲ FEED RATE OVERRIDE	P-18
3.7.1	▲ RAPID OVERRIDE	P-19
3.8	▲ TURRET	P-20
3.9	▲ SPINDLE RANGE Select Switch	P-20
3.10	▲ Spindle Range Changeover Button (RGST)	P-21
3.11	SPINDLE SPEED (Manual Spindle Speed Control)	P-21
3.12	▲ SPINDLE (Spindle Start)	P-21
3.13	SPINDLE JOG	P-22
3.14	COOLANT	P-22
3.15	TAIL STOCK QUILL	P-22
3.16	TAIL STOCK INTERLOCK	P-22
3.17	TAIL STOCK (Only for SL-5,6,7)	P-23
3.18	▲ MACHINE LOCK	P-24
3.19	BLOCK DELETE	P-24
3.20	▲ DRY RUN	P-25
3.20.1	▲ Note for DRY RUN	P-25
3.21	OPTIONAL STOP	P-25
3.22	▲ SINGLE BLOCK	P-25
3.23	EMERGENCY STOP (ESP)	P-26
3.24	CHUCK CLAMP	P-26
3.25	▲ ERROR	P-26
3.26	▲ EDITING KEY	P-27
3.27	ILLUMINATION	P-27
3.28	▲ SPINDLE METER	P-27
3.29	PROGRAM END	P-27
3.30	▲ PARTS CATCHER	P-28
3.31	▲ WORK COUNTER	P-28
3.32	DRIVE UNIT BOX	P-29
3.32.1	CHUCKING	P-29
3.32.2	POWER SOURCE	P-29
3.32.3	MAIN SWITCH	P-29
3.32.4	DOOR INTERLOCK	P-30

3. MANUAL OPERATION

CONTENTS

MANUAL OPERATION

1.	▲ Power Supply	P-1
2.	Turning Power Cutoff	P-2
3.	▲ Spindle Start	P-3
3.1	When changing spindle rotational direction	P-4
3.2	▲ Spindle range switching during spindle rotation	P-4
3.3	▲ Spindle Neutral	P-4
4.	Handle Feed	P-5
5.	Jog Feed	P-6
6.	Rapid Feed	P-7
6.1	Jog Button Operation	P-8
7.	Zero Return	P-9
7.1	Perform Zero Return Operation for The Following Cases	P-9
7.2	Zero Return Direction	P-9
7.3	▲ Precautions for Zero Return	P-10
7.4	Z Axis Zero Return Position	P-10
7.5	Typical Application of Z Axis Zero Return	P-10
8.	▲ Chuck Opening and Closing	P-11
9.	▲ Turret Indexing	P-12
10.	▲ Tail Stock Positioning and Clamping (for SL-3,4)	P-13
10.1	Tail Stock Movement (for SL-5,6,7)	P-14
10.2	▲ Dog Adjustment	P-15
11.	▲ Tail Stock Quill Movement	P-16
12.	Coolant	P-16
13.	Chuck Pressure and Tail Atock Quill Pressure Adjustment ...	P-17
13.1	▲ Chucking Pressure	P-17
13.2	Tail Stock Quill Pressure	P-17
14.	Parts Catcher Projecting/Retracting	P-18
15.	▲ Work Counter	P-19

4. AUTOMATIC OPERATION

CONTENTS

AUTOMATIC OPERATION

1.	▲ Check Prior to Automatic Operation	P-1
2.	▲ Memory Operation	P-4
3.	CRT Functions and Operation	P-5
3.1	Flow Chart Symbols	P-5
3.2	▲ Status Display	P-6
3.3	▲ Key Inputs	P-8
3.4	Warning Message	P-11
3.5	Display of Program Number and Sequence Number	P-12
3.6	Present Position Display and Setting	P-12
3.6.1	Display of Present Position	P-12
3.6.2	▲ Setting of The Present Position	P-14
3.7	Program Display	P-19
3.8	Display of Program Command Value	P-20
3.9	Setting	P-22
3.9.1	Input/Output Display and Setting	P-22
3.9.2	Display and Setting of /settable Parameters	P-26
3.9.3	▲ Display and Setting of Menu Switch	P-30
4.	▲ MDI Operation	P-32
5.	Procedure for Storing NC Tape Data in the Memory	P-35
6.	Program Registration Using The MDI & CRT Panel key	P-36
7.	Program Number Search	P-38
8.	Procedure for Returning the Program to Its Beginning	P-42
9.	Program Editing	P-43
9.1	▲ Foreground and Background Modes	P-43
9.2	Program Editing	P-45
9.3	Forward Search	P-45
9.4	Backward Search	P-47
9.5	Alteration, Insertion and Deletion	P-48
9.6	Condensing the Memory	P-51
9.7	Program Deletion	P-53
9.8	Program Punchout (ALL Programs)	P-55
9.8.1	Program Punchout (Designated Programs)	P-56
9.9	Display of Numbers Registered	P-59

5. PREPARATION FOR PROCESSING

This chapter describes general preparations for processing. Methods and figures described may sometimes be inappropriate for some jobs. Read this chapter of general procedures and then adapt them for your own particular requirements.

CONTENTS

PREPARATION FOR PROCESSING

	NC Lathe Operation Procedure	P-1
1.	Forming of Soft Jaws	P-2
1.1	When Machining by Holding the Rough Surface of Workpiece .	P-2
1.2	When machining the workpiece in the second process by holding the workpiece at the pre-machined dia. (or finished dia.)	P-3
1.3	Soft Jaw Forming	P-4
2.	Tool Offset	P-7
2.1	▲ Tool Coordinate System Setting (Tool Offset Setting) -1.	P-9
2.2	Tool Coordinate System Setting (Tool Offset Setting) -2 ..	P-17
2.2.1	Before Making Tool Offset	P-17
2.2.2	Tooling Diagram (SL-3A)	P-18
2.2.3	Procedure	P-19
2.2.4	X Axis	P-21
2.2.5	Z Axis	P-21
2.2.6	Relation of Each Value	P-22
2.2.7	Tool Offset Calculation Table	P-23
2.3	Displaying and Setting Offset Values	P-24
2.3.1	Displaying and Setting Tool offset Values	P-24
	Glossary of Numerical Control Terms	P-29

6. SELF DIAGNOSIS FUNCTION
(LADDER DIAGRAM EXPLANATION)

CONTENTS

SELF DIAGNOSIS FUNCTION

1.	Ladder Diagram	P-1
2.	I/O Interface	P-1
2.1	Input Interface	P-1
2.2	Output Interface (DO)	P-2
2.3	Reading the Interface Diagram	P-4
2.3.1	Address Numbers	P-4
2.3.2	Terminal Numbers	P-5
2.3.3	Signal Names.....	P-5
3.	Ladder Diagram	P-6
3.1	Subroutine	P-7
3.2	Ladder Diagram	P-9
4.	Displaying PC Input/Output Signal and Internal Reley (PCDGN)	P-11
5.	PC Ladder Diagram Display	P-11
6.	Turret-related Output Signal Table	P-15
7.	SL-1 ~ 7 (MFNC-3, 10TF) Tool Position Proximity Switch Table	P-16
8.	Spindle Speed Change Input/output Table	P-18

7. PARAMETER SETTING

IMPORTANT

- 1) Once the parameter has been set, no further adjustment is required. if some modification is necessary, contact MORI SEIKI.
- 2) For more details, refer to "FANUC SYSTEM 10TA, 11TA Operation manual" issued by FANUC LTD.
- 3) Shown below are the standard parameter.
A priority must be given to the parameter discription in the ELECTRICAL CIRCUIT DIAGRAM file delivered with the actual machine.

CONTENTS

PARAMETER SETTING

1.	PC Data Setting and Display	P-1
1.1	Timer Setting and Display	P-1
1.2	Counter Setting and Display	P-4
1.3	Setting and Display of Keep Relay and Holding Memory Control Data	P-6
1.4	▲ Data Table Setting and Display	P-9
2.	NC Parameter setting	P-12
2.1	Outputting Parameters by Punching Paper Tape and Registering Parameters from Paper Tape	P-13
2.1.1	Outputting Parameters by Punching Tape	P-13
2.2	Setting through Parameter Tape	P-14
3.	▲ Timer List	P-15
4.	▲ PC Parameter List	P-17
5.	▲ Parameter List	P-30

8. ERROR INDICATION

CONTENTS

ERROR INDICATION

1.	Error Table	P-1
----	-------------------	-----

9. VOLUME AND SHORT BAR SETTING

IMPORTANT

Once volumes and short bars have been set.
No further adjustment is required. If some
modification is necessary, contact MORI SEIKI.

CONTENTS

VOLUME AND SHORT BAR SETTING

1.	Master Print Board	P-1
2.	Servo Amp	P-2
3.	Z-Axis Servo Amp (AL-2, SL-0)	P-3
4.	Spindle Unit	P-4
5.	Orientation Print Board	P-5
6.	Attached sheet	P-6

10. AC SPINDLE



10. AC SPINDLE

1. Setting and Adjustment of AC Spindle Servo Unit P-1
 - 1.1 Printed Circuit Board Parts Layout Drawing P-1
 - 1.2 Main Components Table P-2
2. Adjustment on Printed Circuit Board P-3
 - 2.1 Check Terminal Content P-8
3. Digital AC Spindle Servo Unit P-10
 - 3.1 Part Arrangement on printed Board P-10
 - 3.2 How to set the Parameters P-11
 - 3.3 Parameter List for Digital AC Spindle Servo Unit P-14
4. Daily Maintenance P-16
 - 4.1 AC Spindle Motor P-16
 - 4.2 AC Spindle Unit P-16
5. Troubleshooting P-17
 - 5.1 Power On Indicating Lamp "PIL" Does Not Light P-18
 - 5.2 Printed Circuit Board Alarm Lamp is On P-19
 - 5.3 Motor does not Rotate; or, Rotating Speed P-30
is not as Commanded
 - 5.4 Abnormally Violent Vibration and Noise P-30
During Rotation
 - 5.5 Abnormal Noise from Motor during Slowdown P-31
 - 5.6 Speed Overshooting or Hunting P-31
 - 5.7 Decrease in Cutting Strength P-31
 - 5.8 Spindle Orientation Cannot Be Performed P-32
Correctly
 - 5.9 Overlong Acceleration and Deceleration Time P-32