


***isel*-4-axes servo motor control card UPMV 4/12**

Version 3.00, 3.10, 3.20

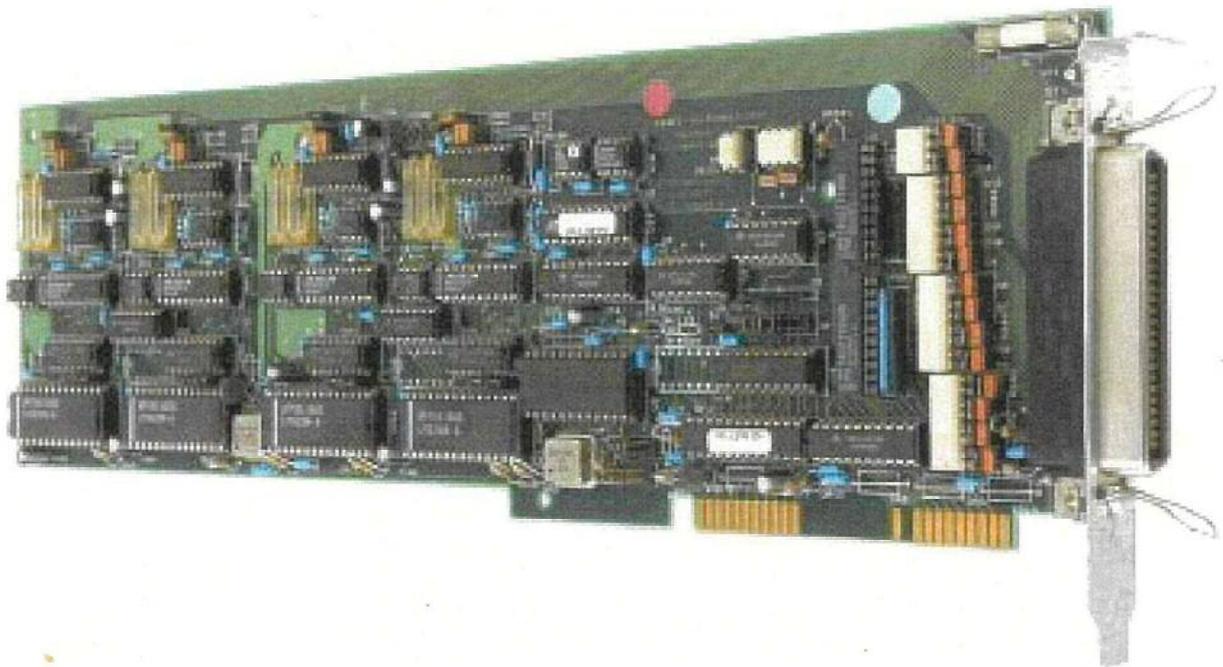

Operation Instructions

Contents

Hardware description	1
1 Introduction	1
1.1 Step motor or servo motor?	1
1.2 The difference between a handling system and a CNC processing unit with regard to the control system	3
1.3 What you will get from us and what you have to contribute yourself	6
1.4 Why this design?	8
2 The PC card	10
2.1 The layout of the PC card	10
2.2 The base address of the PC card and the individual port addresses	12
2.3 The axis controllers	14
2.4 The timers, the hardware interrupts and the unlucky owners of Pentium computers with PCI bus	17
2.5 Safety measures of a servo controller	18
2.6 The allocation of the input and output ports	20
2.7 Connection of the encoder	22
2.8 Driver version 3.10 and hardware differences to version 3.00	23
2.9 The allocation of the 50-pin RIBBON connector	24
Software description	26
3 The Software Driver for the Controlling of Servo Motors	26
3.1 How you can install the driver	26
3.2 Some preliminary explanations on the software driver	30
3.2.1 The movement segment	30
3.2.2 How is a movement segment realized?	32
3.2.3 How to generate a profile using the <i>isel</i> intermediate format	34
3.2.4 How the path processing is realized	37
3.2.5 How to use the path generator	42
3.2.5.1 Using the object files for the calculation of the path data	43
3.2.5.2 Using the BAHN.EXE program for the calculation of the path data	49
3.2.5.3 Possible errors in the calculation of the path data	52
3.2.6 Safety of the equipment	54
3.2.6.1 Watch-Dog signal and control byte	54
3.2.7 The reference run	60
3.2.8 Speed-dependent peripheral control	62
3.2.9 The data format, the units micrometer, angular second and the special figure NO MOVE VALUE	64

3.2.10	The many speeds and how can they be calculated.....	67
3.2.11	The controller and its parameters.....	72
3.2.12	How you can use the driver.....	75
3.2.13	The two-digit complementary presentation of the numbers.....	77
3.2.14	Has the driver already been installed?.....	79
3.2.15	Driver version 3.10 and software differences to version 3.00.....	81
3.2.16	No movement or jerky movement, what have you done wrong?.....	83
3.2.17	Interpolation time.....	84
3.2.18	Starting the driver with option switch /DSM for controlling the main spindle ...	84
3.2.19	What will you have to do to use our control system under WINDOWS NT/2000?.....	85
3.2.20	Possible errors when calling up the driver.....	86
3.3	Driver functions.....	98
3.3.1	Function 1: Requesting for the driver version.....	98
3.3.2	Function 2: Reset.....	98
3.3.3	Function 3: Switching the Test mode on or off.....	100
3.3.4	Function 4: Changing the control parameters.....	101
3.3.5	Function 5: Requesting for the driver status.....	102
3.3.6	Function 6: Reference run.....	110
3.3.7	Function 7: Definition of a time delay.....	111
3.3.8	Function 8: Switching on or off of the manual mode.....	112
3.3.9	Function 9: Switching on or off of the Teach-In mode.....	113
3.3.10	Function 10: Start-Stop-Break-Abort.....	115
3.3.11	Function 11: Setting of the current point as the work piece zero point.....	116
3.3.12	Function 12: Setting of the work piece zero point.....	117
3.3.13	Function 13: Deleting of the work piece zero point.....	118
3.3.14	Function 14: Setting of the software limit switches.....	118
3.3.15	Function 15: Blocking /Releasing of software limit switches.....	119
3.3.16	Function 16: Reading of a byte from an input port.....	120
3.3.17	Function 17: Output of a byte to an output port.....	121
3.3.18	Function 18: Requesting for the actual positions of the axes.....	121
3.3.19	Function 19: Requesting for the actual tool speed.....	122
3.3.20	Function 20: Setting of the segment speed.....	123
3.3.21	Function 21: Setting of the change factor of the tool speed.....	124
3.3.22	Function 22: Setting of the Teach-In speed.....	125
3.3.23	Function 23: Setting of the rapid speed.....	126
3.3.24	Function 24: Relative linear normal movement.....	127
3.3.25	Function 25: Absolute linear normal movement.....	129
3.3.26	Function 26: Relative linear rapid movement.....	130
3.3.27	Function 27: Absolute linear rapid movement.....	131
3.3.28	Function 28: Relative circular movement.....	132
3.3.29	Function 29: Absolute circular movement.....	134
3.3.30	Function 30: Relative helix movement.....	135
3.3.31	Function 31: Absolute helix movement.....	138
3.3.32	Function 32: Setting of the path speed.....	139
3.3.33	Function 33: Path movement.....	140
3.3.34	Function 34: Requesting for the path parameters.....	145
3.3.35	Function 35: Changing of the ramp parameters.....	146
3.3.36	Function 36: Reading of a bit of a predefined input port.....	150
3.3.37	Function 37: Reading of a predefined input port.....	151
3.3.38	Function 38: Output of a bit at a predefined output port.....	151
3.3.39	Function 39: Output to a predefined output port.....	152
3.3.40	Function 40: Reading of a bit of a predefined output port.....	153

3.3.41	Function 41: Reading of a predefined output port.....	154
3.3.42	Function 42: Initialization of all predefined output ports.....	154
3.3.43	Function 43: Switching on and off of the speed-dependent output at a predefined output port.....	155
3.3.44	Function 44: Reserving or releasing of a data byte	156
3.3.45	Function 45: Reading of a reserved data byte	157
3.3.46	Function 46: Writing of a reserved data byte	157
3.3.47	Function 47: Switching-on or switching-off of Sleep Mode	157
3.3.48	Function 48: Activation/Deactivation of the safety circuit	158
3.3.49	Function 49: Checking of the control byte.....	159
3.3.50	Function 50: Requesting for the desired positions of the axes with reference to the work piece zero point.....	160
3.3.51	Function 51: Requesting for the desired positions of the axes with reference to the reference point	161
3.3.52	Function 52: Requesting for the running time of the driver	162
3.3.53	Function 53: Reading of the monitoring input ports	163
3.3.54	Function 54: Output at the monitoring output ports	164
3.3.55	Function 55: Reading of the monitoring output ports.....	166
3.3.56	Function 56: Initialization of the monitoring output ports	166
3.3.57	Function 57: Switching of the axes	167
3.3.58	Function 58: Setting of the radius for the working on a cylinder surface	169
3.3.59	Function 59: Use last axis in Spindle mode.....	171
3.3.60	Function 60: Define the location of use of the spindle axis	173
3.3.61	Function 61: Set the spindle speed change factor	173
3.3.62	Function 62: Set a new spindle speed.....	174
3.3.63	Function 63: Position the spindle axis.....	176
3.3.64	Function 64: Enable/disable Manual mode of the spindle axis	177
3.3.65	Function 65: Poll the status of the spindle axis.....	178
3.3.66	Function 66: Poll the movement parameters of the spindle axis.....	179
3.3.67	Function 67: Enable or disable the Handwheel mode.....	180
3.3.68	Function 68: Stop a Handwheel movement.....	182
3.3.69	Function 69: Poll the parameters for the Handwheel mode	182

Appendix A:	Encoder allocation of the	
	isel servo motor control card UPMV 4/12	183

Appendix B:	Overview of the isel intermediate format	
	for controlling the isel machines	184

PARKON 198

1	Introduction	198
2	The <i>FILE</i> main menu.....	198
3	The <i>Hardware</i> main menu	200
4	The <i>Software</i> main menu	209
5	The <i>Info</i> main menu.....	212
6	Possible Errors during the Configuration of the Parameters	212

PAREIN	214
1 Introduction PAREIN	214
2 The File main menu	215
2.1 The <i>Open</i> submenu	215
2.2 The <i>Save</i> submenu	215
2.3 The <i>Save As ...</i> submenu	215
2.4 The <i>Print</i> submenu	215
2.5 The Terminate submenu	216
3 The Equipment main menu	216
3.1 The <i>Card</i> submenu	216
3.2 The <i>Monitoring</i> submenu	216
3.3 The <i>Ref. _Key</i> submenu	218
3.4 The <i>Input/Output Port</i> submenu	218
4 The Axis main menu	219
4.1 The <i>Selection</i> submenu	220
4.2 The <i>Sequence</i> submenu	220
4.3 The <i>Axis fixing</i> submenu	221
4.4 The <i>V_Control</i> submenu	221
4.5 The <i>Offset</i> submenu	223
4.6 The <i>Encoder</i> submenu	224
4.7 The <i>Position Control</i> submenu	225
4.7.1 General Remarks	225
4.7.2 The work menu for the dimensioning of the PID control	226
4.7.3 The dimensioning of the PID-Filter	228
4.8 The <i>Conversion</i> submenu	234
4.9 The <i>Ramp</i> submenu	236
4.9.1 The experimental plotting of the maximum ramp	236
4.9.2 Determination of the maximum speed	239
4.10 The <i>Switch</i> submenu	241
4.11 The <i>Bridging</i> submenu	243
4.12 The <i>Enable/Disable</i> submenu	244
4.13 The <i>Dead Time</i> submenu	244
5 The INFO main menu	245
6 Possible errors when setting the parameters	245