

SERVICE MANUAL

E

SIGMA CONTROL

Index: BUB 07

GL-No.: 7_7000_0-00 06

Publisher:

KAESER KOMPRESSOREN GmbH

96410 Coburg • PO Box 2143 • GERMANY • Tel. + 49-(0)9561-6400 • Fax + 49-(0)9561-640130

<http://www.kaeser.com>

1	Technical specification	1 – 1
1.1	Power Supply	1 – 1
1.2	Sensors	1 – 1
1.3	Hardware	1 – 1
1.3.1	Interface pin connections	1 – 2
1.3.1.1	RS 232	1 – 2
1.3.1.2	RS 485	1 – 2
1.3.1.3	Profibus	1 – 2
1.4	Software	1 – 3
2	Safety Regulations	2 – 5
2.1	Explanation of Symbols and Instructions	2 – 5
2.2	General Instructions	2 – 5
2.3	Safety Regulations for the Controller	2 – 6
3	General	3 – 7
3.1	Short Description	3 – 7
3.2	Finding the best Type of Pressure Regulation	3 – 7
3.3	DUAL Control	3 – 8
3.4	QUADRO Control	3 – 9
3.5	VARIO Control Mode	3 – 10
4	Operation	4 – 11
4.1	Control Panel	4 – 11
4.2	The SIGMA CONTROL System	4 – 11
4.3	EMERGENCY STOP Pushbutton	4 – 11
4.3.1	Function keys	4 – 12
4.3.2	Key functions	4 – 13
4.3.3	Light emitting diodes and plain text display	4 – 14
4.3.4	LED functions	4 – 15
4.3.4.1	Display	4 – 16
4.4	Switching the Compressor Package On and Off	4 – 18
4.4.1	Switching on locally	4 – 18
4.4.2	Switching off locally	4 – 18
4.4.3	Switching on and off in remote	4 – 18
4.4.4	Switching on and off with the clock	4 – 18
4.5	Resetting Alarm Messages	4 – 19
4.6	Acknowledgement of Warning Messages	4 – 19
4.7	Alarm and Warning Messages	4 – 20
4.8	Frequently Programmed Functions	4 – 30
4.8.1	Procedure for initial startup (Standard Mode)	4 – 30
4.8.2	Procedure for initial startup (Expert Mode)	4 – 33
4.8.3	Correcting the package pressure	4 – 41
4.8.4	Carrying out maintenance	4 – 44
4.8.5	The compressor package is to be operated with a base load sequencer ...	4 – 47
4.8.5.1	MAC 41 as an example	4 – 47

	Chapter – Page
4.8.5.2 MVS 8000 as an example	4 – 52
4.8.5.3 VESIS/SAM as an example	4 – 58
4.8.6 Two rotary screw compressors in sequence	4 – 68
4.8.6.1 Base load sequencing of two compressor packages with Sigma Control via the RS 485 interface	4 – 68
4.8.6.1.1 Settings on both SIGMA CONTROLS	4 – 71
4.8.6.1.2 Settings on the master SIGMA CONTROL	4 – 73
4.8.6.1.3 Settings on the slave Sigma Control	4 – 75
4.8.6.1.4 Settings on both SIGMA CONTROLS	4 – 77
4.8.6.2 Sequencing SIGMA and pressure switch controlled compressors	4 – 78
5 Sigma Control Menus	5 – 83
5.1 Main Menu	5 – 83
5.2 Password Protection	5 – 86
5.3 Display and Setup Level	5 – 86
5.4 Display Level	5 – 86
6 Display Level in SIGMA Control	6 – 90
6.1 Status Data	6 – 90
6.1.1 Messages	6 – 91
6.1.2 Statistics	6 – 93
6.1.3 Print	6 – 94
6.1.3.1 Printer clock	6 – 95
6.2 Analog data	6 – 96
6.3 Operating data	6 – 98
6.4 Maintenance	6 – 100
6.4.1 Setting/resetting the maintenance interval counter	6 – 103
7 Display and Setup Level	7 – 104
7.1 Password	7 – 104
7.1.1 Enter password	7 – 104
7.2 Clock	7 – 106
7.2.1 General description of the clock	7 – 108
7.2.1.1 The daily schedule	7 – 108
7.2.1.2 The weekly schedule	7 – 109
7.2.1.3 The yearly schedule	7 – 109
7.2.1.4 Clock key:	7 – 111
7.3 Configuration	7 – 112
7.3.1 General	7 – 113
7.3.2 Pressure settings	7 – 116
7.3.2.1 Compressor configuration	7 – 116
7.3.2.1.1 System pressure	7 – 117
7.3.2.2 Vacuum package	7 – 118
7.3.2.2.1 System pressure of the vacuum package	7 – 118
7.3.2.3 Load control	7 – 120
7.3.3 Control mode	7 – 123
7.3.3.1 DUAL Control settings (normal control)	7 – 123

	Chapter – Page
7.3.3.2 QUADRO control settings	7 – 123
7.3.3.3 Modulating control	7 – 124
7.3.4 Acknowledgement (reset)	7 – 124
7.3.5 Compressor start	7 – 125
7.3.6 I/O periphery	7 – 127
7.3.6.1 timer	7 – 129
7.4 Components	7 – 130
7.4.1 Motor	7 – 131
7.4.1.1 Power switching	7 – 131
7.4.2 Oil circulation	7 – 131
7.4.2.1 Oil separator	7 – 132
7.4.3 Booster	7 – 132
7.4.4 Air main charging	7 – 133
7.4.5 Package discharge temperature	7 – 133
7.5 Package Test	7 – 134
7.5.1 Compressor test	7 – 135
7.5.2 TÜV check	7 – 135
7.5.2.1 Pressure relief valve	7 – 135
7.5.2.2 Temperature sensor / shutdown temperature	7 – 136
7.5.3 Binary input/output check	7 – 136
7.5.4 Lamps test	7 – 137
7.6 Communication	7 – 138
7.6.1 RS 232 interface	7 – 139
7.6.2 RS 485 interface	7 – 140
7.6.3 L2DP bus (Profibus)	7 – 141
7.6.4 SMS	7 – 142
7.6.5 Saving settings	7 – 142
7.7 Languages	7 – 143
7.7.1 Setting the language	7 – 143