



HARTROL plus 3 OPERATION MANUAL MODEL : LG-1000



Chapter Contents

I. SYSTEM BASIC CONFIGURATION DRAWING.....	6
II. OPERATION DEVICES.....	7
2.1. OPERATION DEVICES INCLUDE	7
2.1.1 Touch Screen.....	7
2.1.2 Keyboard	7
2.2 MACHINE OPERATOR'S PANEL.....	8
2.2.1 NC Power ON/OFF push button	8
2.2.2 Mode Select Function	9
2.2.3 Spindle Function	10
2.2.4 Jog Function (AXIS DIRECTION SELECTOR), (JOG OVERRIDE).....	12
2.2.5 Rapid Override.....	14
2.2.6 Cycle Control Panel	14
2.2.7 Machine Control Panel.....	17
2.2.8 Status Indication	19
2.2.9 Edit Protect – Key Switch.....	19
2.2.10 Emergency Stop and Release - Push Button.....	20
2.2.11 Cycle Start – Push Button with Indicator	21
2.2.12 Feed Hold – Push Button with Indicator.....	21
2.3 OTHERS	22
2.3.1 TOOL UNCLAMP –Foot switch.....	22
2.3.2 CYCLE'S CONDITION.....	22
2.4 PLC-SWITCH KEYBOARD	23
2.4.1 PLC SWITCH NAME	24
2.4.2 PLC Switch Function.....	25
III. HARTROL PLUS INSTRUCTION.....	33
3.1 PROGRAM MANAGEMENT	33
3.1.1 NC Code Analyze Viewer.....	33
3.1.2 File Transfer.....	42
3.1.3 HartCAM.....	76
3.1.4 MES.....	77
3.1.5 NC Editor	88
3.1.6 Canned Cycle	101
3.1.7 eNC User Manual	107

Hartrol

Page:4

3.2	OPERATION ASSISTANT	116
3.2.1	M code List	116
3.2.2	Machining Calculator	117
3.2.3	Calculator.....	124
3.2.4	Workpiece Calibration.....	125
3.2.5	Message Board.....	136
3.2.6	Remote	143
3.2.7	M216.....	148
3.2.8	Set and inspect.....	156
3.2.9	Tool Offset.....	172
3.2.10	Smart Tool Sort.....	181
3.2.11	Calendar	184
3.2.12	Tool Cutting Condition Database	187
3.3	MACHINING MONITORING	191
3.3.1	CCD Monitor.....	191
3.3.2	Spindle Log.....	198
3.3.3	Automatic Feed Control	200
3.3.4	Tool Magazine.....	207
3.3.5	Dashboard	211
3.3.6	Alarm Video	214
3.3.7	Alarm Report.....	218
3.3.8	Oil Level Detector	222
3.4	UTILIZATION RATE.....	228
3.4.1	Daily Status Display.....	228
3.4.2	Utilization (Daily & Monthly rate).....	234
3.4.3	Shift Setup	237
3.4.4	Rest Setup.....	240
3.4.5	Countdown.....	244
3.4.6	Counter	248
3.5	MAINTENANCE SUPPORT	250
3.5.1	Account Management.....	250
3.5.2	Tool Table.....	253
3.5.3	PDF Reader.....	255
3.5.4	PLC Bit Set	256
3.5.5	Change Password	258
3.5.6	Set Time	261
3.5.7	Set IP.....	262
3.5.8	Console.....	264
	Search for CCD IP address	268

Hartrol

Page:5

3.5.9	ZDT (Zero downtime).....	269
3.5.10	Software version information	272
3.5.11	User connect.....	273
3.5.12	Unified Write Filter	279
3.6	STATUS AND ALARM INDICATOR LED	281
IV.	NC HMI INSTRUCTION	283
V.	REVISION HISTORY	284
1	OPERATION MANUAL REVISION HISTORY	284
2	SOFTWARE REVISION HISTORY	285