


E33/E56 MACHINE

OPERATION MANUAL

(V1031I-O4E-XB)

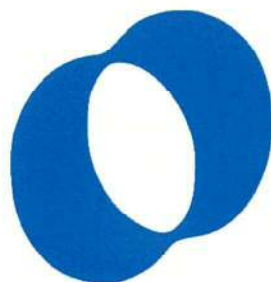

MAKINO

This machine, including technical data and software, may be subject to the Japanese Foreign Exchange and Foreign Trade Law. Prior to any re-sell, re-transfer or re-export of controlled items, please contact Makino to obtain any required authorization or approval.

Contents

Chapter 1	Unit Identification	1-1
1.1	Machine Tool Control (MTC) Cabinet.....	1-1
1.1.1	Main Power Switch	1-1
1.2	Operator Station.....	1-2
1.2.1	RS-232 / Ethernet Port	1-3
1.3	Manual Pulse Generator (MPG).....	1-3
1.4	LCD Display unit	1-4
1.5	MDI Unit.....	1-5
Chapter 2	Operation of Operator Station	2-1
2.1	Introduction	2-1
2.2	Power On & Emergency Stop.....	2-1
2.2.2	Emergency Stop Push Button	2-1
2.3	Automatic Operation Control Elements	2-2
2.3.1	Cycle Start Push Button/Automatic Operation Indication Lamp.....	2-2
2.3.2	Feed Hold Button/Stop Indication Lamp.....	2-2
2.3.3	Feedrate Override Rotary Switch.....	2-3
2.4	Spindle Operation Control.....	2-3
2.4.1	Spindle Start Button & Indicator	2-3
2.4.2	Spindle Stop Button & Indicator	2-3
2.4.3	Spindle Speed Override Rotary Switch.....	2-4
2.5	NC Modes.....	2-4
2.5.1	Editor (Memory Editing Mode)	2-4
2.5.2	Memory (Memory Command Mode)	2-4
2.5.3	MDI (Manual Data Input Mode).....	2-5
2.5.4	DNC/TAPE – External Input mode.....	2-5
2.5.5	Handle Mode	2-5
2.5.6	Jog Feed (Manual Cutting Feed) Mode.....	2-5
2.5.7	Manual Rapid Traverse Mode.....	2-5
2.5.8	Zero Reference Point Return Mode	2-5

2.6	NC Functions	2-6
2.6.1	Single Block (Single Block ON/OFF) Button & Indicator.....	2-6
2.6.2	Block Skip (Block Skip ON/OFF) Button & Indicator.....	2-6
2.6.3	Dry Run (Dry Run ON/OFF) Button & Indicator.....	2-6
2.6.4	Optional Stop (Optional Stop ON/OFF) Button & Indicator.....	2-7
2.6.5	Program Restart Button & Indicator (Option).....	2-7
2.6.6	Handle Interrupt (Handle Interrupt) Button & Indicator (Option).....	2-7
2.7	Auxiliary Functions	2-7
2.7.1	Machine Light Button	2-7
2.7.2	Power Out (Automatic Power OFF) Button (Optional).....	2-8
2.7.3	Coolant ON/OFF	2-8
2.7.4	Coolant Nozzle	2-8
2.7.5	Air Blow (Optional).....	2-8
2.8	Other Miscellaneous Function Push Buttons	2-9
2.8.1	Overtravel Release Button	2-9
2.8.2	Alarm Release Button	2-9
2.8.3	Rapid Traverse Override Rotary Switch	2-9
2.9	Axis Control.....	2-9
2.9.1	Manual Axis Selector Switch.....	2-9
2.9.2	Axis Direction Selection Pushbutton	2-10
2.9.3	Jog Feedrate Rotary Switch.....	2-10
2.10	Indicators	2-10
2.10.1	Warning Lamp	2-11
2.10.2	Alarm Lamp	2-11
2.10.3	Mirror Image Indication Lamps.....	2-11
2.10.4	Zero Reference Point Return Completion Lamps.....	2-11
2.11	Manual Pulse Generator (MPG).....	2-11
2.11.1	Axis Selection Switch.....	2-11
2.11.2	Feed Amount Setting Switch.....	2-12
2.11.3	Manual Pulse Generator	2-12
2.12	S/G Door Interlock (Optional)	2-12
2.12.1	Door Interlock Release Key	2-12

2.12.2	Door Interlock Operation.....	2-12
Chapter 3 Emergency Stop and Alarm 3-1		
3.1	Emergency Stop Operation.....	3-1
3.2	Alarm Operation.....	3-2
Chapter 4 Procedure for Start-Up and Power Off 4-1		
4.1	Turning ON the Power.....	4-1
4.2	Turning ON Air Supply.....	4-1
4.3	Turning OFF the Power.....	4-1
Chapter 5 Manual Mode Operation 5-1		
5.1	Introduction.....	5-1
5.2	Manual Axis Feed.....	5-1
5.2.1	Jog Feed.....	5-1
5.2.2	Rapid Feed.....	5-2
5.2.3	Handle Feed.....	5-2
5.3	Manual Reference Point (Zero Point) Return.....	5-2
5.4	Axis Overtravel.....	5-3
5.5	Starting and Stopping Spindle.....	5-4
5.6	Spindle Fixed Angle Positioning (Orientation).....	5-4
5.7	Spindle Tool Loading/Unloading.....	5-4
5.8	Automatic Tool Changer (ATC).....	5-5
Chapter 6 ATC Operation 6-1		
6.1	ATC Control Panel.....	6-1
6.2	Tool Loading and Unloading.....	6-3
6.2.1	Direct Loading and Unloading of Tool.....	6-3
6.2.2	Indirect Loading of the Tool to the Magazine.....	6-3
6.2.3	Registering the Tool Number.....	6-4
6.3	Standby of ATC Unit.....	6-5

6.4	Zero Return of Tool Magazine.....	6-5
6.4.1	Manual Zero Return of Tool Magazine.....	6-6
6.4.2	Automatic Zero Return of Tool Magazine.....	6-6
6.5	ATC Operation.....	6-6
6.5.1	ATC Auto Operation in MDI Mode.....	6-6
6.5.2	ATC Auto Operation in Memory Mode.....	6-7
6.5.3	ATC Operation in Manual Inching for ATC Arm Recovery.....	6-7
6.5.4	ATC Operation in PC Screen Maintenance.....	6-8
6.5.5	ATC Manual Operation.....	6-9
6.6	Restoration of ATC from Hang Up.....	6-10
6.6.1	Restoration of ATC Arm Using ATC Sub Panel.....	6-10
6.6.2	Restoration of ATC Arm Using Maintenance Screen.....	6-11

Chapter 7 Operation of Suction Equipment 7-1

7.1	Operation of Suction Equipment.....	7-1
7.1.1	SUCTION MODE OPERATION.....	7-1
7.1.2	METAL PROCESSING MODE.....	7-1
7.2	Interlock and Alarms – Suction Mode.....	7-2
7.2.1	INTERLOCK SYSTEMS.....	7-2
7.2.2	ALARM SYSTEMS.....	7-2
7.3	Mechanical Cleaning Device.....	7-3
7.4	Manual Suction.....	7-4

Chapter 8 Professional 5 Screens 8-1

8.1	Introduction.....	8-1
8.1.1	Screen Display Area.....	8-1
8.1.2	Common Information Display Area.....	8-2
8.1.3	Button Area.....	8-3
8.2	Outline of Operation Screens.....	8-3
8.3	Basic Screen Operations.....	8-5
8.3.1	Viewing Info Header.....	8-5
8.3.2	Viewing NC Status Bar.....	8-9
8.3.3	Changing Operation Screens.....	8-11

8.3.4	Screen Operation Buttons.....	8-13
8.3.5	Floating Function Buttons.....	8-14
8.4	References.....	8-15
Chapter 9	M-code List and Specifications	9-1
9.1	M-code List.....	9-1
9.2	M-code Specifications.....	9-8
Chapter 10	G-code List	10-1
10.1	G-code List.....	10-1