

ROBOFORM 810•1010

CE



NC Manual

CHARMILLES TECHNOLOGIES
FAR IN FRONT, BUT CLOSE TO YOU



NC Manual

ROBOFORM 810•1010

IMPRESSUM

This document was conceived and written by F. Pellarin, CTSA-Geneva.

Typesetting and production by M. Vercasson and O. Vazquez, CTSA-Geneva.

Technical data originate from our HEDS product line, managed by F. Burgy, CTSA-Geneva.

Our thanks for their collaboration go to Messrs. F. Vincensini, A. Pereira, J. Lavazois, P. Germond and M. Dubuisson, CTSA-Geneva.

Printed by the Publishing Department, CTSA-Geneva.

1. General

2. PREP Mode

3. EXE Mode

4. INFO Mode

5. GRAPH Mode

6. Command language programming

7. Programming with PROFORM

8. ISO Programming

General table of contents

General	1.1
Introduction	1.3
Structure of the NC	1.7
Screen organization	1.12
PREP Mode	2.1
Editor	2.3
Files	2.9
Editing tables	2.13
EXE Mode	3.1
Introduction	3.3
Executing a program	3.5
User parameters	3.7
PILOT EXPERT II	3.13
Drawing parameters	3.17
Activate tables	3.19
Measurements	3.21
Manual	3.33
Reference	3.37
Dielectric	3.41
Service	3.45

**Table of
contents**

INFO Mode	4.1
GRAPH Mode	5.1
Command language programming	6.1
Introduction	6.5
List of commands words	6.7
Program execution commands	6.9
Movement commands and auxiliary functions	6.15
File and table commands	6.27
Part program parameter commands	6.35
Measurement commands	6.39
Miscellaneous commands	6.47
Programming with PROFORM	7.1
Introduction	7.3
PROFORM syntax	7.4
Programming	7.7
Basic instructions	7.13
Cycles	7.21
Machining modes	7.35
Auxiliary functions	7.39
Contouring	7.47

ISO Programming

8.1

Introduction

8.3

ISO codes and format

8.5

Rules

8.7

Preparatory G functions

8.13

Words other than G and M

8.53

Auxiliary M functions

8.55

Definition of M functions

8.57

Optional M functions

8.69

**Table of
contents**