

INSTRUCTION MANUAL

MACHINING CENTER

HNC SERIES

FANUC SYSTEM 6MB

FANUC SYSTEM 9



MAKINO MILLING MACHINE CO., LTD.

SPECIFICATIONS

CONTENTS

1. INTRODUCTION	A - 1
1.1 General View of the Machine	A - 1
1.2 Features of the Machine	A - 1
2. NAME AND OUTLINE OF EACH PART	A - 5
2.1 Name of Each Part	A - 5
2.2 Description of Each Part	A - 6
2.3 Spindle N-T, N-P Characteristics	A - 9
3. SPECIFICATIONS	A -10
3.1 Machine Proper	A -11
3.2 Standard Accessories	A -15
3.3 Optional Accessories	A -16
3.4 Numerical Control Unit	A -18
4. MAIN DIMENSIONS	A -28
4.1 Main Dimensions	A -28
4.2 Arrangement diagram	A -29
4.3 Table Top View	A -30
4.4 Angle Block	A -31

INSTALLATION

CONTENTS

1. LOCATION	B - 1
2. OUTER DIMENSION DIAGRAM AND ARRANGEMENT DIAGRAM	B - 1
3. POWER SUPPLY AND PNEUMATIC SOURCE	B - 2
4. FOUNDATION	B - 2
5. HOISTING	B - 4
5.1 Hoisting the Front Bed and Table	B - 4
5.2 Hoisting the Rear Bed and Column	B - 4
5.3 Hoisting the ATC Unit	B - 4
5.4 Hoisting the Lift Up conveyor	B - 4
5.5 Hoisting the Coolant Tank	B - 4
5.6 Hoisting the Control Unit	B - 5
5.7 Hoisting the Angle Block	B - 5
6. INSTALLATION	B -10
7. PIPING AND WIRING	B -12
7.1 Hydraulic Piping	B -12
7.2 Piping for Lubricant	B -13
7.3 Piping for Pneumatic System	B -13
7.4 Connection of Pneumatic Source	B -14
7.5 Piping of Coolant Tank	B -14
7.6 Wiring	B -15
7.7 Connection of Power Supply	B -20
8. SUPPLY THE LUBRICANT	B -22
8.1 Lubricant	B -22
8.2 Hydraulic Oil	B -32
8.3 Coolant	B -33
9. PREPARATION FOR OPERATION	B -34
9.1 Removing the Rust Preventive	B -34
9.2 Removing the Clamps	B -34
10. TURNING THE POWER ON	B -37
11. AIR VENTING	B -38
11.1 Spindle Head Balancing Cylinder	B -38
11.2 ATC Unit	B -39
12. LEVELLING	B -40

OPERATIONS & MACHINE PROPER

CONTENTS

1. NAME OF EACH PART OF MACHINE	C - 1
2. PRECAUTIONS	C - 2
3. HANDLING OF MAIN PARTS	C - 4
3.1 Power Switches (No-fuse breaker)	C - 4
3.1.1 Main power switch (no-fuse breaker)	C - 4
3.2 Operation Panels.....	C - 5
3.2.1 NC operation panel	C - 6
3.2.2 Manual pulse generator	C - 58
4. EMERGENCY STOP AND POWER-OFF	C - 60
4.1 Emergency Stop	C - 60
4.1.1 Return from emergency stop	C - 61
4.2 Power Cut-off	C - 62
5. START OF DAILY WORK	C - 63
6. OPERATIONS	C - 67
6.1 Operations of Feed Axes	C - 68
6.1.1 TC mode	C - 68
6.1.2 NC mode	C - 69
6.1.3 Handle feed	C - 70
6.2 Reference Point Return	C - 71
6.2.1 Reference point of each axis	C - 71
6.2.2 Principle of reference point return	C - 71
6.2.3 Operation for reference point return	C - 74
6.2.4 Cautions on reference point return	C - 75
6.3 Z-axis Handle Intervention Function	C - 75
6.3.1 Z-axis handle intervention conditions	C - 75
6.3.2 Z-axis handle intervention operation	C - 77
6.3.3 Operations in MEMORY mode	C - 78

7. OPERATION STOP AND RESTART	C - 80
7.1 Stop and Restart of Tracing in TC Mode	C - 80
7.1.1 Stopping of operations	C - 80
7.1.2 Temporary stop and restart of feed	C - 82
7.1.3 Other Stopping Methods	C - 83
8. LUBRICANT AND HYDRAULIC UNITS	C - 86
8.1 Lubricant Units	C - 86
8.2 Hydraulic Unit	C - 87
9. STOPPING OF DAILY WORK	C - 88
9.1 Turning the Power Off	C - 88
9.2 Cleaning	C - 88
9.3 Turning the Air Source Off	C - 88

OPERATIONS · SPINDLE HEAD

CONTENTS

1. NAME OF EACH PART	D - 1
2. HANDLING OF MAIN PART	D - 2
2.1 Operation Panel	D - 2
2.2 Manual Spindle Rotation	D - 7
3. SPINDLE SPEED CHANGE	D - 8
3.1 Spindle Speed	D - 8
3.2 Speed Change Operation	D - 9
3.3 Spindle Speed Override Function (option)	D -10
4. SPINDLE LOAD DISPLAY	D -11
5. LUBRICATION	D -12

OPERATIONS · 30-TOOL ATC

CONTENTS

1. NAME OF EACH PART	E - 1
2. HANDLING OF MAIN PART	E - 2
2.1 ATC Display	E - 2
2.2 ATC Operation Panel	E - 4
3. OPERATIONS	E - 6
3.1 Index of Tool Magazine	E - 6
3.2 Storing the Tools into Magazine	E - 9
3.3 Registering the Tool Numbers	E - 9
4. PORTABLE MANUAL OPERATION SWITCHES	E -15

OPERATIONS · 32-TOOL ATC

CONTENTS

1. NAME OF EACH PART	E1 - 1
2. HANDLING OF MAIN PART	E1 - 2
2.1 ATC Display	E1 - 2
2.2 ATC Operation Panel	E1 - 4
3. OPERATIONS	E1 - 6
3.1 Index of Tool Magazine	E1 - 6
3.2 Storing the Tools into Magazine	E1 - 8
3.3 Registering the Tool Numbers	E1 - 9
4. LUBRICATION	E1 -14
4.1 Chain	E1 -14
4.2 Motor Bracket	E1 -15
4.3 Cylinder	E1 -17