

Advance Series

WIRE-CUT EDM SYSTEMS

2D CAM INSTRUCTION MANUAL

BRN-66670-A



2DCAM SUPPLEMENT

In this chapter, we will explain about the differences between 2DCAM and CamMagicW.

MITSUBISHI

Content

DIFFERENCES BETWEEN 2DCAM AND CAMMAGICW	1
Features not available	1
Features that work differently.....	4
Features only for 2DCAM	4
FEATURES ONLY FOR 2DCAM.....	5
1 Open and Save an External Drawing.....	5
1.1 Open an External Drawing	5
1.2 Save an External Drawing.....	6
1.3 NC CAD Conversion	7
2 Processing Condition search.....	8
2.1 Specify portion	11
2.2 Specify all	13
2.3 Condition setting.....	15
3 Open and Save an External NC Program	24
3.1 Open an External NC Program	24
3.2 Save an External NC Program.....	25
4 Wire EDM Information	26
5 Data Transfer (Check).....	28
6 Data Transfer (Monitor)	29



Chapter2 Basic operations

In this chapter, we explain CAD functions and basic operations of CamMagic.

mitsubishi

Contents

2.1 CamMagic Window Configuration	1
2.1.1 Configuration	1
2.1.2 X, Y Coordinates	2
2.1.3 Angle Directions +, -	2
2.2 Mouse/Keyboard Operations	3
2.2.1 Mouse Operations	3
2.2.2 Use Mouse Button	3
2.2.3 Usage of Mouse/Keyboard	4
2.2.4 Pan Zoom In/Out with Mouse	6
2.3 Tool Bar Pan Zoom In/Out	8
2.3.1 Zoom Auto. F2	8
2.3.2 Zoom Out. F3	8
2.3.3 Zoom Previous F4	9
2.3.4 Zoom Window F1	9
2.3.5 Pan F6	11
2.3.6 Zoom	11
2.3.7 Zoo In	12
2.3.8 Refresh F5	12
2.4 Tool Bar Area Add/Exclude	13
2.4.1 Inside	13
2.4.2 Cross (Standard Mode)	14
2.4.3 Outside	14
2.4.4 Showing	15
2.4.5 Add	16
2.4.6 Except	16
2.5 Toolbar Feature Point	17
2.5.1 Nearest Point (projection point)	18
2.5.2 Relative Point	18
2.5.3 Center Point	19
2.5.4 Extended Intersection	19
2.5.5 Midpoint	20

2.5.6 Intersection.....	20
2.5.7 Endpoint.....	21
2.5.8 Modal.....	21
2.5.9 Select by Line type.....	22
2.5.10 Measure Mode.....	23
2.6 Toolbar Linetype, Line Color, Arrow Type	23
2.6.1 Linetype, Line Color.....	23
2.6.2 Change Linetype, Line Color	24
2.7 Toolbar Layer	25
2.7.1 Work Layer.....	25
2.7.2 Set Layer.....	25
2.7.3 Layer Dialog	26
2.7.4 Layer Catalog.....	28
2.7.5 Move (Copy) Layer Element	28
2.7.6 Layer List.....	28
2.8 Fixed Menu	29
2.9 Check.....	34
2.9.1 Check.....	34
2.9.2 Relative	36
2.9.3 Check Same Figure	37
2.9.4 Endpoints	38
2.9.5 Area Balance.....	38
2.10 Message.....	39
2.10.1 Meaning.....	39
2.10.2 All guides.....	40



Chapter3 CAD operations

In this chapter, we explain CAD operations of CamMagic.

MITSUBISHI

Contents

Chapter3 CAD Operations.....	1
3.1 Define Basic Figures	1
3.1.1 Beginning.....	1
3.1.1.1 Enter Coordinates (X, Y)	1
3.1.1.2 Enter Angle	2
3.1.1.3 Meaning At To Select Element.....	3
3.1.1.4 Calculating Machine Function	4
3.1.2 Define Point	5
3.1.2.1 Optional Point	5
3.1.2.2 Relative Point.....	6
3.1.2.3 Midpoint	7
3.1.2.4 Point On Element	7
3.1.2.5 Right-angle Projection Method.....	8
3.1.2.6 Point Of Intersection	9
3.1.2.7 Endpoint Of Element	9
3.1.2.8 Center Point Of Circle · Arc.....	10
3.1.2.9 Points On The Same Element	10
3.1.2.10 Dividing Point.....	11
3.1.3 Line	12
3.1.3.1 Horizontal Line.....	12
3.1.3.2 Vertical Line	13
3.1.3.3 Angular Line.....	14
3.1.3.4 Parallel Line	17
3.1.3.5 Normal Line	19
3.1.3.6 Two Points Line	20
3.1.3.7 Two Points Line Segment	21
3.1.4 Center Line	22
3.1.4.1 Center Line Of Line	22
3.1.4.2 Center Line Of Arc.....	23
3.1.4.3 Center Line Of Circle.....	24
3.1.4.4 Center Line For Round Arrangement	25
3.1.4.5 Center Line At Optional Position.....	26
3.1.4.6 Center Line Mode	26

3.1.5	Rectangle	27
3.1.6	Polyline	29
3.1.6.1	Polyline Drawing [Point].....	30
3.1.6.2	Polyline Drawing [Circle]	31
3.1.6.3	Polyline Drawing [Start-End Arc].....	32
3.1.6.4	Polyline Drawing [Semicircle].....	33
3.1.6.5	Polyline Drawing [Corner].....	34
3.1.6.6	Polyline Drawing [Chamfer].....	34
3.1.7	Polygon.....	35
3.1.8	Circle.....	36
3.1.8.1	Circle	36
3.1.8.2	Semicircle.....	42
3.1.8.3	Start-End Arc	43
3.1.8.4	Center Point Arc [>OmitRad].....	46
3.1.8.5	Center Point Arc [>SetRad].....	48
3.2	Edit Figures	51
3.2.1	Offset.....	51
3.2.1.1	Relative Offset	51
3.2.1.2	Absolute Offset	53
3.2.1.3	Both Sides Offset.....	54
3.2.1.4	Designate Corner Figure	55
3.2.1.5	Designate Offset Figure Mode	56
3.2.2	Modify Element.....	57
3.2.2.1	Modify Line Length	57
3.2.2.2	Erase Partly	58
3.2.2.3	Split	59
3.2.2.4	Split At Intersection.....	59
3.2.2.5	Connect.....	60
3.2.2.6	Restore.....	60
3.2.2.7	Stretch.....	61
3.2.3	Corner Cutting	62
3.2.3.1	Corner R.....	62
3.2.3.2	Corner Trim.....	63
3.2.3.3	Chamfer	64
3.2.3.4	Angular Chamfer.....	65
3.2.3.5	Corner Cutting Mode	66

3.2.3.6	Line type Mode	67
3.2.3.7	Corner Arc.....	68
3.2.3.8	Make Loop	69
3.2.3.9	Automatic Corner Edit	70
3.2.3.10	Offset With Tool's Overflowing.....	72
3.3	Extract Outline	73
3.3.1	Extract Group.....	75
3.4	Move and Copy	76
3.4.1	Move and Copy	76
3.4.1.1	Parallel	77
3.4.1.2	Rotate.....	78
3.4.1.3	Symmetry.....	79
3.4.1.4	Scale(Unlink Note).....	80
3.4.1.5	Scale(Link Note)	81
3.4.1.6	Drug (ON/OFF).....	82
3.4.1.7	Interrupt Command [Change Base Point].....	83
3.4.1.8	Interrupt Command [Select Elements].....	84
3.4.1.9	Interrupt Command [Number Of Copy].....	85
3.4.1.10	Interrupt Command [Repeat].....	86
3.4.1.11	Interrupt Command [Measure]	87
3.4.3	Array.....	88
3.4.3.1	Arc.....	89
3.4.3.2	Radial	90
3.4.3.3	Grid	91
3.4.3.4	Random.....	92
3.4.3.5	Erase.....	93
3.4.4	Copy Between Drawings.....	94
3.4.4.1	Copy Element	94
3.4.4.2	Copy Layer.....	95
3.4.4.3	Paste Element	96
3.4.4.4	Check Pasted Data.....	97
3.5	Special Figure.....	98
3.5.1	Gear	98
3.5.2	Rack.....	108
3.5.3	Simulate	114
3.5.4	Calculate	116

3.5.5	Ellipse	117
3.5.6	CFIT curve	119
3.5.6.1	Draw CFIT Curve.....	121
3.5.6.2	Edit CFIT Curve	122
3.5.7	Import External Points	125
3.5.8	Spline Curve	127
3.5.8.1	Open Spline Curve	127
3.5.8.2	Close Spline Curve.....	128
3.5.8.3	Edit Passing Through Points.....	129
3.5.8.4	Into Minute Lines	132
3.5.8.5	Set Tolerance.....	133
3.5.8.6	Change Tolerance	134
3.5.9	Hatch.....	135
3.5.10	Cam curve	136
3.5.11	Complex Cam.....	146
3.5.11.1	Initial	146
3.5.11.2	Order.....	148
3.5.11.3	Cam Line Chart.....	151
3.5.11.4	Draw Cam	152
3.5.12	Involute	153
3.5.13	Cycloid	157
3.5.14	Spiral.....	165
3.5.15	Drawing Pattern.....	171
3.5.16	XY-UV Pattern	173
3.6	Drawing Function	174
3.6.1	Dimension.....	174
3.6.1.1	Linear Dimension.....	174
3.6.1.2	Horizontal Dimension	175
3.6.1.3	Vertical Dimension.....	189
3.6.1.4	Parallel Dimension.....	195
3.6.1.5	Distance Dimension.....	196
3.6.1.6	Radius Dimension	197
3.6.1.7	Diameter Dimension	198
3.6.1.8	Angular Dimension	199
3.6.1.9	Chamfer Dimension.....	203
3.6.1.10	One Arrow Dimension	204

3.6.1.11	Arc Dimension	205
3.6.1.12	Edit Dimension.....	206
3.6.1.12.1	Edit Text.....	206
3.6.1.12.2	Text Height	207
3.6.1.12.3	Number Of Places After Decimal Point	208
3.6.1.12.4	Move Text	209
3.6.1.12.5	Move Arrow.....	210
3.6.1.12.6	Center Text	211
3.6.1.12.7	Interval Of Dimensions	212
3.6.1.12.8	Leader Dimension	213
3.6.1.12.9	Incline Leader Dimension.....	214
3.6.1.12.10	Auxiliary Line Of Dimension.....	214
3.6.1.12.11	Gap Between An Element And Auxiliary Line Of Dimension	215
3.6.1.12.12	Suppress 0 ON/OFF	216
3.6.1.12.13	Add ().....	217
3.6.1.12.14	Add Underline.....	217
3.6.1.13	Set Dimension	218
3.6.1.13.1	Text Height	218
3.6.1.13.2	Number Of Places After Decimal Point	218
3.6.1.13.3	Tolerance Size.....	219
3.6.1.13.4	Suppress 0 ON/OFF.....	220
3.6.1.14	Dimension Text Mode	221
3.6.1.14.1	Front · Middle · Back.....	221
3.6.1.14.2	Tolerance	222
3.6.1.14.3	Value.....	222
3.6.1.14.4	Add ϕ · R · ().....	223
3.6.2	Note.....	224
3.6.2.1	Insert / Edit Note	224
3.6.2.2	Operations Of Edit Screen	225
3.6.2.3	Overwrite.....	226
3.6.2.4	Move Note and Sign Parallel.....	227
3.6.2.5	Continuous.....	228
3.6.2.6	Change Note Size	229
3.6.2.7	Change Note Incline	230
3.6.2.8	Change Space	231
3.6.2.9	Change Datum Position	232

3.6.2.10	Display / Not Display Note Frame.....	233
3.6.2.11	Mirror Note	235
3.6.2.12	Align Note	236
3.6.2.13	Insert Leader With Note	237
3.6.2.14	Change Position Of Leader With Note	238
3.6.2.15	Insert Leader With Note By Coordinates	239
3.6.2.16	Setting To Insert Leader With Note By Coordinates	240
3.6.2.17	Into Line	241
3.6.2.18	Paste Table.....	242
3.6.2.18.1	Paste	242
3.6.2.18.2	Change Note Height.....	243
3.6.2.18.3	Line Space	244
3.6.2.18.4	Change the Ruled Line.....	245
3.6.2.18.5	Edit Note Before Pasting	246



Chapter4 WIRE CAM

In this chapter, we explain the procedure to create NC data in CamMagic.

MITSUBISHI

Contents

Chapter4 Wire CAM	1
4.1 Specify Machining	4
4.1.1 Specify Machining.....	8
4.1.2 Specify Machining Automatically	11
4.1.3 Erase	21
4.1.4 Erase All	21
4.2 Specify Taper	22
4.2.1 Partial	25
4.2.2 All Round	25
4.2.3 XY-UV R (XY-UV same R is included).....	26
4.2.4 XY-UV.....	27
4.2.5 XY-UV Corresponding	28
4.2.6 Erase	30
4.2.7 Set Z Parameter	31
4.3 Machining Process	33
4.3.1 Input.....	34
4.3.2 Array	69
4.3.2.1 Grid	70
4.3.2.2 Setting.....	71
4.3.2.3 Radial.....	72
4.3.2.4 Arc.....	73
4.3.2.5 Line	74
4.3.2.6 Random	75
4.3.3 Copy	76
4.3.4 Order	77
4.3.5 Main No.	80
4.3.6 Sub No.....	81
4.4 Condition for NC Data	82
4.4.1 Function Output	83
4.4.2 NC Output Form	92
4.4.3 Machining ON/OFF	97
4.5 Machine Post	98
4.5.1 Change	99
4.6 NC Data	101

4.6.1 Create	102
4.6.2 Step	102
4.6.3 Edit NC data	112
4.6.4 Check NC data	114
4.6.4.1 NC Check.....	115
4.6.4.2 Operations for NC Check Window	117
4.6.4.3 Menus for NC Check Window	121
4.6.4.4 Function Key (Check NC)	128
4.6.5 Input/Output.....	129
4.6.5.1 Save List.....	131
4.6.5.2 Load List.....	132
4.6.5.3 Save External File.....	133
4.6.5.4 Load External File.....	134
4.6.5.5 Edit NC data	135
4.6.5.6 Check Output Time.....	135
4.6.5.7 Add data	136
4.6.5.8 Tape Reader/Puncher	138
4.6.5.9 NC Device	139
4.6.5.10 FD3.5.....	140
4.7 Other Setting	145
4.7.1 Start Point.....	147
4.7.2 Approach Via Point.....	148
4.7.3 Entering Angle to Circle	150
4.7.4 Path Color.....	151
4.7.5 Variable Corner R.....	152
4.7.6 Feed for Element	153
4.7.7 Cutoff Margin Point.....	154
4.7.8 ASR Point.....	156
4.7.9 Latter Process	158
4.7.10 Variable Setting for Element	159
4.7.11 Initial Hole Coordinate	160
4.7.12 Optional NC Code.....	161
4.8 Work Coordinate	163
4.8.1 Define Work Figure.....	164
4.8.2 Work Coordinate System.....	165
4.8.3 Expanded Work Coordinate System.....	166

4.9 Automatic Second Cut.....	167
4.9.1 Change E Pack.....	170
4.9.2 Load Parameters	171
4.9.3 Set Machining Method	172
4.9.4 Set Machining Element.....	173
4.9.5 Save Parameters	177
4.9.6 E Pack Information	178



Seminar text

Chapter Wire CAM

We explain the procedure to create NC data.

Contents

CHAPTER 4 WIRE CAM	1
4-1 SUMMARY OF WIRE CAM.....	1
4-2 FLOWCHART TO CREATE NC DATA	2
4-3 HOW TO SPECIFY MACHINING.....	3
4-4 WIRE SETTING	6
4-4-1 Machine Post	6
4-5 SPECIFY MACHINING.....	7
4-5-1 Offset Rate	8
4-6 SETTING	11
4-6-1 Specify Taper.....	11
4-6-2 Z Parameter	14
4-6-3 Start Point.....	15
4-6-4 IH Coordinate Mode	15
4-6-5 Cutoff Margin Point.....	16
4-6-6 Latter Process	16
4-6-7 Optional NC Code	17
4-7 MACHINING PROCESS.....	22
4-7-1 Input	22
4-7-2 [Wire Cutting Process].....	23
4-7-3 Copy.....	29
4-8 CONDITION FOR NC DATA	30
4-8-1 Function Output.....	30
4-8-2 NC Output Form	32
4-9 CREATE NC DATA	35
4-10 NC CHECK.....	35
4-11 INFORMATION	37
4-12 IN/OUT NC DATA	38
4-13 AUTOMATIC SECOND CUT.....	42