

OPERATION MANUAL

MACHINING CENTER

MPC2

(FANUC SYSTEM 11M)



MAKINO MILLING MACHINE CO., LTD.

MAIN OPERATION PANEL AND PC SCREEN OPERATION

CONTENTS

	Page
1. MAIN CONTROL PANEL	1
1.1 Emergency Stop	3
1.2 Memory Protect Reset Switch	3
1.3 Operation Mode Selector Switches	4
1.4 Start and Stop	5
1.5 Machine Display	6
1.6 NC Function Switches and Display	7
1.7 Jog Switches	8
1.8 Coolant System	10
1.9 Rotary Switch	11
2. PC SCREEN AND OPERATIONS	13
2.1 Type of PC Screen	13
2.2 PRIMARY OPERATION Screen	14
2.3 Random Data Screen	31
2.4 TOOL MONITOR Screen	36
2.5 TOOL DETAIL Screen	41
2.6 Remote controlled nozzle screen	52
2.7 Set-up parameter screen	55
2.8 DIAGNS Screen	58
2.9 DATA MAINTENANCE Screen	60
2.10 ALARM Screen	62
2.11 Alarm history screen	70

WORK CHANGER OPERATION

CONTENTS

	Page
1. OUTLINE	1 - 1
2. PC SCREENS RELATING TO WORK CHANGER	2 - 1
2.1 Initial Screen	2 - 2
2.2 Data Maintenance Screen	2 - 3
2.3 Random Data Screen	2 - 4
2.4 Tool Monitor Screen	2 - 7
2.5 Alarm Screen	2 - 8
3. WORK CHANGER MODES	3 - 1
3.1 Random Mode	3 - 1
3.2 Standard Mode	3 - 1
4. PROGRAMS	4 - 1
4.1 In case of Processing with Random Mode	4 - 1
4.2 In case of Processing with Standard Mode	4 - 2
5. OPERATION	5 - 1
5.1 Ready Set	5 - 1
5.2 Operation in MDI Mode	5 - 1
5.3 Operation in Memory Mode	5 - 2
6. OPERATION STATUS DISPLAYS	6 - 1
7. RESTORING AFTER ALARMS	7 - 1
7.1 When it is desired to Complete the Process for the Pallet on the Table	7 - 1
7.2 When it is desired to Unload the Pallet on the Table	7 - 1
8. PALLET CHANGE PROGRAM	8 - 1
APPENDIX 1: GUIDE FOR CONTINUOUS OPERATION	8 - 10
APPENDIX 2: RANDOM MODE AND RANDOM IN CYCLE	8 - 12

AUTOMATIC INDEXING FUNCTION OPERATION FOR 4-FACE
PALLET MAGAZINE

CONTENTS

	Page
1. OUTLINE	1 - 1
2. OPERATION PANEL	2 - 1
2.1 PC Screens	2 - 1
2.1.1 Data maintenance screen (DATA MAINT)	2 - 1
2.1.2 Random data screen (RANDOM DATA)	2 - 2
2.1.3 Initial screen	2 - 3
2.2 Pallet Magazine Operation Panel	2 - 3
2.2.1 Emergency stop switch	2 - 3
2.2.2 Automatic operation suspension switch	2 - 4
2.2.3 Pallet magazine manual mode selection switch	2 - 4
2.2.4 Pallet number selection switch	2 - 4
2.2.5 All on/off switch	2 - 5
2.2.6 Ready switch	2 - 6
2.2.7 Pallet magazine manual rotation switch	2 - 7
2.2.8 Panel number display lamp	2 - 7
2.2.9 Ready lamp	2 - 8
2.2.10 Carrier position invalid lamp	2 - 8
2.2.11 Pallet change position lamp	2 - 8
2.2.12 P/M standby lamp	2 - 8
2.3 Maintenance Manual Operation Panel	2 - 10
2.4 Operation of Pallet Carrier	2 - 12
3. OPERATION	3 - 1
3.1 Start Preparations for Automatic Operation	3 - 1
3.2 Processing Program Format	3 - 1
3.3 Start of Automatic Operation	3 - 2
3.4 Automatic Unloading (AUTO WORK CHANGE)	3 - 2
3.5 Operation when Alarm Occurs through Tool Monitor	3 - 3
4. SUB PROGRAMS FOR AUTOMATIC 4-FACE PROGRAM ACCESS	4 - 1
4.1 Loading and Unloading Sub Programs	4 - 1
4.2 Table (Face) Indexing Programs	4 - 1
4.3 Automatic Unloading Program	4 - 2

MAIN OPTION FUNCTION OPERATIONS

CONTENTS

	Page
1. BTS FUNCTION (TOOL BREAKAGE DETECTION FUNCTION)	1 - 1
2. PATROL LIGHTS	2 - 1
3. ILLUMINATION FUNCTION THROUGH PATROL LIGHT M CODE	3 - 1
4. COOLANT OILMATIC	4 - 1
5. TAP MIST AND TAP OIL MIST FUNCTIONS	5 - 1
6. COOLANT TANK LEVEL CHECK FUNCTION	6 - 1
7. OIL TANK LEVEL CHECK FUNCTION	7 - 1
8. LUBRICATING OIL RECOVERY TANK LEVEL CHECK FUNCTION	8 - 1
9. ATC MAGAZINE SAFETY COVER (WITH INTERLOCK) FUNCTION	9 - 1
10. PRIOR TOOL CHECK FUNCTION	10 - 1
11. QUANTITY CONTROL	11 - 1

M Code Schedule

SET-UP PARAMETER SCHEDULE

MPC2 Set-up Parameter Schedule

ALARM SCHEDULE

CONTENTS

	Page
1. ALARM DISPLAY	1 - 1
1.1 Alarm Status Display	1 - 1
1.2 Alarm Numbers	1 - 1
2. ALARM SCHEDULE	2 - 1
2.1 Task No.	2 - 1
2.2 Error Type	2 - 3
2.3 Job No.	2 - 4
2.4 Block No.	2 - 11
2.5 Step No.	2 - 14
2.6 Sub Error No.	2 - 30

DI/DO Diagnosis Tables

- (1) MC65
- (2) MC1210, HNC
- (3) MC40
- (4) MC100
- (5) MC86
- (6) Main Operation Panel
- (7) BMI Interface