


E33/E56 MACHINE

MAINTENANCE MANUAL

(V1031I-E2E-XB)

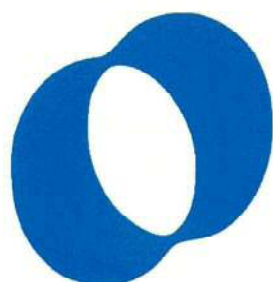

MAKINO

This machine, including technical data and software, may be subject to the Japanese Foreign Exchange and Foreign Trade Law. Prior to any re-sell, re-transfer or re-export of controlled items, please contact Makino to obtain any required authorization or approval.

Contents

Chapter 1 Safety Precaution 1-1

1.1	General.....	1-1
1.2	Safety Precautions.....	1-2

Chapter 2 Introduction 2-1

2.1	Introduction.....	2-1
2.2	Service Contact	2-2

Chapter 3 Machine Installation 3-1

3.1	Selection of Location for Machine Installation	3-1
3.2	Floor Space and Machine Layout Drawings.....	3-1
3.3	5. Pre-Delivery Preparation.....	3-6
3.4	Receiving and Inspection.....	3-9
3.5	Unloading, Lifting and Moving Machine	3-10
3.6	Initial Cleaning of Machine.....	3-13
3.7	Machine Installation.....	3-13
3.8	Procedure for Machine Installation.....	3-19
3.9	Turning On Power.....	3-20
3.10	Final Leveling	3-20

Chapter 4 Mechanical and Electrical Specifications 4-1

4.1	Introduction to Mechanical structure	4-1
4.2	Out Line of Different Parts	4-2
4.3	Mechanical Specifications.....	4-5
4.4	Introduction to Electrical Control Functions.....	4-8
4.5	CNC UNIT	4-9
4.6	Electrical Specifications	4-11
4.7	CNC Control Specifications.....	4-13

Chapter 5 Periodic Maintenance 5-1

5.1	Periodic Maintenance of Mechanical Items.....	5-1
5.2	Periodic Maintenance of Dust Collector	5-3
5.3	Introduction of Electrical Items	5-6
5.4	Fuse Replacement.....	5-7
5.4.1	Replacing Fuse in CPU Unit.....	5-7
5.4.2	Replacing Fuse in the Power Supply Module for Drives	5-8
5.4.3	Replacing Fuse in the Servo Amplifier Module	5-8
5.4.4	Replacing Fuse in Spindle Amplifier Module	5-10
5.5	Batteries Replacement.....	5-11
5.5.1	Replacing Battery for Data Memory Backup.....	5-11
5.5.2	Replacing Batteries for Absolute Pulse Coder in α Series Servo Amplifier Module.....	5-12
5.6	Replacing Fan Motor in CNC Unit.....	5-13
5.7	Replacing Touch Screen Protection Sheet.....	5-14
5.8	Replacing Pen for Touch Panel	5-15

Chapter 6 Troubleshooting On Machine 6-1

6.1	Introduction.....	6-1
6.2	Troubleshooting On Spindle.....	6-4
6.2.1	Spindle Motor.....	6-4
6.2.2	Spindle Tool Clamp / Unclamp.....	6-5
6.2.3	Clamp / Unclamp Limit Switches.....	6-6
6.2.4	Limit Switch Adjustment.....	6-7
6.2.5	Spindle 20000rpm & 30000rpm.....	6-7
6.2.6	Spindle Cooling System.....	6-9
6.2.7	Spindle Bearing Lubrication.....	6-11
6.2.8	Spindle Orientation.....	6-11
6.2.9	Emergency Stop Button Is Pressed During Spindle Rotation.....	6-12
6.2.10	Spindle Start / Stop Malfunction.....	6-13
6.2.11	Spindle Speed Range Switching.....	6-14
6.2.12	30K Spindle (Option) & ATC Arm Control.....	6-14
6.3	Oilmatic (Spindle Temperature Controller).....	6-18
6.4	Circuit Breakers & Circuit Protectors.....	6-20
6.5	Feed Axis.....	6-21
6.5.1	Feed Axis Fails to Move in Manual Mode.....	6-21
6.5.2	Servo Alarm Is Triggered During Operation.....	6-21
6.5.3	Feed Axis Runs Until Hitting Mechanical Stop.....	6-21
6.5.4	Positioning Accuracy Not Achieved.....	6-22
6.5.5	Abnormal Noise / Vibration Is Generated When Axis Is Operated....	6-22
6.6	Thermal Overload Relays.....	6-23
6.7	Main Air Pressure Switch.....	6-23
6.8	Emergency & Overtravel Limits.....	6-23
6.9	ATC.....	6-24
6.9.1	Emergency Stop Button Pressed During ATC.....	6-24
6.9.2	Tool Exchange Operation Does Not Start.....	6-24
6.9.3	Tool Dropped During Tool Exchange.....	6-25

6.9.4	ATC Standby Condition.....	6-26
6.9.5	Moving ATC to Standby Condition	6-26
6.9.6	ATC Flow Chart	6-28
6.10	Suction Unit.....	6-30
 Chapter 7 Alarms 7-1		
7.1	Introduction.....	7-1
7.2	Alarm Screen Display	7-1
7.3	Alarm Detail References	7-3
 Chapter 8 Tooling 8-1		
8.1	Tooling information	8-1
8.2	Tool shank with Pull stud	8-2
8.3	Tool shank without Pull stud	8-4
 Appendix 1 Limit Switches and Solenoid Valves..... 9-1		
Appendix 2 DI/DO List 10-1		
Appendix 3 Connector Location and Application..... 11-1		
Appendix 4 Main Components Location on Machine 12-1		