

[Instruction Manual]

Sodick WIRE-CUT EDM

Super Jet AWT
Wire Tip Disposal Unit

Before operating the machine, read this manual carefully and make sure that you fully understand the information it contains.

Appoint someone to be responsible for this manual and keep it in a designated place so that it is accessible at all times.

Sodick Co., Ltd.

Ver. 2.1

TABLE OF CONTENTS

TABLE OF CONTENTS

	<u>PAGE</u>
SECTION 1 SAFETY GUIDELINES.....	1-1
1. BASICS OF SAFE OPERATION.....	1-1
2. SAFETY INSTRUCTIONS.....	1-2
SECTION 2 OVERVIEW OF THE AWT SYSTEM.....	2-1
1. OVERVIEW.....	2-1
2. TYPES OF AWT OPERATIONS.....	2-1
SECTION 3 SPECIFICATIONS AND NOMENCLATURE.....	3-1
1. SPECIFICATIONS (NORMAL AWT).....	3-1
1-1. Super Jet AWT.....	3-1
1-2. Wire Tip Disposal Unit (Compact Suction Type).....	3-2
2. NOMENCLATURE.....	3-3
2-1. Super Jet AWT.....	3-3
2-2. Wire Tip Disposal Unit (Compact Suction Type).....	3-5
SECTION 4 OPERATION OF THE AWT UNIT.....	4-1
1. OPERATION TIMING.....	4-1
1-1. AWT I (Wire Cutting Operation).....	4-1
1-2. AWT II (Wire Threading Operation).....	4-1
2. FLOWCHART OF BASIC AWT OPERATIONS.....	4-2
2-1. AWT I Operation (T90).....	4-2
2-2. AWT II Operation (T91).....	4-3
2-3. AWT III Operation.....	4-6
2-4. Wire Tip Disposal Operation.....	4-7
3. SUPPLEMENTAL INFORMATION.....	4-8
SECTION 5 OPERATING THE AWT UNIT.....	5-1
1. SWITCHES ON MACHINE OPERATION PENDANT.....	5-1
2. OPERATING PROCEDURE.....	5-3
2-1. Operation Flow.....	5-3
2-2. Operation Procedure.....	5-4
2-3. Axis Movement during AWT II.....	5-8

TABLE OF CONTENTS

	PAGE
SECTION 6	SETTINGS FOR AWT OPERATION..... 6-1
1.	SETTINGS ON THE [MANAGE]-[PARAMETER]-[MACHINE] SCREEN 6-1
2.	HIGH-SPEED AWT 6-6
3.	SETTING THE U-/V-AXIS OFFSET 6-7
4.	SETTING THE BACK TENSION (EXCEPT FOR AQ750/900L) 6-9
5.	SETTING FOR "AWT 2 FEED SPEED" 6-11
6.	ADJUSTING AWT JET 6-11
7.	SETTING THE WIRE FOR AUTOMATIC WIRE THREADING 6-12
8.	THIN WIRE ($\phi 0.1$ mm) SETTING 6-15
9.	ANNEAL & THERMAL MELTING CONDITION SETTING 6-16
SECTION 7	WIRE-BREAK POINT AWT 7-1
1.	OVERVIEW OF WIRE-BREAK POINT AWT 7-1
1-1.	Specifications of Wire-break Point AWT 7-1
1-2.	Wire-break Point AWT Sequences 7-1
2.	NOTES ON USE OF WIRE-BREAK POINT AWT 7-3
2-1.	Pre-requisite 7-3
2-2.	Setting 7-3
2-3.	Pipe Position Setting 7-5
3.	OPERATION 7-6
3-1.	Wire-break Point AWT Start Timing 7-6
3-2.	Setting 7-6
3-3.	Operation Flow 7-8
SECTION 8	SETTING OF ACTIVE-AWT AND HOW TO USE A-AWT 8-1
1.	SETTINGS ITEMS FOR ACTIVE-AWT (A-AWT) 8-1
1-1.	Standard Setting List 8-1
1-2.	Active-AWT Type 8-2
2.	SETTING OF PIPE LOWER LIMIT 8-5
3.	AWT JET PRESSURE AND FLOW RATE SETTING 8-6
4.	U-/V-AXIS OFFSET FOR AWT PIPE 8-6
SECTION 9	ERRORS AND REQUIRED CORRECTIVE ACTION 9-1

TABLE OF CONTENTS

	<u>PAGE</u>
SECTION 10 TROUBLESHOOTING	10-1
1. TROUBLES IN AWT I OPERATION	10-1
2. TROUBLES IN AWT II OPERATION	10-6
3. TROUBLES DURING WIRE-BREAK POINT AWT OPERATION	10-9
4. TROUBLES DURING WIRE TIP DISPOSAL OPERATION	10-10
5. AWT ADJUSTMENT PROCEDURE	10-11
SECTION 11 OTHER PRECAUTIONS AND MAINTENANCE	11-1
SECTION 12 CHANGING CONSUMABLE PARTS	12-1
SECTION 13 MANUAL WIRE THREADING	13-1
SECTION 14 PARTS LIST	14-1