

KA-200 Counter

Counter for Linear Scale Unit

User's Manual

Read this User's Manual thoroughly before operating the instrument.
After reading, retain it close at hand for future reference.

Mitutoyo

CONTENTS

CONVENTIONS USED IN THIS MANUAL	i
Labels Attached to the Product.....	iii
Safety Precautions	iv
Electromagnetic Compatibility	v
Warranty.....	v
Disclaimer.....	vi
Export Control Compliance	vi
Export to EU Countries	vi
Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)	vii
China RoHS Compliance Information.....	vii
CONTENTS	viii
1 OVERVIEW	1-1
1.1 Overview.....	1-1
1.2 Name and Function of Each Part	1-2
1.2.1 Main unit	1-2
1.2.2 Display unit.....	1-3
1.2.3 Name and function of keys for the standard counter	1-4
1.2.4 Name and function of keys for the lathe counter	1-6
2 SETUP.....	2-1
2.1 Unpacking	2-1
2.2 Installation.....	2-2
2.3 Connecting to the Counter	2-3
3 BASIC OPERATIONS	3-1
3.1 Explanatory Notes	3-1
3.2 Basic Operations of Standard Counter	3-2
3.2.1 Turning ON/OFF the power	3-2
3.2.2 Zero-set (X, Y, Z).....	3-4
3.2.3 Preset (X, Y, Z).....	3-4
3.2.4 Function lock (MODE).....	3-5
3.2.5 Coordinate number switching (G).....	3-6
3.2.6 ABS/INC coordinate switching (ABS/INC).....	3-6
3.2.7 Saving and recalling a datum point using the scale reference point (when the AT100 series is connected)	3-7
3.2.8 Setting up the mechanical origin using the AT700 series	3-10
3.2.9 Datum setting, centering, and measuring with the touch signal probe (available only	

	when the AT100 series is connected).....	3-12
3.2.11	Bolt-hole circle machining ()	3-17
3.2.12	Pitch machining ().....	3-20
3.2.13	Zero approach machining ()	3-22
3.2.14	Unit switching ()	3-24
3.2.15	Four arithmetic operation/Trigonometric function ()	3-25
3.2.16	Settings of MODE key combined with number key.....	3-26
3.2.17	Instant stop () (available only when AT100 series is connected)	3-26
3.2.18	Origin set () (available only when AT100 series is connected).....	3-27
3.2.19	Origin hold () (available only when AT100 series is connected)	3-27
3.2.20	Touch signal probe set () (available only when AT100 series is connected) ...	3-28
3.2.21	Touch signal probe hold () (available only when AT100 series is connected) .	3-28
3.2.22	Scaling ratio ()	3-29
3.2.23	Orthogonal/Polar coordinate conversion ().....	3-30
3.2.24	Rectangle drill machining ().....	3-31
3.2.25	R-face mill machining ().....	3-35
3.2.26	Machining speed calculation ().....	3-39
3.2.27	Addition mode (only available for 3-axis)	3-40
3.3	Outline of the Lathe Counter.....	3-41
3.3.1	Parameters of lathe counter	3-41
3.3.2	Transition of lathe counter operation modes	3-41
3.3.3	Coordinate configuration of lathe counter.....	3-42
3.3.4	Tool offset setting ( , )	3-42
3.3.5	Count mode.....	3-45
3.3.6	Tool zero-set/Tool preset ( , )	3-45
3.3.7	Tool number switching ()	3-46
3.3.8	ABS/INC coordinate switching ().....	3-46
3.3.9	1/2 calculation ().....	3-48
3.3.10	Zero approach machining ()	3-49
3.3.11	Unit switching ()	3-51
3.3.12	Four arithmetic operation/Trigonometric function ()	3-51
3.3.13	Settings of MODE key combined with number key.....	3-51
3.3.14	Instant stop ().....	3-51
3.3.15	Origin set ().....	3-51
3.3.16	Origin hold ().....	3-51
3.3.17	Taper calculation ().....	3-52
3.3.18	Machining speed calculation ().....	3-52
4	PARAMETER	4-1
4.1	Overview of Parameters	4-1
4.2	Types of Parameters	4-2

4.2.1	Parameter list	4-3
4.2.2	Resolution when using the AT100 series	4-10
4.3	Parameter Setting	4-13
4.3.1	Checking the parameter settings	4-13
4.3.2	Setting parameters for each axis	4-14
4.3.3	Setting parameters common to all axes	4-18
4.3.4	Parameters of lathe counter	4-20
4.3.5	Initializing the internal memory (Parameter all clear)	4-21
4.3.6	Display and parameters in the addition mode	4-22
5	MAINTENANCE	5-1
5.1	Troubleshooting	5-1
5.1.1	Error message and remedy.....	5-1
5.1.2	Error display in the adding mode.....	5-2
5.1.3	Incorrect key operation	5-3
5.1.4	Troubleshooting	5-3
5.2	Cleaning the Main Unit.....	5-4
6	SPECIFICATIONS	6-1
6.1	Specifications of Main Unit.....	6-1
6.2	Connector Specifications	6-2
6.3	Accessories.....	6-3
6.3.1	Standard accessories	6-3
6.3.2	Optional accessories	6-3
6.4	Precautions for Using the Code Out Unit	6-4
6.5	Precautions for Using the Linear Scale Adapter and Micrometer Head Adapter	6-4
6.6	Conformity with CE directives	6-4