


DC MOTOR DRIVE V65D (VF)

INSTRUCTION MANUAL

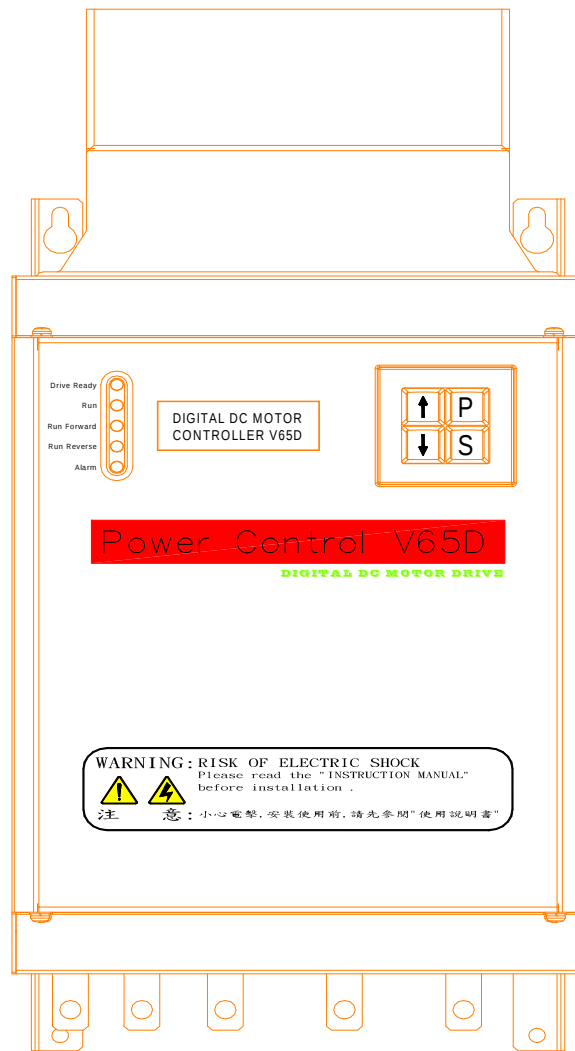

EUNTAY ELECTRIC CO. LTD

Tel: +886-2-82090817 Fax: +886-2-82090327
E-mail: Inter-sales@euntay.tw

Contents

1	Specifications	-----	2
2	Check Items After Receipt	-----	4
3	Installation	-----	4
4	System Block Diagram	-----	5
5	Wiring	-----	7
	5-1 Important Notices	-----	7
	5-2 Terminal Function	-----	10
	5-3 Electric wiring Diagram	-----	13
6	Human Machine Interface(HMI)	-----	14
7	Parameter Setting	-----	15
8	Parameter Table	-----	16
9	Parameter Setting and Description	-----	21
10	Start Setting and Adjustment	-----	29
	10-1 Check Motors	-----	29
	10-2 Check Power Source and Start Setting	-----	29
	10-3 Test Run	-----	32
	10-4 Check Motor Rotation Direction	-----	33
	10-5 Adjust Speed Feedback	-----	34
	10-6 Field Weakening Setting	-----	35
	10-7 Adjustment of Speed Loop Gain	-----	35
	10-8 Starting Run	-----	36
11	Error Display and Troubleshooting	-----	37
12	Dimension Drawings	-----	40
13	Communication	-----	42