

# SERVICE MANUAL

## Controller SIGMA CONTROL

Index: 7\_7000\_0-00 10 E – BUB 80.XX

Publisher:

**KAESER KOMPRESSOREN GmbH**

96410 Coburg • PO Box 2143 • GERMANY • Tel. + 49-(0)9561-6400 • Fax + 49-(0)9561-640130

<http://www.kaeser.com>

# QUICK USER GUIDE

## SIGMA CONTROL

7\_7000\_0-00 10 E - BUB 80.XX

	Page
1. Important Settings .....	1
2. Changing Display Language .....	1
3. Entering the Password .....	2
4. Adjusting System Pressure Setpoint .....	3
5. Activating the clock key .....	4
6. Activating the remote key .....	5
7. Changing the Control Mode .....	6
8. Outputting important operational states of the machine. ....	7
9. Resetting Maintenance Interval Hours Counters .....	8
10. Displaying Messages .....	9
11. Testing the Pressure Relief Valve .....	10
12. Checking the Temperature Sensor and Overtemperature Shutdown Function .....	12

<b>1</b>	<b>Regarding this Document</b>	<b>1 – 1</b>
1.1	Using the Document	1 – 1
1.2	Copyright	1 – 1
1.3	Symbols and Identification	1 – 1
1.4	Graphic portrayal of the display	1 – 2
<b>2</b>	<b>Technical Specifications</b>	<b>2 – 3</b>
2.1	Electrical Connection	2 – 3
2.2	Sensors	2 – 3
2.3	Hardware	2 – 3
2.4	Inputs and Outputs	2 – 3
<b>3</b>	<b>Safety and Responsibility</b>	<b>3 – 4</b>
3.1	Specified Use	3 – 4
3.2	Unspecified Use	3 – 4
3.3	User's Responsibilities	3 – 4
3.4	Hazards	3 – 5
3.5	Safety Regulations for the Controller	3 – 5
<b>4</b>	<b>Design and Function</b>	<b>4 – 6</b>
4.1	Short Description of the Controller	4 – 6
4.2	Keys and LEDs	4 – 7
4.2.1	Keys	4 – 7
4.2.2	LEDs	4 – 8
4.2.3	The Display	4 – 9
4.3	Password Protection	4 – 10
4.4	Short Description of the Menu Structure	4 – 10
4.4.1	Main menu	4 – 10
4.4.2	The two navigation levels in SIGMA CONTROL	4 – 11
4.5	Outline of the Display and Setup Level	4 – 11
4.5.1	Configuration menu	4 – 12
4.5.2	Components menu	4 – 14
4.5.3	Package test menu	4 – 14
4.5.4	Communication menu option	4 – 15
4.6	Outline of the Display Level	4 – 16
4.7	Operating and Control Modes	4 – 18
4.7.1	Machine operating modes	4 – 18
4.7.2	Control modes	4 – 18
4.7.3	Variable speed drive with frequency converter (SFC)	4 – 19
4.8	MODULATING Control Mode	4 – 19
<b>5</b>	<b>Installation and Operating Conditions</b>	<b>5 – 20</b>
5.1	Surroundings	5 – 20
5.2	Installation Conditions	5 – 20
<b>6</b>	<b>Installation</b>	<b>6 – 21</b>
6.1	Reporting Transport Damage	6 – 21
6.2	Machine Identification	6 – 21

<b>7</b>	<b>Initial Start-up</b>	<b>7 – 22</b>
7.1	Configuring the Controller	7 – 23
7.1.1	Selecting menu options	7 – 23
7.1.2	Changing the display language	7 – 24
7.1.3	Entering and displaying passwords	7 – 24
7.1.4	Setting up time and date	7 – 25
7.1.5	Setting display formats	7 – 26
7.1.6	Setting and activating Summer/Winter time	7 – 28
7.1.7	Activating/deactivating the IDLE mode	7 – 29
7.2	Configuring the pressure settings	7 – 30
7.2.1	List of pressure parameters	7 – 30
7.2.2	Displaying pressure parameters	7 – 32
7.2.3	Configuring the pressure parameters for compressors	7 – 33
7.2.4	Configuring the pressure parameters for vacuum pumps	7 – 35
7.2.5	Configuring pressure parameters for boosters and air main charging compressors	7 – 36
7.3	Configuring machine start and stop	7 – 38
7.3.1	Automatic start/stop in programmed clock mode	7 – 38
7.3.2	Setting up the holiday period	7 – 40
7.3.3	Starting the machine remotely from a control centre (remote ON/OFF)	7 – 42
7.3.4	Activating/deactivating the IDLE phase (venting function)	7 – 44
7.3.5	Activating/deactivating and setting up automatic restart after a power failure	7 – 44
7.3.6	Setting up the delays for star-delta-start	7 – 46
7.4	Activating and setting up the control modes	7 – 46
7.4.1	Selecting control modes DUAL/QUADRO/VARIO/CONTINUOUS	7 – 46
7.4.2	Setting up the IDLE period in DUAL control	7 – 47
7.4.3	Setting the unloaded and minimum running period in QUADRO control mode	7 – 47
7.4.4	Setting up the control pressure valve for MODULATING control mode	7 – 48
7.5	Configuring the machine for local mode	7 – 49
7.5.2	Configuring the system pressure setpoint changeover using the clock	7 – 50
7.5.3	Configuring the system pressure setpoint changeover using the timer	7 – 52
7.6	Configuring the machine for operation in sequence	7 – 54
7.6.2	Configuring Profibus mode (SAM or VESIS)	7 – 54
7.6.3	Configuring the Profibus interface without SAM/VESIS	7 – 60
7.6.4	Configuring master-slave mode	7 – 61
7.6.5	Configuring sequencing mode using the LOAD remote contact (e.g. MAC 41)	7 – 67
7.6.6	Configuring sequencing mode using the local/remote contact (e.g. MVS 8000)	7 – 69
7.6.7	Configuring the sequencing mode from the remote contact	7 – 72
7.6.8	Sequencing mode with machines controlled by the pressure switch	7 – 73
7.7	Configuring PC or Modem Output	7 – 80
7.7.2	Configuring the RS 232 interface	7 – 80
7.8	Configuring the SMS	7 – 81
7.8.1	Activating the SMS function	7 – 81

	Chapter – page
7.8.2	Suppress repeat messages (filter) ..... 7 – 82
7.8.3	Entering the modem's phone number (modem) ..... 7 – 82
7.8.4	Entering company data (site location) ..... 7 – 83
7.8.5	Configuring selection of the Service Centre (channel) ..... 7 – 83
7.9	Configuring input and output signals ..... 7 – 84
7.9.1	Outputting important operational states of the machine. .... 7 – 85
7.9.2	Displaying analog input values ..... 7 – 87
7.9.3	Displaying additional binary input signals ..... 7 – 89
7.9.4	Using machine pressure and temperature values as switches ..... 7 – 90
7.9.5	Configuring analog outputs ..... 7 – 92
7.10	Configuring the Package Discharge Air Temperature ..... 7 – 94
7.10.1	Compensating line resistance ..... 7 – 94
7.10.2	Entering the correction value ..... 7 – 95
7.10.3	Switching levels for the package discharge temperature ..... 7 – 95
7.11	Activating Remote Reset ..... 7 – 97
7.11.1	Selecting menu option configuration > acknowledgement ..... 7 – 97
7.11.2	Setting the remote reset function ..... 7 – 97
7.11.3	Activating the remote key ..... 7 – 97
7.11.4	Assign an input ..... 7 – 98
7.12	Linking to an external pressure transducer ..... 7 – 98
7.12.1	Selecting menu option configuration > pressure settings > load control . 7 – 99
7.12.2	Assign an input ..... 7 – 99
7.12.3	Defining the type of analog signal (4 - 20 mA/0 - 20 mA) ..... 7 – 99
7.13	Setting up the timer for condensate drainage ..... 7 – 99
7.13.1	Selecting menu option configuration > timer ..... 7 – 100
7.13.2	Setting the timer OFF and timer ON periods ..... 7 – 100
7.13.3	Assigning an output to the solenoid valve ..... 7 – 100
7.14	Activating the energy-saving mode for the refrigeration dryer ..... 7 – 100
7.15	Initial Start-up ..... 7 – 101
<b>8</b>	<b>Operation ..... 8 – 102</b>
8.1	Switching the Machine On and Off ..... 8 – 102
8.1.1	Switching on the machine in local mode ..... 8 – 102
8.1.2	Switching off the machine in local mode ..... 8 – 103
8.1.3	Remote on and off switching ..... 8 – 103
8.1.4	Switching on and off with the clock ..... 8 – 104
8.2	Resetting alarm messages ..... 8 – 104
8.3	Resetting warning messages ..... 8 – 105
8.4	Displaying the Actual Operating Mode ..... 8 – 106
8.5	Setting up Machine Pressure ..... 8 – 107
8.6	Displaying Messages ..... 8 – 107
8.6.1	Selecting menu option status > messages ..... 8 – 108
8.7	Displaying status data, resetting and printing ..... 8 – 109
8.7.1	Displaying and resetting machine duty cycle ..... 8 – 109
8.7.2	Displaying and resetting further status data ..... 8 – 110
8.7.3	Changing the permissible number of motor starts ..... 8 – 110

	Chapter – page
8.7.4	Transferring event memory data or parameter data to a PC ..... 8 – 111
8.8	Displaying analog data ..... 8 – 111
8.9	Displaying operating data ..... 8 – 112
8.10	MICROMASTER: Display parameter/messages on the frequency converter ..... 8 – 113
8.11	Resetting maintenance interval hours counters ..... 8 – 114
8.12	Setting the maintenance interval ..... 8 – 115
8.13	Resetting annual maintenance messages ..... 8 – 115
8.14	Checking the pressure relief valve ..... 8 – 116
8.15	Checking the Temperature Sensor and Overtemperature Shutdown Function ..... 8 – 118
8.16	Determining the optimal control mode. .... 8 – 120
<b>9</b>	<b>Fault Finding and Removal ..... 9 – 121</b>
9.1	Alarm messages to the controller (machine shut-down, red LED blinking) ..... 9 – 121
9.2	Warning messages on the controller (yellow LED flashes) ..... 9 – 124
9.3	Other Alarms ..... 9 – 127
<b>10</b>	<b>Maintenance ..... 10 – 129</b>
10.1	Testing the controller ..... 10 – 129
10.1.1	Displaying binary inputs and outputs ..... 10 – 129
10.1.2	Testing the LEDs on the controller ..... 10 – 130
<b>11</b>	<b>Spares, Operating Materials, Service ..... 11 – 131</b>
11.1	Note the nameplate ..... 11 – 131
11.2	Maintenance Contract ..... 11 – 131
11.3	Service Addresses ..... 11 – 131
11.4	Displaying the version number, machine model, material number and serial number ..... 11 – 131
<b>12</b>	<b>Decommissioning, Storage and Transport ..... 12 – 132</b>
<b>13</b>	<b>Annex ..... 13 – 133</b>

Fig. 1	The function keys on SIGMA CONTROL .....	4 – 7
Fig. 2	SIGMA CONTROL LEDs .....	4 – 8
Fig. 3	Wiring the Profibus plug .....	7 – 55
Fig. 4	Example of connections for sequencing with SAM .....	7 – 56
Fig. 5	Electrical connections between the two controllers .....	7 – 62
Fig. 6	LOAD remote contact wiring diagram .....	7 – 68
Fig. 7	Wiring diagram for local/remote contact .....	7 – 70
Fig. 8	Wiring diagram for machine with pressure switch regulation .....	7 – 74
Fig. 9	Function diagram of pressure switch regulation and SIGMA CONTROL regulation .....	7 – 76
Fig. 10	Switching On and Off .....	8 – 102
Fig. 11	Resetting warning and alarm messages .....	8 – 104
Fig. 12	Resetting warning and alarm messages .....	8 – 105

	Chapter – page
Tab. 1	SIGMA CONTROL function keys ..... 4 – 7
Tab. 2	SIGMA CONTROL LEDs ..... 4 – 8
Tab. 3	Internal operating modi ..... 4 – 9
Tab. 4	Characters in the navigation line ..... 4 – 9
Tab. 5	Outline of the Display and Setup Level ..... 4 – 11
Tab. 6	Configuration menu ..... 4 – 13
Tab. 7	Components menu ..... 4 – 14
Tab. 8	Package test menu ..... 4 – 14
Tab. 9	Communication menu ..... 4 – 15
Tab. 10	Outline of the Display Level ..... 4 – 17
Tab. 11	Date format ..... 7 – 26
Tab. 12	time formats ..... 7 – 27
Tab. 13	Units of pressure ..... 7 – 27
Tab. 14	Units of temperature ..... 7 – 28
Tab. 15	Pressure parameters of the compressors ..... 7 – 31
Tab. 16	Pressure parameters for rotary screw vacuum pumps ..... 7 – 31
Tab. 17	Pressure parameters for the components ..... 7 – 32
Tab. 18	Example of a machine ON/OFF clock program ..... 7 – 39
Tab. 19	Operating modes in local mode ..... 7 – 49
Tab. 20	Example of system pressure changeover switching points ..... 7 – 50
Tab. 21	Table of controllers working in sequence ..... 7 – 54
Tab. 22	Profibus DP pin assignments ..... 7 – 55
Tab. 23	Master-slave configuration procedure ..... 7 – 61
Tab. 24	RS 485 pin assignment ..... 7 – 62
Tab. 25	Example switching points ..... 7 – 77
Tab. 26	Example clock program for equal duty cycling during the day ..... 7 – 79
Tab. 27	Example clock program for equal duty cycling during the week ..... 7 – 79
Tab. 28	RS 232 pin assignment ..... 7 – 80
Tab. 29	Assigned output signals ..... 7 – 85
Tab. 30	Checklist of installation conditions ..... 7 – 101
Tab. 31	Displayed analog data ..... 8 – 111
Tab. 32	Alarm messages and actions ..... 9 – 124
Tab. 33	Warning messages and actions ..... 9 – 127
Tab. 34	Other faults and actions ..... 9 – 128