



All you have to know about specifications,  
transport, installation, operation,  
maintenance and accessory


# Technical Fundamentals

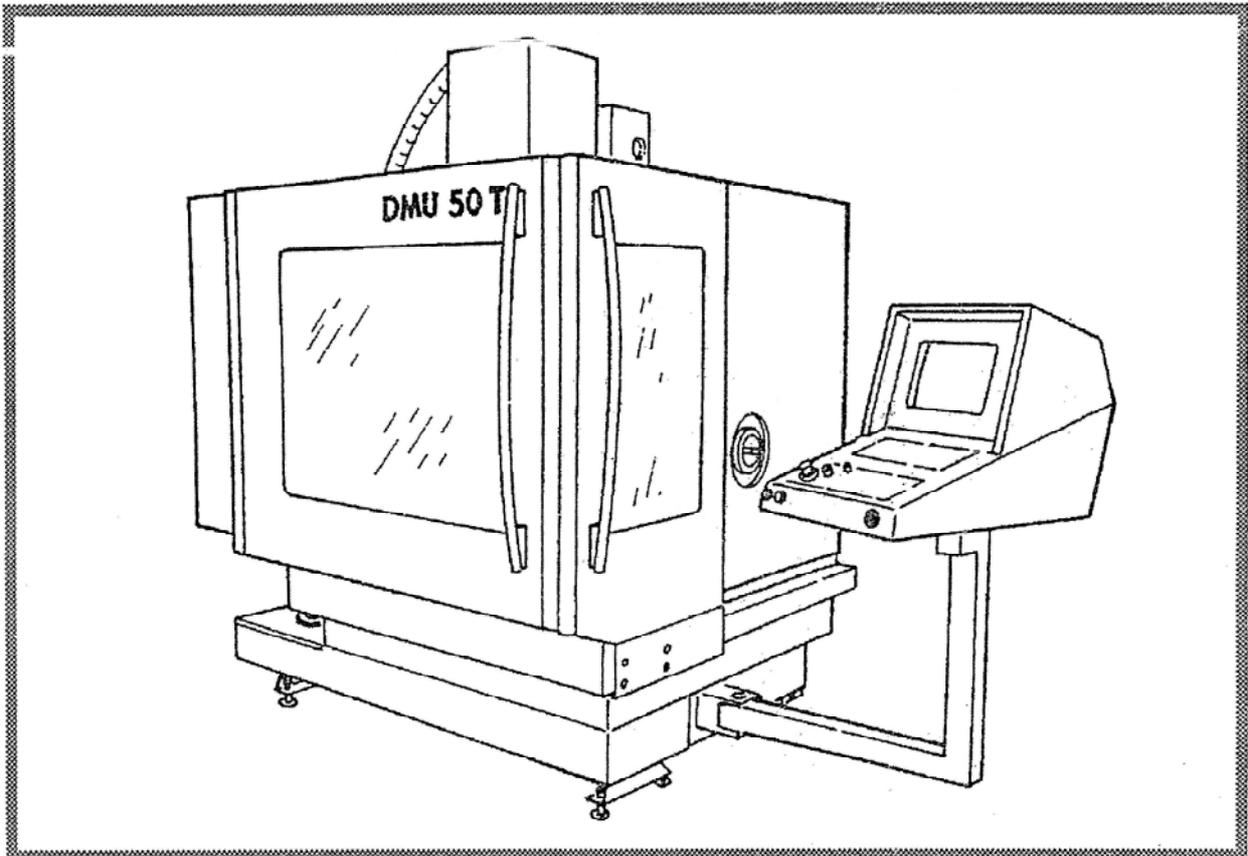

## Machine Manual

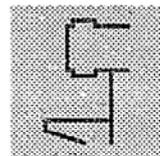

DMU 50 T

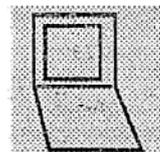

TNC 426

DECKEL MAHO

**Machine Manual**


**Parts Catalog**

**Control**

**Diagnostic Manual**

**Machine Parameter**

**DECKEL MAHO**

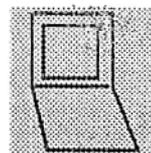

TNC 426

## Workpiece machining

- Caution when using existing clamping devices:
  - Check critically whether they are suitable for your DECKEL MAHO machine.
- Use clamping devices only if they have inherent rigidity.
- After collision due to which clamping devices were damaged, contact the respective manufacturer of clamping device relating to a continued use of the clamping device.
- Insert workpieces correctly and keep the equipment clean.
- Before machine switch-off, remove workpiece from clamping device.

## Documentation

**Safety information, accident prevention** This manual includes important information about how to prevent dangerous situations for man and machine by the correct use or operation of our product.

**Machine manual**

1. Machine description
2. Specifications
3. Operation
4. Setup
5. Maintenance and lubrication
6. Transport
7. Installation
8. Connection, assembly
9. Accessory
10. Diagrams

**Control manual** Operating and Programming

**Supplementary instructions**

1. Mode of operation
2. Functions M

**Parts catalogue** Spare part drawings of the main components

# Contents

<b>1. Machine description</b>	Main components .....	1-2
	Control elements .....	1-3
	Operating panel .....	1-4
	Electronic handwheel (optional) .....	1-8
	Safety features .....	1-9
<b>2. Technical information</b>	Main drive .....	2-2
	Speed-torque diagram .....	2-2
	Feed drive .....	2-3
	Moving directions .....	2-3
	Path measuring system .....	2-3
	Work range .....	2-3
	Working spindle .....	2-4
	Tool changer with magazine .....	2-4
	Working tables .....	2-4
	Installation site .....	2-5
	Installation data .....	2-7
	Weight .....	2-8
	Transport data .....	2-8
	Installation diagram .....	2-9
	Levelling elements .....	2-10
	Working range .....	2-11
	Tools .....	2-13
<b>3. Operation</b>	Power ON / OFF .....	3-2
	EMERGENCY STOP, emergency unlock .....	3-3
	Approaching the reference point .....	3-4
	Operation modes .....	3-5
	Free choice of program entry .....	3-6
	Feed indication for Measurement system Inch .....	3-7
	Working room doors .....	3-8
	Manual axes movement .....	3-10
	Electronic handwheel (optional) .....	3-12
	Mechanical end stop .....	3-15
	Manual tool change .....	3-16
	Spindle .....	3-19
	Coolant .....	3-21
	Loading and unloading the tool magazine .....	3-24
	Release swivelling milling head, pallet changer, tool changer .....	3-27
	M-Functions M24, M27, M28, M29, M42, M47, M48, M67 .....	3-30
	Tool administration T-IN / T-OUT .....	3-35
PLC status in tool table (overview) .....	3-37	
Operating radii (M50/M51/M52) .....	3-38	
<b>5. Maintenance and lubrication</b>	General information .....	5-2
	Symbols in the lubricating diagram .....	5-4
	Lubricating diagram .....	5-5
	Lubricating filling .....	5-6

	Page
Initial filling . . . . .	5-7
Lubricant table . . . . .	5-8
Cooling lubricants . . . . .	5-11
Maintenance chart . . . . .	5-17
Maintenance works . . . . .	5-18
Central lubrication unit . . . . .	5-21
Cooling lubricant system . . . . .	5-22
Pneumatic system . . . . .	5-23
Tool clamping system . . . . .	5-24
Cooling and ventilation system . . . . .	5-25
Heat exchanger . . . . .	5-26
Interference . . . . .	5-27
<b>6. Transport</b>	
General information . . . . .	6-2
Necessary transport means . . . . .	6-3
Delivery . . . . .	6-4
Transport in packed condition . . . . .	6-5
Transport without packing . . . . .	6-6
Shipment . . . . .	6-8
<b>7. Installation</b>	
General information . . . . .	7-2
Levelling and fixing . . . . .	7-3
<b>9. Connection, assembly</b>	
General information . . . . .	8-2
Connection between machine and control cabinet . . . . .	8-3
Electrical connection . . . . .	8-4
Connecting the cooling lubricant device . . . . .	8-8
Final inspection . . . . .	8-9
Transport preparation . . . . .	8-11
<b>9. Accessory</b>	
Circular table . . . . .	9-2
Additional Operation Modes 3 and 4 (Option) . . . . .	9-4
Tool Break Control (WB 2) . . . . .	9-13
<b>10. Diagrams</b>	
Feed drive . . . . .	10-2
Pneumatic system . . . . .	10-5
Central lubricating unit . . . . .	10-6

**TEILEKATALOG / PARTS CATALOG**  
**CATALOGUE DE PIECES**  
**CATALOGO DI PEZZI**  
**CATALOG DE PIEZAS**

# **DMU 50 T**

76.137500    **BAUGRUPPENZEICHNUNG / BUILDING GROUP DRAWINGS**  
**DESSINS DES ENSEMBLES**  
**DISEGNI DI GRUPPI COSTRUTTIVI**  
**DIBUJOS DE GRUPOS CONSTRUCTIVOS**

Montageaufbau III-VI / Mounting structure III -VI	<b>1</b>
X -Schlitten / X -Slide	<b>2</b>
Spindelstock / Headstock	<b>3</b>
--- / --- / ---	<b>4</b>
--- / --- / ---	<b>5</b>
--- / --- / ---	<b>6</b>
NC-Rundtisch/ CN rotary table	<b>7</b>
Hydraulik / Hydraulic	<b>8</b>
Werkzeugmagazin / Tool magazine	<b>9</b>
--- / --- / ---	<b>10</b>
--- / --- / ---	<b>11</b>

Register-Nr. / Register-no.

## BAUGRUPPEN-ÜBERSICHT / BUILDING GROUP - SURVEY DIAGRAM

# DMU 50 T

Control Unit Manual

# Supplement

Supplementary information on the operation of the machine and control unit.

**DECKEL MAHO**



TNC 426

# Overview of Manual

---

**Safety  
recommendations  
Accident  
prevention**

This booklet contains important information on how you can prevent added risks of personal injury or damage to the machine by using our product solely within the scope of its prescribed end use.

**User manuals**

The Heidenhain user manuals contain complete information on how to use and program the control system.

**Supplement**

1. Operating modes
2. Parameters
3. M functions
4. Other functions

# Contents

---

<b>1. Operating modes</b>	Mode structure	1-2
	Function keys	1-3
<b>2. Parameters</b>	Call, edit parameters	2-2
	List of user parameters	2-3
<b>3. M functions</b>	Description	3-2
	Description M80 – M88	3-7
<b>4. Other functions</b>	Auto test	4-2
	Inch measuring system	4-3
	PLC status in tool list	4-4

Diagnosis Manual

# Error Messages

This manual unveils the last mysteries of your control unit.

**DECKEL MAHO**



TNC 426