
**S-400 ENAC-I
(YASNAC i80MB)
VERTICAL MACHINING CENTER**

OPERATOR'S MANUAL

ENSHU LIMITED

CONTENTS

Preface	1
Contents	2
Table of Figures	5
Precautions Regarding Safety	7
Overall Safety Precautions	8
Safety Devices	11
Precautions Regarding Operation	12
Precautions for Operating the Equipment Safely	12
Precautions Regarding Cutting Fluid	15
Warming Up	16
Precautions Regarding Maintenance	16
Precautions Regarding Operation	18
Precautions When Work is Finished	20
Precautions Regarding Electrical Equipment and NC Devices	21
Names and Functions of the Various Parts	25
Names of Each Part of the Machine	26
Names and Functions of Operation Switches	27
CRT/MDI Panel	27
Description of Functions	29
Operation Panel	33
Description of Functions	35
Operation of Basic Functions	41
Turning the Power On and Off	42
Preparation and Inspection Prior to Turning on the Power	42
Turning On the Power Supply	42
When Operation is Finished	44
Items Related to the Spindle (Using Manual/MDI Operation)	46
Installing Tools	46
Removing Tools	47
Spindle Rotation	48
Stopping the Spindle	50
Spindle Orientation (Stopping at the Fixed Position)	51
Feed System	52
Zero Point Return	52
Cutting Feed	54
Rapid Traverse	54
Handle Feed with the Manual Pulse Generator	55
MDI Feed Rate	56
Cutting Fluid Unit (Starting and Stopping the Cutting Fluid)	57
Manual Action Operation	57-2
Operation of NC Function	57-5
External I/O Equipment Parameters	58

CONTENTS

ATC Equipment and Operation	59
Automatic Tool Changer (ATC)	60
Tool Exchange Operation (ATC cycle pattern)	61
Spindle Operation	62
Procedure for Changing Spindle Operation	66
Display and Registration of Tool Data	70
Tool Data (T No.) Display Procedure (1)	70
Tool Data (T No.) Display Procedure (2)	71
Tool Data (T No.) Registration Procedure	73
Putting Tools In and Taking Them Out of the Magazine	74
Method of Programming	77
Basic Programming	78
NC Machining Center Operating Procedure and Programming	78
Creating an NC Program	79
Creating a Single Block (One Action)	80
Coordinate and Movement Commands	82
G Code	85
Workpiece Coordinate System (G54 - G59)	87
Example of Hole Drilling Machining Program	89
Canned Cycle (Program Abbreviation)	95
Tool Length Correction	97
What is Tool Length Correction?	97
Example of Hole Machining Program Using Drill (Revised)	98
Method of Writing In a Program	99
Writing In and Saving	99
Changing, Inserting, or Deleting a Word (Character String)	101
Changing a Word	101
Inserting a Word	102
Deleting a Word	103
Setting and Displaying the Amount of Tool Compensation	104
Displaying the Amount of Tool Compensation	104
Setting the Tool Correction Amount	105
G Code List	107
M Function and M Code List	111
Spindle Rotation (S Codes)	117
ATC Programming Method	118
Precautions When Using Solid Taps	120
Solid Tap Cycle Commands	120
Program Example	121
Example of Warming Up Operation Program	122
Automatic Operation and Daily inspection	123
Automatic Operation	124
Warming Up	126
Shutting Down the Equipment	127
Daily Inspection	129

Operator's Manual

2 A P C

CONTENTS

Introduction	1
Contents	3
Table of Figures	4
Overview and configuration	5
Front view, side view, plane view	5
Pallet diagram	8
Workpiece dimensions	9
Floor space	10
Specifications	11
S-40 specifications table (with 2APC)	11
Pallet exchange operation	15
Description of auxiliary control panel	16
Operation	18
Setting the home position	18
Interlock between machine motion and APC	19
Resuming operation after an emergency stop	19
Programming	20
M codes explanation	20
How to program	20
Maintenance	22
Table of limit switches, pressure switches, and solenoid valves	22
Layout of limit switches, pressure switches, and solenoid valves	23
Hydraulic unit and hydraulic circuit diagram, and pneumatic circuit diagram	24
Alarm numbers and method of handling	27

Operator's Manual

GDC

(ENAC GDC1/GDC2)

For JE40, JE60, EV650, S400, 450FV
--

Contents

CHAPTER 1	Overview of GDC1 and GDC2.....	1
	• <i>pm4810 : Parameter for Acceleration/Deceleration in High Speed Mode Run</i>	4
	• <i>pm4800 : Parameter for Corner Accuracy in High Speed Mode Run</i>	5
	• <i>pm4823 : Parameter for Allowable Acceleration With Arc Block in High Speed Mode</i>	6
CHAPTER 2	Function and Performance of GDC1 and 2	7
	2.1 <i>GDC Structure and Basic Performance</i>	7
	2.2 <i>Explanation of GDC Functions</i>	9
	2.3 <i>G Codes and Other Processes for GDC1 and 2</i>	11
CHAPTER 3	Using the GDC Function	15
	3.1 <i>Preparing the Hardware and Software</i>	15
	3.2 <i>Parameter Settings</i>	16
	3.3 <i>Checking the Operation</i>	19
	3.4 <i>Usable Machine Models</i>	20

Contents

CHAPTER 4	Precautions and Restrictions	21
	4.1 <i>Restrictions in High Speed Mode Run</i>	<i>21</i>
	4.2 <i>Precautions for Using Tool Diameter Offset</i>	<i>22</i>
	4.3 <i>Changing the High Speed Mode Run</i>	
	<i>Acceleration in the Program</i>	<i>23</i>
CHAPTER 5	Changing Acceleration for High Speed Mode Run	25
	5.1. <i>pm4810: High Speed Run Mode Acceleration/Deceleration</i>	
	<i>Parameter</i>	<i>25</i>
	5.2 <i>pm4800: Corner Accuracy Acceleration Parameter</i>	<i>28</i>
	5.3 <i>pm4823: Arc Block Allowable Acceleration Parameter</i>	<i>29</i>