


CNC SYSTEMS

OSP7000L **OSP700L**

SPECIAL FUNCTIONS MANUAL **(No. 3)**

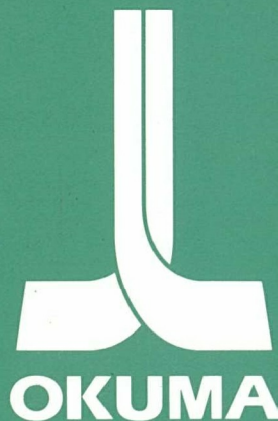

Publication No. 3817-E

OSP7000L **OSP700L**

SPECIAL FUNCTIONS MANUAL (NO. 3) **(1st Edition)**

Pub. No. 3817-E (LE51-023-R1) July 1994

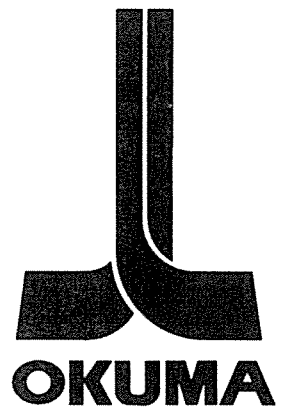


TABLE OF CONTENTS

	<u>PAGE</u>
SECTION 1 TORQUE LIMIT AND TORQUE SKIP FUNCTION	1
1. OVERVIEW	1
2. OPERATIONS	2
2-1. Torque Limit Command	2
2-2. Torque Skip Cancel Command	2
2-3. Torque Skip Command	3
3. PARAMETER SETTING	4
3-1. Torque Monitoring Delay Time	4
3-2. Upper Limit for the P Command Value	4
4. ALARMS	5
5. PROGRAM EXAMPLE	6
SECTION 2 POST-PROCESS GAUGING DATA COMMUNICATION BY RS232C	7
1. OVERVIEW	7
2. DATA CONFIGURATION	7
2-1. Number Designation Area	7
2-2. Gauging Data Area	9
2-3. Data Transmission Format	10
3. COMMUNICATION SPECIFICATIONS	11
3-1. Communication Format	11
3-2. RS232C Interface	11
3-3. Communication Procedure	12
3-4. Alarm Processing	12
4. PROGRAMMING	13
5. DATA SETTING AND DATA DISPLAY	15
5-1. Data Setting	15
5-2. Data Display	17
6. PARAMETER SETTING	18
7. ALARM TABLE	20
8. SUBPROGRAM FILE MSB FOR POST-PROCESS GAUGING WITH RS232C	21
8-1. Gauging Subprogram	21
8-2. Common Variables	21

	<u>PAGE</u>
8-3. System Variables	21
8-4. Gauging Subprogram Flow Chart	22
8-5. Gauging Subprogram List	25
SECTION 3 SIZE CATCHER	26
1. OVERVIEW	26
2. CONNECTION	27
3. OPERATIONS	30
3-1. Initial Setting	30
3-1-1. Communication Parameter Setting	30
3-1-2. Offset Data Setting	31
3-2. Gauging Method	32
3-3. Confirming Measured Data	33
3-4. Cautions	34
4. ALARM LIST	35
5. COMMUNICATION SPECIFICATION	37
SECTION 4 POST-PROCESS GAUGING-CEJ MATIC	39
1. OVERVIEW	39
2. COMPENSATION	39
3. SETTING AND DISPLAY OF THE AUTOMATIC COMPENSATION DATA OF THE CEJ MATIC GAUGED DATA	40
4. PROGRAMMING	42
5. DATA INPUT/OUTPUT	45
6. ALARMS	49
7. MSB FILE OF CEJ MATIC GAUGING SUBPROGRAM	50
7-1. CEJ MATIC Gauging Subprogram	50
7-2. Common Variables	50
7-3. System Variables	50
7-4. CEJ MATIC Gauging Subprogram Flow Chart	51
7-5. CEJ MATIC Gauging Subprogram List	53
SECTION 5 PROGRAM INPUT/OUTPUT FUNCTIONS BY FLOPPY DISKS (IBM FORMAT) (FOR 8" FLOPPY DISKS)	54
1. OVERVIEW	54
2. OPERATIONS	54

	<u>PAGE</u>
2-1. Directory	55
2-2. Copy	58
2-3. Free (Remaining Floppy Disk Capacity)	63
2-4. Initializing	65
2-5. Deletion	69
2-6. Rename	71
2-7. Protect	73
3. PRECAUTIONS ON I/O FUNCTIONS USING FLOPPY DISKS	78
3-1. Parameter Setting	78
3-2. Usage of File Name	79
4. CODE TABLES	82
SECTION 6 M-SPINDLE SYNCHRONIZED ROTATION FUNCTION	86
1. OVERVIEW	86
2. FLAT TURNING PRINCIPLE	87
3. COMMANDS	90
3-1. M-spindle Synchronized Rotation ON/OFF M Code	90
3-2. Program Example	91
4. PARAMETERS	91
4-1. M-spindle Synchronized Rotation Zero Point	91
4-2. System Variables	91
4-3. SB Command Acceleration/Deceleration Unit Amount	91
5. DISPLAY	92
6. ALARM	93
6-1. Alarm-B	93
6-2. Alarm-A	93
7. CAUTIONS	94
SECTION 7 TOUCH SETTER M/A	95
1. OVERVIEW	95
2. TOUCH SETTER ARM	96
2-1. Touch Setter M Specification	96
2-2. Touch Setter A Specification	97
3. MANUAL TOUCH SETTER GAUGING CYCLE	98
3-1. Starting Manual Touch Setter Gauging Cycle	98
3-2. Execution of Touch Setter Gauging Cycle	99

	<u>PAGE</u>
3-3. Supplement	99
4. AUTOMATIC SETTING OF DATA	100
4-1. Automatic Setting of Sensor Position	100
4-2. Offset of the Sensor Position	100
4-3. Gauging Turret Position Error Offset Data	101
4-4. Setting Tool Offset	102
5. TOUCH SETTER GAUGING CYCLE IN AUTOMATIC MODE OPERATION	103
5-1. Gauging Cycle ON Conditions	103
5-2. Gauging Cycle Subprogram	103
5-3. Precautions	103
6. PARAMETER SETTING	104
7. TOUCH SETTER FOR OPPOSING TWO-TURRET MODELS (MIRROR IMAGE FUNCTION)	105
8. ALARM	106
SECTION 8 TOUCH SETTER IA	110
1. OVERVIEW	110
2. CONSTRUCTION	110
3. OPERATIONS	111
3-1. Touch Setter Arm Advance/Retract	111
3-2. Manual Gauging Cycle with Touch Setter	112
3-3. Touch Setter Gauging Cycle In Automatic Mode Operation	114
3-4. Indexing B Turret Tool into Gauging Position	115
3-5. Others	116
4. ALARM	117
SECTION 9 ARC THREAD CUTTING	118
1. OVERVIEW	118
2. PROGRAM COMMANDS	119
2-1. Defining Thread Cutting Arc by Designating Arc Center	119
2-2. Defining Thread Cutting Arc by Designating Arc Radius	123
3. PROGRAM EXAMPLE	124
4. CAUTION	124

	<u>PAGE</u>
SECTION 10 WORK COUNTER	125
1. OVERVIEW	125
2. COUNTER APPEARANCE AND ITS LOCATION ON OPERATION PANEL	125
3. FUNCTIONS	126
4. PROGRAM EXAMPLE	127
5. CAUTIONS	129
6. HOW TO PRESET	129
SECTION 11 PICK-OFF ATTACHMENT	130
1. OVERVIEW	130
2. TO PROGRAM AND OPERATE THE PICK-OFF SPINDLE TAKING THE PICK-OFF SPINDLE AS THE M-SPINDLE	131
2-1. Coordinate System	131
2-2. Pick-off Spindle Rotation	131
2-3. Automatic Open/Close of Pick-off Attachment	131
2-4. Pick-off Spindle Rotation Interlock	132
2-5. Pick-off Spindle Rotation Interlock Ignore Function	132
2-6. Parameter Setting	132
2-7. Alarm	132
3. TO PROGRAM AND OPERATE THE PICK-OFF SPINDLE TAKING THE PICK-OFF SPINDLE AS AN INDEPENDENT SPINDLE, USING THE PICK-OFF SPINDLE COORDINATE SYSTEM (G13/G14 AND G142)	133
3-1. Coordinate System	133
3-2. Mirror Image for the Z-axis of the Pick-off Spindle	134
3-3. Commands	135
3-4. MDI Operations	136
3-5. Manual Operations	136
3-6. Programming	137
3-7. Zero Offset and Zero Shift for the X- and Z-axis in the Pick-off Spindle Mode	138
3-8. User Parameter (for X- and Z-axis in the pick-off spindle mode)	139
3-9. Other Parameters	140
SECTION 12 TOOL RETRACTION CYCLE	144
1. OVERVIEW	144
2. INTERRUPTION REQUEST SIGNAL	145
2-1. Internal Signal Generation	145

	<u>PAGE</u>
2-2. External Signals	145
3. PROGRAM	146
3-1. Main Program	146
3-2. Subprograms	146
3-3. Program Example	147
4. OPERATION DESCRIPTION	149
5. OTHERS	150
6. ALARM MESSAGES	152
SECTION 13 HOUR METER	153
1. OVERVIEW	153
2. APPEARANCE OF THE HOUR METER AND ITS INSTALLATION LOCATION	153
3. FUNCTION DESCRIPTION	154
SECTION 14 HOME POSITION FUNCTION	155
1. OVERVIEW	155
2. PARAMETERS	155
2-1. Home Position Setting Screen Display Method	155
2-2. Home Position Setting Screen	155
2-3. Home Position Data	156
3. COMMANDS	157
4. REMARK	157
5. ALARM	157
SECTION 15 REMOTE MONITORING SYSTEM/COMMUNICATIONS UNIT	158
1. OVERVIEW	158
2. CONSULTING OKUMA REPRESENTATIVE	158
3. REMOTE MONITORING OPERATION	159
3-1. Starting the System	159
3-2. Messages for Starting the System	160
3-2-1. Confirmation Messages for Starting the System (Automatic Mode)	160
3-2-2. Messages for Switching the Line (Manual Mode)	161
3-3. Remote Operation Mode	161
3-4. Messages for Diagnostic Results	162
3-5. Quitting the Remote Monitoring Mode	162

	<u>PAGE</u>
3-6. Re-displaying the Diagnostic Results	162
4. ERROR	163
4-1. Error Messages	163
4-2. Other Error	163