

# **INSTRUCTION MANUAL**

**SINKER EDM**

**EDNC 43**

**MECHANICAL EDITION**


**MAKINO MILLING MACHINE CO., LTD.**

## CONTENTS

1. GENERAL .....	1-1
1.1 Name and Function of Each Unit .....	1-1
1.1.1 Name of each unit .....	1-1
1.1.2 Function of each unit .....	1-2
2. SPECIFICATIONS .....	2-1
2.1 Machine Main Unit .....	2-1
2.2 Automatic Fire Extinguisher .....	2-1
2.3 Dielectric Fluid Supply Unit .....	2-2
2.3.1 Dielectric fluid supply unit .....	2-2
2.3.2 Dielectric fluid cooling unit (optional) .....	2-2
2.4 Dimensional Drawings .....	2-3
2.4.1 External dimensions .....	2-3
2.4.2 Table and work tank .....	2-7
2.4.3 Electrode attachment plate .....	2-9
2.4.4 Universal holder .....	2-10
2.4.5 Flushing and suction flange (optional) .....	2-11
3. ACCESSORIES .....	3-1
3.1 Standard Accessories .....	3-1
3.2 Optional Accessories .....	3-4
4. MACHINE INSTALLATION .....	4-1
4.1 Installation Place Requirements .....	4-1
4.2 Layout .....	4-2
4.3 Air Pressure Source Requirements .....	4-5
4.4 Power Supply Facility .....	4-5
5. PREPARATION BEFORE OPERATION .....	5-1
5.1 Wiping off Rust-Preventive Oil .....	5-1
5.2 Unclamping .....	5-1
5.3 Setting Air Pressure .....	5-2
5.3.1 Without air booster .....	5-2
5.3.2 With air booster .....	5-2
5.3.3 Supplying dielectric fluid .....	5-3

CONTENTS	
<b>6. OPERATION .....</b>	<b>6-1</b>
<b>6.1 Precaution to Prevent Fire .....</b>	<b>6-1</b>
<b>6.1.1 Kind of dielectric fluid and fluid level .....</b>	<b>6-1</b>
<b>6.1.2 Safety devices .....</b>	<b>6-1</b>
<b>6.1.3 Working environment .....</b>	<b>6-1</b>
<b>6.2 Safety Precautions .....</b>	<b>6-2</b>
<b>6.3 Operation of Major Components .....</b>	<b>6-3</b>
<b>6.3.1 Portable operation panel .....</b>	<b>6-3</b>
<b>6.4 Dielectric Fluid Control Unit .....</b>	<b>6-7</b>
<b>6.5 Dielectric Fluid Supply Unit .....</b>	<b>6-9</b>
<b>6.5.1 EDNC 43 (standard) .....</b>	<b>6-9</b>
<b>6.5.2 EDNC 43 (large capacity dielectric fluid supply unit) .....</b>	<b>6-12</b>
<b>6.6 Automatic Fire Extinguisher .....</b>	<b>6-15</b>
<b>7. MACHINING .....</b>	<b>7-1</b>
<b>7.1 Precautions on Machining .....</b>	<b>7-1</b>
<b>7.1.1 Inhibition of blow machining .....</b>	<b>7-1</b>
<b>7.1.2 Machining near fluid level .....</b>	<b>7-1</b>
<b>7.1.3 Supervising during automatic operation .....</b>	<b>7-1</b>
<b>7.1.4 Fire accident cases by electric discharge machines .....</b>	<b>7-1</b>
<b>7.2 Preparation of Machining .....</b>	<b>7-1</b>
<b>7.2.1 Installation of electrode .....</b>	<b>7-1</b>
<b>7.2.2 Installation of workpiece .....</b>	<b>7-1</b>
<b>8. INSPECTION .....</b>	<b>8-1</b>
<b>8.1 Inspection before Operation .....</b>	<b>8-1</b>
<b>8.2 6-Month Inspection .....</b>	<b>8-3</b>
<b>8.2.1 Dielectric fluid temperature sensor .....</b>	<b>8-3</b>
<b>8.2.2 Automatic fire extinguisher .....</b>	<b>8-3</b>
<b>8.2.3 Inspection of machine leveling .....</b>	<b>8-5</b>
<b>8.2.4 Machining start point retract function .....</b>	<b>8-5</b>
<b>8.2.5 Dielectric level low monitoring stop function .....</b>	<b>8-6</b>
<b>8.3 Yearly Inspection .....</b>	<b>8-6</b>
<b>8.3.1 Automatic fire extinguisher .....</b>	<b>8-6</b>
<b>8.3.2 Dielectric fluid supply unit .....</b>	<b>8-6</b>

<b>9. MAINTENANCE .....</b>	<b>9-1</b>
<b>  9.1 Dielectric Fluid Control Unit .....</b>	<b>9-1</b>
<b>    9.1.1 Filter replacement .....</b>	<b>9-1</b>
<b>  9.2 Dielectric Fluid Control Unit.....</b>	<b>9-2</b>
<b>    9.2.1 Cleaning aspirator .....</b>	<b>9-2</b>
<b>  9.3 Automatic Fire Extinguisher.....</b>	<b>9-3</b>
<b>    9.3.1 Container replacement .....</b>	<b>9-3</b>
<b>10 Name and Function of Each Unit.....</b>	<b>10-1</b>
<b>  10.1 Name of each unit.....</b>	<b>10-1</b>

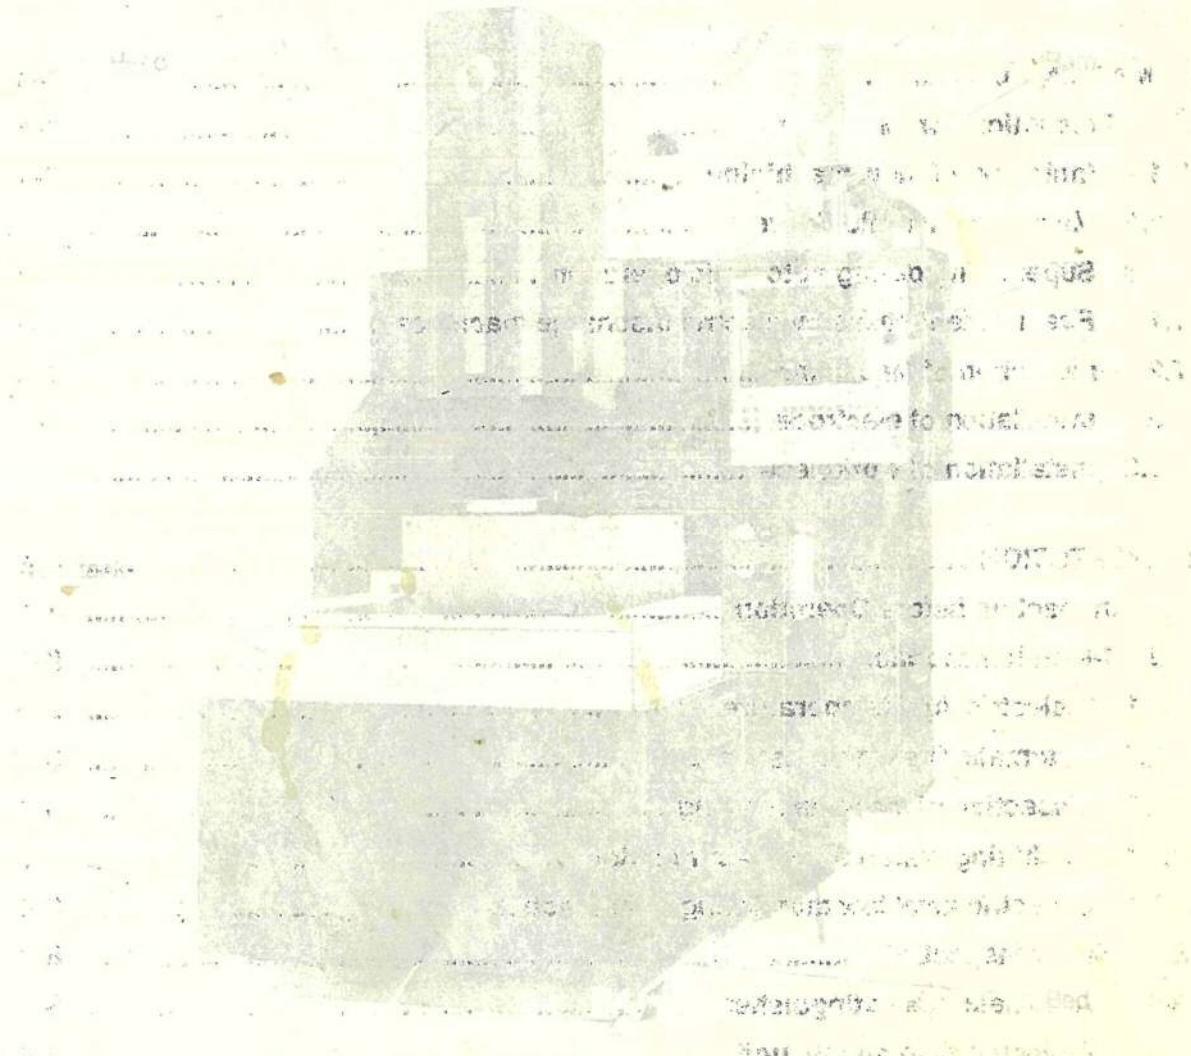

Fig/1.1 Name of Each Unit