

PARAMETER LIST

for

MAZATROL T PLUS

Manual No. : H732SA0015E

Serial No. :

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical/Service Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical/Service Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical/Service Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical/Service Center with the manual No. or the machine name, serial No. and manual name.

Issued by *Manual Publication Section, Yamazaki Mazak Corporation, Japan*

CONTENTS

	Page
1. PREFACE	1
2. PARAMETER LIST	3
2-1 USER PARAMETER	3
2-2 MACHINE PARAMETER	31
3. PARAMETER	44
USER PARAMETER No. 1	
P1 ~ P32	46 ~ 74
U1 ~ U64	75 ~ 95
USER PARAMETER No. 2	
U65 ~ U96	96 ~ 102
K1 ~ K48	103 ~ 115
D1 ~ D16	116
USER PARAMETER No. 3	
E1 ~ E64	117 ~ 124
USER PARAMETER No. 4	
J1 ~ J32	125 ~ 127
L1 ~ L72	128 ~ 131
USER PARAMETER No. 5	
I1 ~ I72	132 ~ 150
USER PARAMETER No. 6	
I73 ~ I168	151
MACHINE PARAMETER No. 1 (No. 5)	
A1 ~ A16	152 ~ 156
MACHINE PARAMETER No. 2 (No. 6)	
A17 ~ A32	157
MACHINE PARAMETER No. 4 (No. 8)	
A49 ~ A64	158
MACHINE PARAMETER No. 9 (No. 12)	
B1 (C1) ~ B80 (C80)	159 ~ 173
MACHINE PARAMETER No. 10 (No. 13)	
B81 (C81) ~ B192 (C192)	174 ~ 178
MACHINE PARAMETER No. 11 (No. 14)	
B193 (C193) ~ B272 (C272)	179 ~ 184

Page
1
2

ALARM LIST

for

MAZATROL T PLUS

Manual No. : H732SA0024E

Serial No. :

Before using this machine and equipment, fully understand the contents of this manual to ensure proper operation. Should any questions arise, please ask the nearest Technical/Service Center.

IMPORTANT NOTICE

1. Be sure to observe the safety precautions described in this manual and the contents of the safety plates on the machine and equipment. Failure may cause serious personal injury or material damage. Please replace any missing safety plates as soon as possible.
2. No modifications are to be performed that will affect operation safety. If such modifications are required, please contact the nearest Technical/Service Center.
3. For the purpose of explaining the operation of the machine and equipment, some illustrations may not include safety features such as covers, doors, etc. Before operation, make sure all such items are in place.
4. This manual was considered complete and accurate at the time of publication, however, due to our desire to constantly improve the quality and specification of all our products, it is subject to change or modification. If you have any questions, please contact the nearest Technical/Service Center.
5. Always keep this manual near the machinery for immediate use.
6. If a new manual is required, please order from the nearest Technical/Service Center with the manual No. or the machine name, serial No. and manual name.

Issued by *Manual Publication Section, Yamazaki Mazak Corporation, Japan*

CONTENTS

NOTES

	Page
Preface	1
Explanation of the Alarm	2
Structure of the Alarm List	2
Alarm No. 001-013 (System Error)	4
Alarm No. 014-033 (Drive Error)	5
Alarm No. 120-199 (CNC Machine Control Error)	17
Alarm No. 200-349 (Machine PLC Error)	25
Alarm No. 400-499 (Display Operation Error)	50
Alarm No. 500-599 (I/O Error)	65
Alarm No. 600-699 (MAZATROL Program Error)	84
Alarm No. 700-799 (EIA/ISO Program Error)	97
Alarm No. 800-899 (MAZATROL Program Error)	113
Alarm No. 900-999 (EIA/ISO Program Error)	127

H732SA0024E