

QUICK VISION SYSTEM

User's Guide

Mitutoyo

Mitutoyo Corporation & Micro Encoder Inc.



QVPAK

3D CNC Vision Measuring Machine

**Installation Guide
Version 6**

Contents

1. Outline	1
2. New Installation of QVPak.....	2
2-1 Confirmation before installation.....	2
2-1-1 Confirmation method of graphics chip on mother board.....	3
2-2 Necessary disks.....	4
2-3 Confirmation of version on configuration disk.....	5
2-4 New Installation of QVPak.....	6
2-4-1 Installation of QVPak and related software.....	6
2-4-2 Additional module installation after new installation.....	10
2-4-3 Resource confirmation of motion control.....	11
3. QVPak upgrading.....	13
3-1 Necessary environment for QVPak.....	13
3-2 How to upgrade QVPak (QVPak Ver.4 or newer to newest QVPak).....	14
3-2-1 Needed disk.....	14
3-2-2 Installation of newest QVPak and related software.....	15
3-2-3 Creation of configuration disk.....	17
3-2-4 Recompiling part program.....	18
3-3 How to upgrade QVPak (from QVPak Ver.3 or older -> newest QVPak).....	19
3-3-1 Necessary disks.....	19
3-3-2 How to upgrade QVPak.....	21
3-3-3 Parameter to be confirmed after upgrading.....	23
4. Uninstallation of QVPak	24
5. Troubleshooting	27
5-1 Trouble of Windows startup.....	27
Trouble.....	27
Possible cause.....	27
Countermeasure.....	28
5-2 Trouble of QVPak installation.....	29
Trouble.....	29
Possible cause.....	29
Countermeasure.....	29
Possible cause.....	29
Countermeasure.....	29
5-3 Trouble of motion control.....	29
Trouble.....	30
Possible cause.....	30
Countermeasure.....	30

5-4 Trouble of image display	31
Trouble.....	32
Possible cause.....	32
Countermeasure	33
5-4-1 Deletion of application	33
5-4-2 Explorer folder option setting	34
5-4-3 Deletion of MIL driver	35
5-5 Trouble when using QVPak in the environment connected to the network.....	40
Trouble.....	40
Using environment.....	40
Countermeasure	40
6. Appendix.....	43
6-1 Notice for installation of another devices	43
6-2 Individual installation of QVPak related software.....	43
6-3 Setting of power options	46

QVPAK

**3D CNC Vision
Measuring Machine**

Version 6

Disclaimer

Mitutoyo Corporation and Micro Encoder Inc. make no representations or warranties with respect to the contents or use of this manual, and specifically disclaim any express or implied warranties of merchantability or fitness for any particular purpose. Further, Mitutoyo Corporation and Micro Encoder Inc. reserve the right to revise this manual and to make changes to its content at any time, without obligation to notify any person or entity of such revisions or changes.

Trademarks

QUICK VISION and QVPAK are registered trademarks and QVIndex is a trademark of Mitutoyo Corporation.

QVBasic is a registered trademark of Micro Encoder Inc.

Microsoft and MS-DOS are registered trademarks of Microsoft Corporation.

Windows is a registered trademark of Microsoft Corporation.

Copyright

Copyright © 2000–2002 Mitutoyo Corporation and Micro Encoder Inc.
All rights reserved.

2 nd Edition	March 2002	QVPAK 6.1
1 st Edition	July 2001	QVPAK 6.0

QVPAK Version 6 User's Guide

Contents

Chapter 1 • Introduction to QUICK VISION

Introduction	10
QUICK VISION system description	10
QVPAK Software	16
The user interface	16
System and interface control	17
The coordinate system	17
Video image measurement tools	17
Measurement	18
Nominals and tolerances	18
Reporting	19
QVBasic part programming language	19

Chapter 2 • Getting Started

Types of Features	22
Creating a Part Coordinate System	24
Align the xy-plane	24
Align the origin	26
Align the axis	28
Evaluate the feature by using multiple PCS	30
Establish a PCS with a flexible start point	30
Edge Detection Tools	34
Types of tools	34
Coordinate Systems	36
Preparing to Measure	38
Set options	38
Turn on the lights	40
Position the part	42
Set magnification	44
Fine-tune the lights	46
Measuring Features	48
Selecting measurement mode	48
Collecting data points	50
Fitting features	52
Reporting results	52
Setting nominals and tolerances	54
Part Programming	56
Operating modes	56

4 • Contents

Creating and running a part program	57
QVPAK Dos and Don'ts	62
Do	62
Don't	62

Chapter 3 • Illuminating the Part

Illuminating the Part	64
The light system	64
The programmable ring light	68
Using lighting tools for edge detection	74
Magnifying Parts	76
The Power Zoom	76
The Power Turret	78
Freezing and Restoring the Video Image	80

Chapter 4 • Moving the Part

Moving the Part by Using the Stage	82
The Stage Toolbar	84
Set Home	84
Go Home	84
Rezero	85
Go To	85
Move To	86
Auto Focus	86
Moving the Stage toolbar	87

Chapter 5 • Focusing on a Part

Focusing Manually	90
Focusing with Auto Focus Tools	92
When to use Auto Focus Tools	94
Focusing During Measurement	96
Running an Auto Focus Tool automatically	96
Drawing an Auto Focus Tool	97
Focusing with Predefined Auto Focus Tools	98
Accessing predefined Auto Focus Tools	98
Editing predefined tools	100
Editing numerical parameters	102
Editing tools graphically	104
Projecting Camera Points	106

Chapter 6 • Measuring

Measuring Features	108
---------------------------------	------------

Measured features	108
Constructed features	109
Methods for creating features	109
Measuring Features by Collecting Data Points	110
Using edge detection tools	110
Using special-purpose image tools	112
Using existing point buffers	112
Using existing features	114
Using keyed-in data points	114
Saving the point buffer	116
Exporting the point buffer	118
Removing data point entries	120
Constructing Features	122
Constructing intersections, midpoints, and midlines	122
Measuring distances and angles	124
Keying in feature elements	126
Measuring Features by Using a Datum Fit	128
Setting Nominals	130
Setting Tolerances	132
Types of tolerances	132
Rules for tolerance labels	133
Creating and editing a tolerance database	134
Creating and editing tolerances during a measurement	136
Circle bonus tolerances	138

Chapter 7 • Using Edge Detection Tools

Edge Detection Tools	142
Using more than one edge detection tool	142
Types of tools	142
Drawing Tools	144
Using automatic edge detection tools	144
Manually drawing edge detection tools	146
Drawing different types of tools	147
Editing Tools	148
Editing tools graphically	148
Editing numerical parameters	150
Teaching Tools	152
Teaching multiple tools	152
Editing a taught tool	154
When a tool fails to learn	154
Running Tools	156
Running multiple tools	156
When a tool fails to run	157
Undoing edge detection tools	157
Improving Edge Detection with Filters	158

Chapter 8 • Aligning the Coordinate System

Coordinate Systems	164
The MCS	164
The PCS	164
The VCS	165
The current coordinate system	166
Rezeroing the Stages and the MCS	168
Rezeroing when you start QVPAK	168
Rezeroing from the Stage toolbar	168
Aligning the Part Coordinate System	170
Aligning a PCS by using previously defined part features	170
Aligning the xy-, yz-, or zx-plane	170
Aligning the PCS origin	172
Translating the origin	172
Establishing the PCS origin while aligning the xy-, yz-, or zx-plane	172
Aligning the x-, y-, or z-axis	174
Aligning the x-, y-, or z-axis to a feature or an offset	178
Aligning the axes by using coordinates	180
Aligning the PCS to a pattern	182
Aligning a PCS by entering translation or rotation values	184
Saving and recalling a PCS	186
Rules for PCS labels	188
Restoring the MCS	188
Exporting and importing a PCS	189

Chapter 9 • Reporting

Reporting Feature Characteristics	192
Reviewing Features	194
Setting Up Measurement Reports	196
What to report	196
How the report will look	198
Directing the measurement report output	200
Setting Up Statistical Reports	202
Formatting statistical report data	202
Directing statistical data output	204

Chapter 10 • Setting Options

Setup Options	206
Setting Stage Options	208
Setting Coordinate Modes	212
Coordinate modes in QVPAK	212
Typing Angular Data	214

Chapter 11 • Using Advanced Tools

Using the AutoTrace Tool	218
Running the AutoTrace Tool	218
Stopping an AutoTrace Tool	220
Editing an AutoTrace Tool	221
Using Edge Detection Tools on Large Features	224
Using the point buffer with large features	226
Using Special-Purpose Tools	228
The Centroid Tool	228
Using a Centroid Tool	228
Editing a Centroid Tool	230
The Surface Tool	232
The Manual Points Tool	234
Using a Manual Points Tool in a part program	234
The Pattern Search Tool	236
Editing the Pattern Search Tool	238
The Brightness Tool	240
Using a Brightness Tool	240
The Dual Area Contrast Tool	242
Using the Dual Area Contrast Tool	242
The Extended Depth of Field Tool	244
Using the Extended Depth of Field Tool	244

Appendix A • Using QVIndex

Using QVIndex	248
Rotating the part with QVIndex	250
Learning QVIndex commands for a part program	250
Rezeroing QVIndex	251
Rezeroing when you start QVPAK	251
Rezeroing from the QVIndex Control dialog box	251

Appendix B • Laser Probe

Laser Probe	254
Setting Up a Laser Probe	256
Calibrating the Laser Probe	256
Measuring with a Laser Probe	258
Measuring a feature by using Laser Probe tools	258
Adding points to the point buffer	260
Specifying surface detection settings	262
Filters	264
Safety Guidelines	266
Setting the z-axis minimum safety limit	266

Appendix C • Touch Probe

Touch Probe	270
Joystick	270
Setting Up the Touch Probe	272
Configuring and calibrating the stylus tip	274
Configuring a master ball	275
Setting up a change rack	275
Measuring with a Touch Probe	278
Touch Probe user interface	280
Using the Go Measure function	282
Measuring by using the Touch Probe	284
Collecting data points in correct sequence	286
Glossary	289

QVPAK

3D CNC Vision Measuring Machine

**Ver. 5
Addendum**

Contents

1 USING THE TOUCH PROBE.....	1-1
1.1 Overview of the Touch Probe System	1-2
1.1.1 Overview of the Touch Probe tool.....	1-2
1.1.2 Touch Probe tool basics	1-4
1.1.3 The user interface.....	1-5
1.1.3.1 [Measure feature] dialog for Touch Probe	1-6
1.1.3.2 Key In Point Dialog.....	1-7
1.1.3.3 Touch Probe Measurement Settings Tab.....	1-8
1.1.3.4 Go Measure Dialog.....	1-10
1.1.4 Overview of the QV Remote Box	1-12
1.2 Setting up the Touch Probe	1-14
1.2.1 Touch Probe Configuration Dialog	1-14
1.2.1.1 Change Rack Tab	1-15
1.2.1.2 Master Ball Tab	1-16
1.2.1.3 Measurement Tab	1-17
1.2.1.4 Motion Tab	1-18
1.2.1.5 Probe Module Tab	1-24
1.2.1.6 Stylus Tip Tab.....	1-26
1.2.2 Configuring the Touch Probe.....	1-28
1.2.2.1 Adding a touch probe stylus tip.....	1-28
1.2.2.2 Editing stylus tip settings	1-29
1.2.2.3 Deleting a touch probe stylus tip	1-30
1.2.2.4 Setting the approach and search distance of the touch probe	1-31
1.2.3 Advanced Settings	1-32
1.2.3.1 Setting the movement of the touch probe stylus	1-32
1.2.3.2 Setting the travel speed of the touch probe.....	1-33
1.2.3.3 Setting the touch probe acceleration.....	1-34
1.2.3.4 Setting the touch probe deceleration	1-35
1.2.3.5 Setting the distance for Touch Forward and Touch Back.....	1-36
1.2.4 Calibrating the Touch Probe.....	1-37
1.2.4.1 Stylus tip configuration and calibration.....	1-37
1.2.4.2 Identifying the master ball.....	1-38
1.2.4.3 Calibration outline.....	1-39
1.2.4.4 Calibrating the default touch probe stylus tip	1-40
1.2.4.5 Calibrating an arbitrary stylus tip.....	1-42
1.2.4.6 Re-calibration of master ball position.....	1-44
1.2.5 Configuring a change rack	1-45
1.2.5.1 Identifying a change rack	1-45
1.2.5.2 Calibration of change rack.....	1-46

1.2.6 Using star stylus.....	1-48
1.2.6.1 Setting of stylus link using the probe module information	1-49
1.2.6.2 New stylus and stylus tip angle registration.....	1-51
1.2.6.3 Rack information and storage location of stylus new registration.....	1-52
1.2.6.4 Measurement starting position for master ball measurement.....	1-53
1.3 Touch Probe Calibration Part Program	1-54
1.3.1 Location of the calibration part program	1-54
1.3.2 Calibrating the system default stylus tip.....	1-56
1.3.3 Calibrating an arbitrary stylus tip	1-63
1.3.3.1 Automatic calibration of an arbitrary stylus tip	1-64
1.3.3.2 Manual calibration of an arbitrary stylus tip (master ball)	1-68
1.3.3.3 Manual calibration of an arbitrary stylus tip (ring gage)	1-72
1.3.4 Calibrating the master ball.....	1-77
1.3.5 Calibrating a change rack	1-81
1.4 Measuring with the Touch Probe	1-85
1.4.1 Measuring a feature using the touch probe	1-85
1.4.2 Changing Touch Probe Settings	1-87
1.4.3 Measuring a feature using the QV Remote Box	1-88
1.4.4 Measuring an Offset Line	1-89
1.4.4.1 Measure Offset Line Dialog.....	1-90
1.4.5 Measuring an Offset Plane	1-91
1.4.5.1 Measure Offset Plane Dialog.....	1-92
1.4.6 Measuring an Edge Point.....	1-93
1.4.6.1 Measure Edge Point Dialog for Touch Probe.....	1-94
1.4.7 Setting the Coordinate Systems	1-95
1.4.8 Re-calibration of stylus.....	1-96
1.4.9 Warning when measuring three-dimensional feature	1-97
1.4.9.1 Focus error of video measurement.....	1-97
1.4.9.2 Data input order in cylinder and stepped cylinder	1-98
2 EXPANSION OF ORIENTATION TOLERANCE	2-1
2.1 Expansion of orientation tolerance	2-2
2.2 Use of orientation tolerance.....	2-4
2.2.1 Orientation tolerance definition dialog	2-5
2.2.2 Evaluation items for parallelism (PA, PAMax and PAMin)	2-8
3 LASER AUTO FOCUS	3-1
3.1 Cautions for laser beam security.....	3-2
3.2 Caution of use	3-2
3.3 Outline of laser auto focus (option)	3-3

3.4 Use of laser auto focus tool	3-3
3.4.1 Edit laser auto focus tool dialog box.....	3-5
3.5 Laser sight function	3-6
3.6 Calibration of Video focus and laser focus	3-7
4 QVPAK VER.6.1 NEW FUNCTIONS	4-1
4.1 3D AutoTrace Tool.....	4-2
4.2 Touch Probe Functions Enhancements.....	4-4
4.2.1 [Undo] Function / Cancel button of QV Remote Box.....	4-4
4.2.2 Change of setting angle when registering new stylus.....	4-4
4.3 Extended Depth of Field	4-5
4.4 Enhancement of QVBasic program function	4-7
4.4.1 User Information output function	4-7

QVPAK

**3D CNC Vision
Measuring Machine**

***QVBasic* Training Guide
Version 2**

Disclaimer Mitutoyo Corporation and Micro Encoder Inc. make no representations or warranties with respect to the contents or use of this manual, and specifically disclaim any express or implied warranties of merchantability or fitness for any particular purpose. Further, Mitutoyo Corporation and Micro Encoder Inc. reserve the right to revise this manual and to make changes to its content at any time, without obligation to notify any person or entity of such revisions or changes.

Trademarks *QuickVision* and *QVPak* are registered trademarks of Mitutoyo Corporation.

Copyright © Copyright January, 1997 Mitutoyo Corporation and Micro Encoder Inc. All rights reserved.

MEI Part No. #####

Mitutoyo Part No. #####

Contents

Welcome	1-1
What is QVBasic?	1-1
Elements of QVBasic	2-1
Keywords	2-1
Objects	2-1
Methods	2-1
Properties	2-1
Statements	2-2
Functions	2-2
Operators	2-3
Numeric operators	2-3
Comparison operators	2-4
Logical operators	2-4
String operators	2-4
Constants and variables	2-5
Data types	2-7
Numeric data types	2-7
Strings	2-7
Arrays	2-8
Records	2-8
User-defined subroutines and functions	3-1
User-defined subroutines	3-1
User-defined functions	3-2
Using variables in user-defined subroutine or functions	3-2
Variables example—static.qvb	3-4
Variables example—globals.qvb	3-4
Passing values to user-defined subroutines or functions	3-5
Argument data types	3-5
Named arguments	3-5
Calling external subroutines	3-6
Passing by reference compared to passing by value	3-6
Passing by reference	3-7
Passing by value	3-7

Control structures	4-1
If...Then	4-1
Select Case	4-5
Loops	4-9
For...Next	4-10
Do loop	4-13
While...Wend	4-14
The GoTo statement	4-17
Math functions	4-18
Using QVBasic return codes and predefined constants	4-21
Boolean	4-22
Enumerations	4-22
Debugging a part program	5-1
Dealing with errors	5-1
Trapping run-time errors	5-2
Code Structure	5-2
Error-handling routines	5-3
Resuming a program after an error	5-4
In-line error-handling	5-4
Creating repeatable part programs	6-1
Establishing coordinate systems	6-1
Using the video coordinate system	6-1
Using the manual point tool	6-2
Testing for a satisfactory PCS alignment	6-2
Creating and using dialog boxes	7-1
Creating a custom dialog box	7-1
Defining a dialog box	7-1
The Dialog Editor	7-2
Using the Dialog Editor graphic editing tools	7-3
The control palette	7-3
Controls	7-3
Pushbutton	7-4
Boxes: list boxes, drop list boxes, static combo boxes, and combo boxes	7-4
Text boxes and text	7-4
Option buttons and group boxes	7-5
Check boxes	7-5
Pictures	7-5

Layout menu bar and tool bar function descriptions7-5

 The Dialog Editor layout menu and tool bar7-6

 Editing the instructions manually7-6

Declaring and displaying a dialog box8-1

 Declaring a dialog box8-1

 Displaying a dialog box8-1

 Using information returned in a dialog box8-2

 Getting information from a list box8-3

 Getting information from a set of option buttons8-3

Writing a dynamic dialog box function8-4

 Creating a dialog function8-4

 Add a dialog function argument in the `Begin Dialog` statement8-5

 Including identifiers8-8

 Dialog function methods8-9

 Exiting nested procedures with the dialog box8-10

Using OLE automation to talk to other applications9-1

QVSmartEditor

3D CNC Vision Measuring Machine

Version 2

CONTENTS

FOREWORD.....	I
ON MARKED NOTES	I
CONVENTIONS USED IN THIS MANUAL	II
CHAPTER 1 SCREEN OPERATION.....	1-1
Window Configuration	1-3
Tree-view Display for Unsupported Command in QVBasic	1-3
Menu Bar.....	1-4
Speed Bar	1-4
Tree View Speed Bar	1-5
Pop-up Menu.....	1-5
CHAPTER 2 SYSTEM FLOW.....	2-1
Creating a New Part Program	2-3
Calling an Existing Part Program	2-4
CHAPTER 3 FUNCTIONS	3-1
Starting Procedure	3-3
Quitting Procedure	3-3
Creating a New Part Program	3-4
Calling an Existing Part Program	3-4
Saving a Part Program	3-5
Converting a QVBasic Program	3-5
Printing	3-6
Arranging the QVSmartEditor Windows	3-7
Auto-starting the QVSmartEditor.....	3-7
CHAPTER 4 EDITING PART PROGRAMS.....	4-1
Editing Part Programs	4-3
Visual Tool Editing Function.....	4-6
Edge Detection Error Mark.....	4-9
Book Mark Function	4-10

QVGraphics

3D CNC Vision Measuring Machine

Contents

1	QVGraphics Outline	1-1
2	QVGraphics Configuration	2-1
2.1	Starting and ending QVGraphics.....	2-1
2.2	Window configuration	2-2
3	Graphic View Operation.....	3-1
3.1	Changing display direction	3-1
3.2	Dividing Graphic View	3-3
3.3	Magnification mode.....	3-4
3.4	Enlargement and reduction.....	3-5
3.5	Scrolling	3-7
3.6	Query Measurement Result.....	3-10
4	Coordinate System Alignment.....	4-1
4.1	Coordinate system alignment.....	4-1
4.2	Align Plane	4-3
4.3	Align Axis	4-4
4.4	Align Coordinate.....	4-6
4.5	Align Origin	4-7
4.6	Translate Origin.....	4-8
4.7	Rotate PCS.....	4-9
5	Combination Calculation	5-1
5.1	Starting combination calculation.....	5-1
5.2	Angle.....	5-4
5.3	Distance.....	5-5
5.4	Intersection point	5-6
5.5	Intersection line.....	5-8
5.6	Midpoint	5-10
5.7	Midline	5-11
6	Deviation View	6-1
6.1	Starting Deviation View	6-1
6.2	Deviation of line and circle.....	6-3
6.3	Deviation View of plane, cylinder, cone, and sphere.....	6-11
7	QVPak Control	7-1
7.1	Connect and disconnect.....	7-1
7.2	Stage movement.....	7-2
8	Display Editing.....	8-1
8.1	Resize	8-1
8.2	Paste Measurement Result on Feature	8-4

9	Printing and Clipboard	9-1
9.1	Printing.....	9-1
9.2	Print Preview.....	9-2
9.3	Clipboard transfer	9-3
10	Condition Setting	10-1
10.1	Drawing Attributes Configuration	10-1

QVNavigator

3D CNC Vision Measuring Machine

Version 3

Contents

Carefully read the following prior to use	i
Introduction.....	ii
Symbols.....	iii
Terms and conventions.....	iv
1 Basic Operation	1-1
1.1 Starting the QVNavigator	1-1
1.2 QVNavigator window	1-2
1.3 Basic operation	1-4
1.4 Setting up the Coordinate system	1-8
1.5 Running a Part program.....	1-12
2 Icons	2-1
2.1 Measurement icons.....	2-1
2.2 Coordinate system setting icons	2-4
3 Icon Edit.....	3-1
3.1 Starting Icon Editors.....	3-1
3.2 Icon Editor and Macro Editor Windows.....	3-2
3.2.1 Icon Editor	3-2
3.2.2 Macro Editor	3-4
3.3 Editing the display location of icons	3-5
3.4 Import and export of icon.....	3-9
3.5 Creating Macro	3-12

QVColorViewer

**3D CNC Vision
Measuring Machine**

Table of Contents

CONVENTIONS USED IN THIS MANUAL	i
Types of Notes.....	i
1 QVColorViewer Installation	1-1
1.1 Operating Requirements	1-1
1.2 Installation Procedure of QVColorViewer	1-2
1.3 Installed Files List	1-3
2 QVColorViewer Function.....	2-1
2.1 About End Points Detection	2-2
2.2 The Example of Application	2-3
3 The Usage of QVColorViewer	3-1
3.1 Starting and Finishing Program.....	3-1
3.2 How to Use “Extended Focus”	3-4
3.3 How to Use “Color Composition” (Monochrome CCD + LED Light only)	3-7
3.4 How to Use “Color Balance”	3-8

QVReport

3D CNC Vision Measuring Machine

Version 3